

1. WITH LOCK INSTALLED AND UNLOCKED, INSERT PIN THROUGH SLOT IN LOCK SIDEPLATE INTO THE BOLT OPENING PROVIDED.
2. WITH LOCK UNLOCKED AND INDICATOR PANEL READING "OPEN" PLACE INDICATOR OVER OPERATING PIN AND MOUNT INDICATOR WITH SCREWS PROVIDED.
3. DIMENSIONS IN PARENTHESES ARE IN MILLIMETERS.
4. MAKE SURE HEADER FACE IS CLEAN AND DRY. PEEL BACKING FROM ADHESIVE SIGN HALVES. STARTING AT CENTER TO MINIMIZE MISALIGNMENT. APPLY TO HEADER.

