

Specification Chart (all transformers listed are 120VAC input):

Model #	Output	Amp	A	B	C	D	E	F	Approx. Ship Wt.
T1656	16VAC/56VA	3.50	2.75"	2.25"	1.87"	1.06"	3.75"	3.12"	1.4 oz.
T16100	16VAC/100VA	6.25	3.06"	2.56"	2.25"	1.31"	4"	3.625"	1.17 lbs.
T24130	24VAC/100VA	4.16	3.06"	2.56"	2.25"	1.31"	4"	3.625"	1.12 lbs.
T2856	28VAC/56VA	2.00	2.75"	2.25"	1.87"	1.06"	3.75"	3.12"	1.8 oz.
T2885	28VAC/100VA	4.16	3.57"	2.56"	2.25"	1.31"	4"	3.625"	1.12 lbs.

Installation Instructions:


1. Mount Transformer in desired location/enclosure.
2. Plug in the AC (120VAC 50 / 60 Hz) to an outlet.

Note: It is important to measure output voltage before connecting devices. This helps avoid potential damage.

3. Connect devices to secondary terminals on the transformer.

WARNING: This installation should be made by qualified service personnel and should conform to all local codes and in accordance with the National Electrical Codes.

Fig. 1

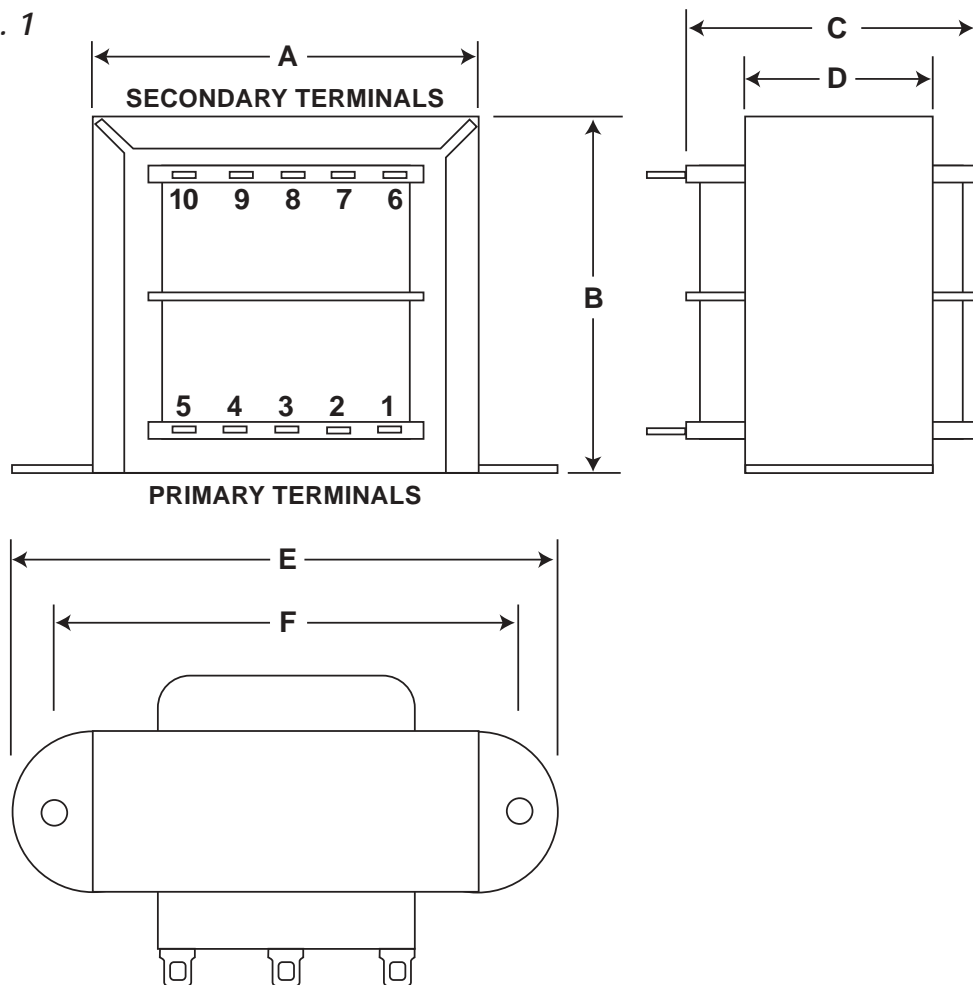

Altronix is not responsible for any typographical errors. Product specifications are subject to change without notice.