Installation Instructions



Grade I Key-In-Lever Cylindrical Lockset CL3300 Series




Attention Installer

Please read these instructions carefully to prevent missing important steps.

Please note: Improper installation may result in damage to the lock and void the factory warranty.

FM 533G 07/07 617416130


IMPORTANT: The accuracy of the door preparation is critical for the proper functioning and security of this lever handle lock. Misalignment can cause premature wear and a lessening of security.

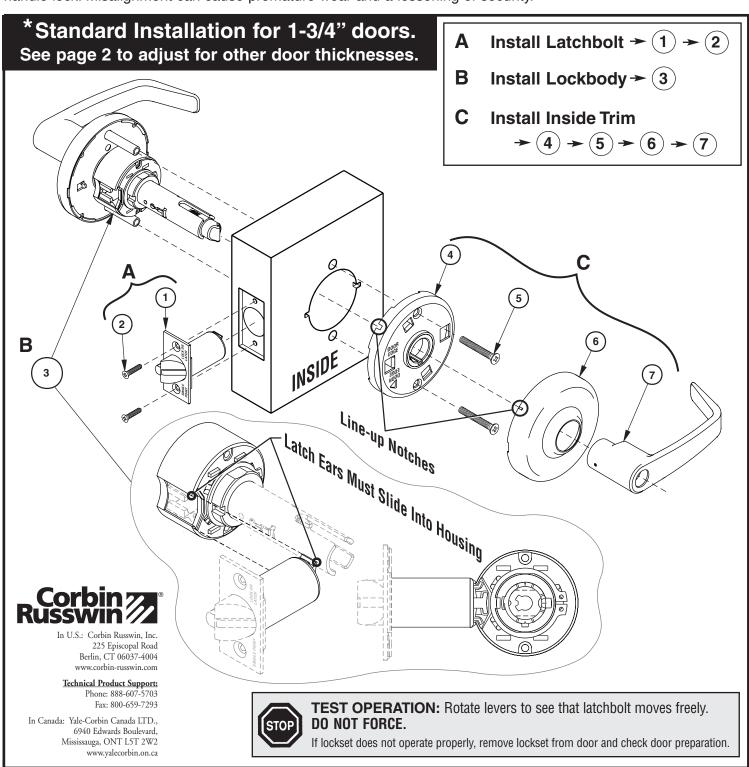

Door & Frame Preparation

Mark door

Locate and mark horizontal center line at desired height above floor. Fold template over edge of door, centering on horizontal line. Mark centers of holes at proper backset. Mark both sides of the door.

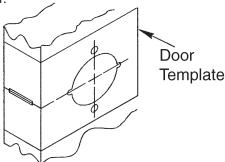


Note:

Be sure to verify backset before marking & drilling door.

Drill door


- A. 2-1/8" (54mm) hole thru door. Cut ANSI tab notches as shown on template (except CL3350 and CL3370).
- B. Drill 1" (25mm) hole in edge of door. Cut out for latch front 5/32" (4mm) deep. 1-1/8" (29mm) wide x 2-1/4" (57mm) high. Check latch unit for proper width front and square or round corners (except CL3350 and CL3370).
- C. Drill two (2) 11/32" (8mm) Dia. holes through door for all functions.

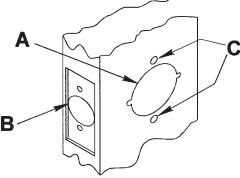

Caution:

To avoid splintering wood doors, drill holes from both sides.

Install Strike

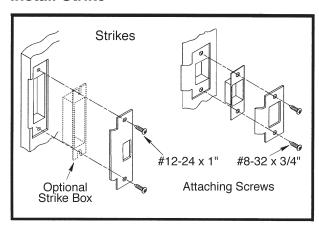


Adjust Lock for Door Thickness

Adjust lock to door thickness if other than 1-3/4" (44mm) doors*. (Lock pre-set from factory for 1-3/4" door).

- A. Remove outside lever (see page 4)
- B. Slide off outside cassette assembly.
- C. Rotate rose liner to adjust lock to fit door thickness, so that the distance (Dim. "A") from the inside of the liner to the centerline of the retractor is one half of the thickness of the door (see chart).
- D. Re-assemble outside cassette assembly onto chassis assembly (except CL3380 and CL3381 functions).


*Note: For doors more than 2", verify lock package is labeled with "D214" option.

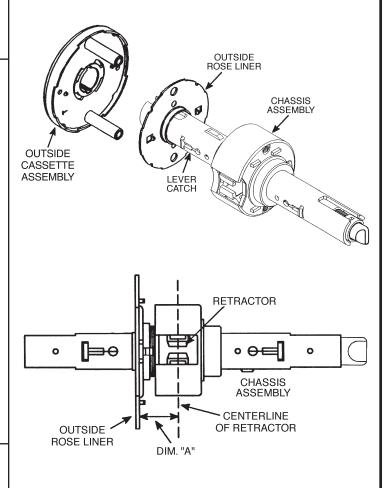


Door Thickness*	"A"	
1-3/4"	7/8"	
2"	1"	
2-1/4"	1-1/8"	

Cylinder Installation

To Install Interchangeable Core (With lever already installed on lock)

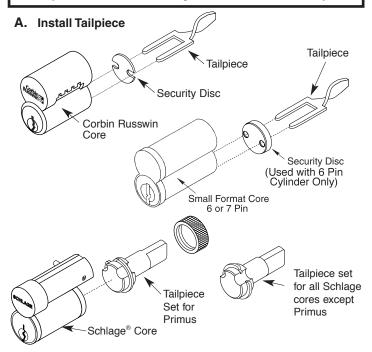

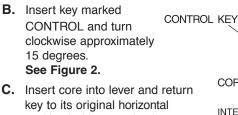

D. Withdraw kev. Test lockset for correct function with operating key.

See Figure 3.

E. Control key has no further use in lockset installation and must be safeguarded for return to Security personnel when installation is complete.

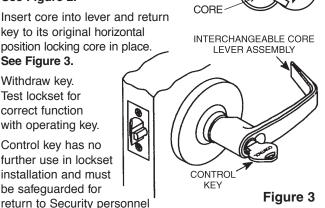



Figure 2

CL3355 Classroom Function Timing Before installing cylinder:

• Turn Cam so points are up and down, 6 o'clock and 12 o'clock (See Below) Cam **Lever Catch**


After installing cylinder, test operation:

· Key should rotate 180° both ways

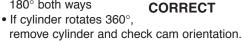

To Remove Interchangeable Core


- A. Insert key marked CONTROL and turn clockwise approximately 15 degrees. See Figure 4.
- Pull core and tailpiece completely out of lever.

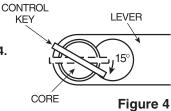


Install Standard Cylinder

Make sure lock is unlocked.

- **A.** Make sure cylinder tailpiece is aligned in same direction as cylinder bible. Slide cylinder all the way into lever.
 - For 6-pin cylinder: Fold retainer at hinge and press fit retainer halves together as shown.
 - For 7-pin cylinder: Break retainer at hinge and discard spacer section. Also remove black cylinder spacer from inside of chassis rollback for clearance.

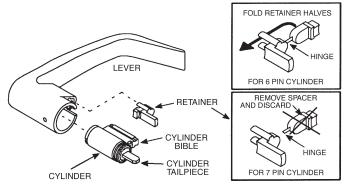


Standard Cylinder Tailpieces

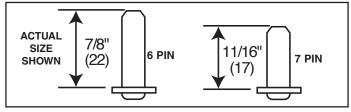

Dimensions are given in inches (mm).

Corbin Russwin conversion kit for Schlage® cylinders with CL3300 lockset.

1. Remove threaded collar and Schlage® tailpiece.

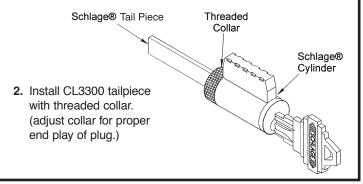

WRONG

Lever Removal and Installation

LEVER STILE	REMOVAL	INSTALL	
Push / Turn Button RELEASE HOLE ASSEMBLY BUTTON	Hold in button, push release tool into release hole, remove lever	Push button in, slide lever on. Make sure lever will not pull off	
Plain Lever RELEASE HOLE RELEASE TOOL	Push release tool into release hole, remove lever	Slide lever over lever catch pull on lever. Make sure lever will not pull off	
Cylinder Lever RELEASE HOLE RELEASE TOOL RELEASE KEY	Rotate key 45° clockwise (from shed position), Push in release tool into release hole, remove lever	Insert key and rotate 45° (from shed position), slide lever on. Make sure lever will not pull off	
Interchangeable Core Lever LEVER CATCH (Move in direction of arrow) LEVER	Remove cylinder and tailpiece, (see page 3) Use flat blade screwdriver to pull back lever catch, remove lever	Slide lever over lever catch Make sure lever will not pull off	
Optional Installations			

