

SCHLAGE

L-Series

Service manual



Contents

5	Introduction	73	LV9080EL
6	Dot charts	74	L9080EU, L9080EU-RX
6	Changes and additions	75	LV9080EU
7	Lock assembly drawing index	76	L9082
19	Trim assemblies	77	LV9082
20	Single dummy trim	78	L9082EL
21	Double dummy trim	79	L9082EU
22	L400-Series deadbolt trim	80	L9110 x XL11-741
23	Passage latch trim	81	L9175
24	Exit trim	82	L9176
25	Emergency button x turn trim	83	L9440, L9444
26	Privacy x turns both sides trim	84	LV9440, LV9444
27	Coin turn outside x turn trim	85	L9453
28	Cylinder x turn trim	86	LV9453
29	Double cylinder trim	87	L9456, L9457, L9496
30	Cylinder outside trim	88	LV9456, LV9457, LV9496
31	Electrically locked/unlocked both sides trim	89	L9458
32	Active double dummy trim	90	LV9458
33	Single dummy with case trim	91	L9460, L9462, L9463, L9464
34	Double dummy with case trim	92	L9460 x XL11-635
35	Deadbolt trim	93	L9460 x XL11-886, L9462 x XL11-886, L9464 x XL11-886
36	Deadbolt with fixed double dummy trim	94	L9465, L9466, L9473
37	Fixed outside x turn trim	95	L9480, L9485, L9486, L9486 x L583-375
38	Institution deadbolt trim	96	LV9480, LV9485, LV9486, LV9486 x L583-375
39	Prison lock trim	97	L9482 x XL11-543
40	Hotel with indicator trim	98	LV9482 x XL11-543
41	L9000 Trim assemblies chart	99	L9485 x XL11-557
53	L400 Trim assemblies chart	100	Lock case assembly compatibility
54	Lock case assemblies	101	Assembly of lock case parts
55	L460, L462, L463, L464, L480, L496	103	Trim options
56	L9010	103	Cast or forged levers, standard lever designs
57	LM9310, LM9325	104	Decorative trim
58	L9040, L9040 x XL11-446, L9044	104	Decorative levers
59	LV9040, LV9040 x XL11-446, LV9044	104	Decorative roses
60	L9050, L9060, L9070, L9071	105	M collection levers
61	LV9050, LV9060, LV9070, LV9071	105	Danmark stainless steel levers
62	LM9350, LM9370, LM9371	106	Wrought knob designs
63	LMV9350, LMV9370, LMV9371	106	Rose trim A or B
64	L9056	107	L escutcheon trim
65	LV9056	108	N escutcheon trim
66	L9076, L9077	109	Additional trim options
67	LV9076, LV9077	111	Trim assembly parts
68	L9080		
69	LV9080		
70	LM9380		
71	LMV9380		
72	L9080EL, L9080EL-RX		

113	Armor fronts
114	Strikes
115	Cylinders
115	How to measure cylinder lengths
115	L-Series, LV-Series cylinder and length requirements
116	Full face cylinders
118	Concealed cylinders
120	Full size interchangeable core cylinders
123	Small format interchangeable core cylinders
125	Blocking and compression rings
126	Special trim options
127	Installation tools and kits
129	Electrically locking
130	Request to exit (RX) feature
130	Latch monitoring
131	Multipoint lock, LM9300 Series
132	Lubrication specifications
133	Door handing
133	Changing the lock hand
133	Changing cylinder turn hand
134	Ordering procedures
135	Finishes
135	Limited warranty

Introduction


This manual contains a complete listing of parts and assemblies for L-Series mortise locks manufactured by Schlage Lock Company. This edition lists components of L-Series locks manufactured after June, 2001. All lock case covers are labeled with the date of manufacture. Example: 8/15/13 = August 15, 2013.

Exploded views of each lock function and trim assembly are provided with accompanying charts to identify parts for replacement purposes. Exploded views of trim are shown with parts for standard size doors. In addition, this manual provides lock trim ordering procedures, cylinder length charts by door range, and all auxiliary components of the L9000/LV9000, LM9300/LMV9300 and L400-Series mortise locks.

Standard features	
Certifications	L/LV9000: ANSI A156.13, 1994, Series 1000, Grade 1 Operational, Grade 1 Security, UL Listed for 3 hour fire door (except L9076 and L9077). With Interchangeable Core Cylinders: Grade 2 Security L400: ANSI A156.5, 2001, Grade 1, UL Listed for 3 hour fire door.
Case size	L/LV9000 and LM9300/LMV9300: 4 ⁷ / ₁₆ " x 6 ¹ / ₁₆ " x 1"; L400: 4 ⁷ / ₁₆ " x 3 ⁵ / ₈ " x 1"
Armor front	L/LV9000 and LM9300/LMV9300: 1 ¹ / ₄ " x 8"; L400: 1 ¹ / ₄ " x 5 ¹⁹ / ₃₂ "
Deadbolt	1" Throw stainless steel
Latchbolt	¾" Throw stainless steel with anti-friction tongue
Strike	L/LV9000: 1 ¹ / ₄ " x 4 ⁷ / ₈ ", Square corner, 1 ³ / ₁₆ " lip, box; L400: 1 ¹ / ₈ " x 3 ⁵ / ₈ ", Square corner, box
Backset	2 ³ / ₄ "
Cylinder	6-Pin solid brass, keyed 6-pin, S123 keyway, keyed different (KD)*
Door range	1 ³ / ₄ " and up
Keys	Two nickel silver cut keys per lock, 6-pin, S123 section*

Items specified in C keyway will be furnished with cylinders keyed 5-pin and with 5-pin keys unless otherwise specified.

NOTE: Locks are furnished with standard features unless otherwise specified.

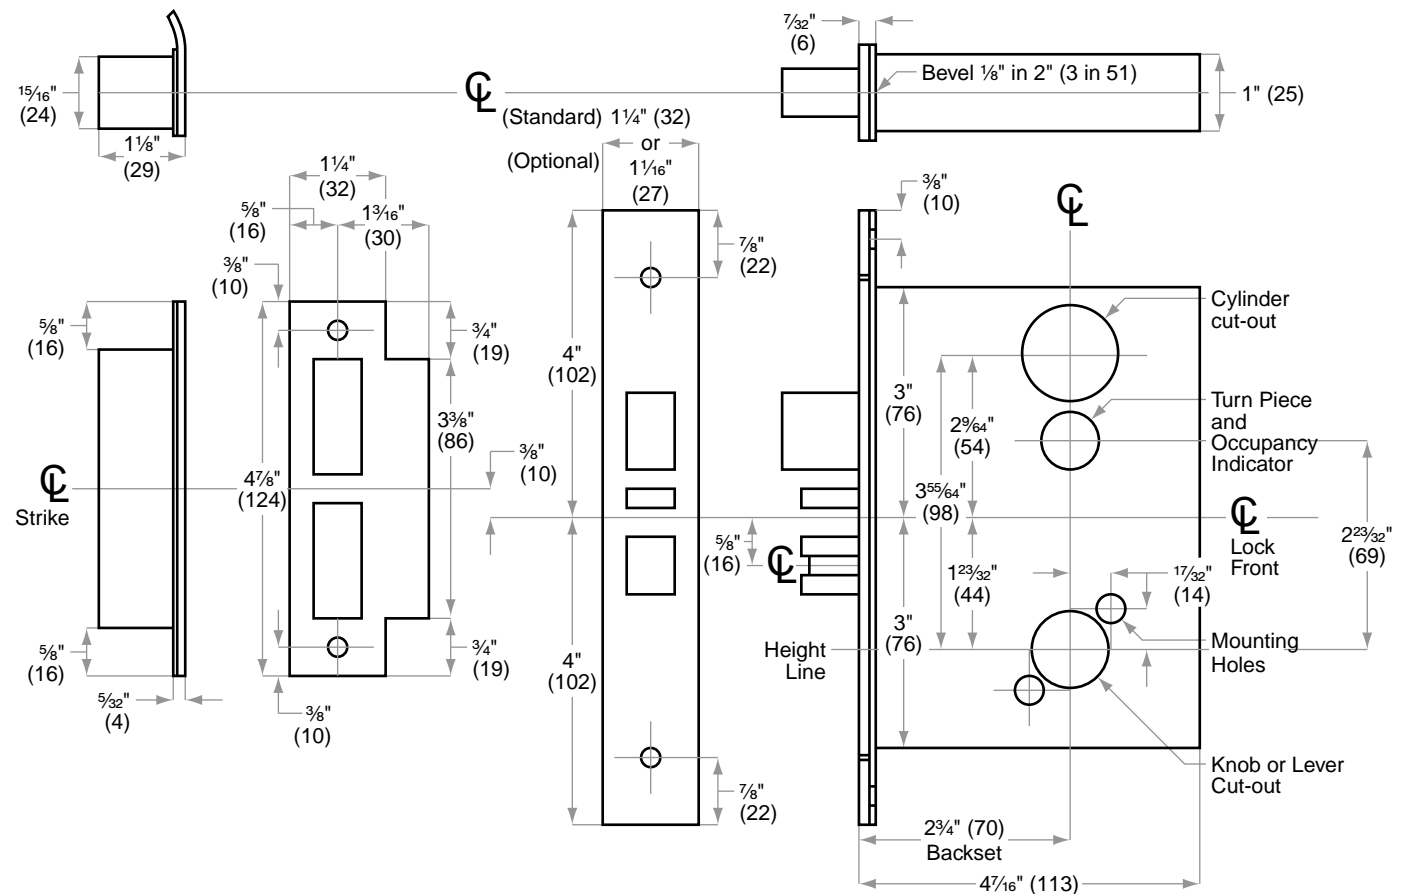

Changes and additions

Dot charts

• = (1) Part 2 = (2) Parts

Example:

P/N	Description	L9110/XL11-741	L9175	L9176	L9177 (disc)	L9178 (disc)	• L9410 (disc)	L9440	LV9440	L9444*	LV9444*	• L9453	• LV9453	• L9456	• LV9456	2 L9457	2 LV9457	2 L9458	2 LV9458	• L9460	• L9460/XL11-635	• L9460/XL11-886	2 L9462	2 L9462/XL11-886	• L9463	• L9464	• L9464/XL11-886	• L9465	2 L9466	• L9473	• L9480	• LV9480	2 L9482/XL11-543	2 LV9482/XL11-543	• L9485	• LV9485	L9485/XL11-557**	LV9485/XL11-557	L9486***%	LV9486***%	• L9496	• LV9496			
30-001	Classic Mortise Cylinder						•					•	•	•	•	2	2	2	2	•	•	•	2	2	•	•	•	•	•	2	•	•	•	2	2	•	•					L9486***%	LV9486***%	•	•

All parts shown in dot charts are standard. Additional options may be available. See current Schlage Commercial Price Book for available options, pricing and ordering procedures.

Changes and additions

Additions

L-Series trim options

The M Collection decorative lever options are now available with L-Series locks.


M Collection decorative levers:

- Are designed to maintain a custom and consistent look on doors throughout any building, and may be used across multiple platforms from Schlage and Von Duprin.
- Includes fifteen lever designs, with ten designs available in January 2014 and five available in April 2014.
- Are available in either forged brass or cast stainless steel, with A or B rose, or L or N escutcheon.

Refer to "M collection levers" on page 105 for more information.

Lock assembly drawing index

The Lock Assembly Drawing Index provides representations and descriptions of available functions. Page numbers for full trim and chassis drawings are referenced.

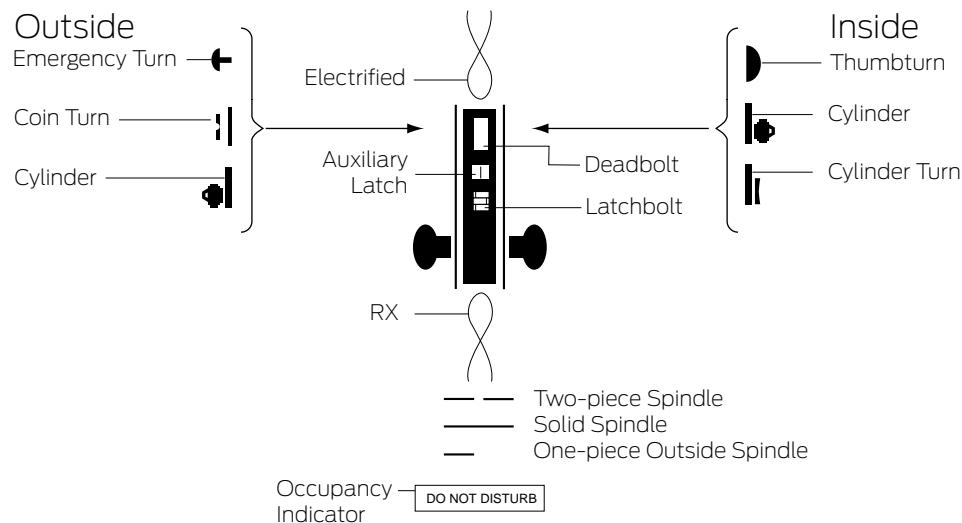










L9000 FUNCTIONS ANSI/BHMA A156.13, 1994, Series 1000, Grade 1 Non-keyed locks			Trim assembly page no.	Lock assembly page no.	Lock case part no.
SCHLAGE	ANSI	Description			
L0170		Single dummy trim Knob/lever on one side is fixed by mounting bar.	20	—	—
L0172		Double dummy trim Knob/lever on both sides is fixed by mounting bar.	21	—	—
L9010	F01	Passage latch ⌘ Latchbolt is always retracted by knob/lever from either side.	23	56	L283-131
L9040	F22	Bath/bedroom privacy lock Latchbolt is retracted by knob/lever from either side unless outside is locked by inside thumbturn. Turning inside knob/lever or closing door unlocks outside knob/lever. To unlock from outside, remove emergency button, insert emergency turn in access hole and rotate.	25	58	L283-132
LV9040		Bath/bedroom privacy lock with Vandlgard® Latchbolt is retracted by knob/lever from either side unless outside is locked by inside thumbturn. Turning inside knob/lever or closing door unlocks outside knob/lever. To unlock from outside, remove emergency button, insert emergency turn in access hole and rotate. Vandlgard function allows exterior lever to rotate freely down while remaining securely locked.	25	59	L283-171+

+ Not sold separately as a part.

⌘ Available with Request to Exit feature.

* Caution: Double cylinder locks on residences—or on any door in any structure which are used for egress—are a life safety hazard in times of emergency, and their use is not recommended. Installation should be in accordance with existing codes only.

Lock assembly drawing index



L9000 FUNCTIONS ANSI/BHMA A156.13, 1994, Series 1000, Grade 1 Non-keyed locks			Trim assembly page no.	Lock assembly page no.	Lock case part no.
SCHLAGE	ANSI	Description			
L9040 x XL11-446		Privacy with turns both sides Latchbolt is retracted by knob/lever from either side unless outside is locked by inside or outside thumbturn. Turning inside knob/lever or closing door unlocks outside knob/lever. Specify per XL11-446.	25	58	L283-132
LV9040 x XL11-446		Privacy with turns both sides with Vandlgard® Latchbolt is retracted by knob/lever from either side unless outside is locked by inside or outside thumbturn. Turning inside knob/lever or closing door unlocks outside knob/lever. Vandlgard function allows exterior lever to rotate freely down while remaining securely locked. Specify per XL11-446.	25	59	L283-171+
L9044		Privacy with coin turn outside Latchbolt is retracted by knob/lever from either side unless outside is locked by inside thumbturn or outside coin turn. Operating inside knob/lever, closing door, rotating inside thumbturn or outside coin turn unlocks outside knob/lever. Available in rose trim only. Specify per L283-056 for Torx® screws. (Previously XL11-868).	27	58	L283-132
LV9044		Privacy with coin turn outside with Vandlgard® Latchbolt is retracted by knob/lever from either side unless outside is locked by inside thumbturn. Operating inside knob/lever, closing door, rotating inside thumbturn or outside coin turn unlocks outside knob/lever. Available with rose trim only. Vandlgard function allows exterior lever to rotate freely down while remaining securely locked. Specify per L283-056 for Torx® screws.	27	59	L283-171+
L9110 x XL11-741		Double dummy with active trim Knob/lever is always active on both sides. Includes lock case and armor front. Specify XL11-741 for use on active door, or specify XL11-743 for use on inactive door (furnished with armor front with cutout to receive deadbolt).	32	—	—
L9175		Single dummy with lock case Inoperable knob/lever on one side. Includes lock case and armor front.	33	81	L283-144
L9176		Double dummy with lock case Inoperable knob/lever on both sides. Includes lock case and armor front.	34	82	L283-145
L9440	F19 	Privacy with deadbolt Latchbolt is retracted by knob/lever from either side. Deadbolt is thrown or retracted by inside thumbturn. Throwing deadbolt locks outside knob/lever. Rotating inside knob/lever simultaneously retracts deadbolt and latchbolt and unlocks outside knob/lever. To unlock from outside, remove emergency button, insert thumbturn in access hole and rotate. (Previously XL11-761).	25	83	L283-062
LV9440		Privacy with deadbolt with Vandlgard® Latchbolt retracted by knob/lever from either side. Deadbolt is thrown or retracted by inside thumbturn. Throwing deadbolt locks outside knob/lever. Rotating inside knob/lever simultaneously retracts deadbolt and latchbolt and unlocks outside knob/lever. To unlock from outside, remove emergency button, insert thumbturn in access hole and rotate. Vandlgard function allows exterior lever to rotate freely down while remaining securely locked.	25	84	L283-181+

+ Not sold separately as a part.

⌘ Available with Request to Exit feature.

* Caution: Double cylinder locks on residences—or on any door in any structure which are used for egress—are a life safety hazard in times of emergency, and their use is not recommended. Installation should be in accordance with existing codes only.


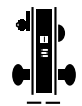

Lock assembly drawing index

L9000 FUNCTIONS ANSI/BHMA A156.13, 1994, Series 1000, Grade 1 Non-keyed locks			Trim assembly page no.	Lock assembly page no.	Lock case part no.
SCHLAGE	ANSI	Description			
L9444		Privacy with deadbolt and coin turn Latchbolt is retracted by knob/lever from either side. Deadbolt is thrown or retracted by inside thumbturn or outside coin turn. Throwing deadbolt locks outside knob/lever. Rotating inside knob/lever simultaneously retracts deadbolt and latchbolt and unlocks outside knob/lever. Rotating outside coin turn retracts deadbolt and unlocks outside knob/lever. Available with rose trim only. Specify per L283-056 for Torx® screws. (Previously XL11-868).	27	83	L283-062
LV9444		Privacy with deadbolt and coin turn with Vandlgard® Latchbolt is retracted by knob/lever from either side. Deadbolt is thrown or retracted by inside thumbturn or outside coin turn. Throwing deadbolt locks outside knob/lever. Rotating inside knob/lever simultaneously retracts deadbolt and latchbolt and unlocks outside knob/lever. Rotating outside coin turn retracts deadbolt and unlocks outside knob/lever. Available with rose trim only. Vandlgard function allows exterior lever to rotate freely down while remaining securely locked. Specify per L283-056 for Torx® screws.	27	84	L283-181+

+ Not sold separately as a part.

⌘ Available with Request to Exit feature.

* Caution: Double cylinder locks on residences—or on any door in any structure which are used for egress—are a life safety hazard in times of emergency, and their use is not recommended. Installation should be in accordance with existing codes only.

L9000 FUNCTIONS ANSI/BHMA A156.13, 1994, Series 1000, Grade 1 Keyed locks			Trim assembly page no.	Lock assembly page no.	Lock case part no.
SCHLAGE	ANSI	Description			
L9050	F04	Office and inner entry lock ⌘ Latchbolt is retracted by knob/lever from either side unless outside is made inoperative by key outside or inside thumbturn. When outside is locked, latchbolt is retracted by key outside or by knob/lever inside. Outside knob/lever remains locked until thumbturn is returned to vertical position or unlocked by key. Auxiliary latch deadlocks latchbolt when door is closed. Inside knob/lever is always free for immediate exit.	28	60	L283-133
LV9050		Office and inner entry lock with Vandlgard® ⌘ Latchbolt is retracted by knob/lever from either side unless outside is made inoperative by key outside or inside thumbturn. When outside is locked, latchbolt is retracted by key outside or by knob/lever inside. Outside knob/lever remains locked until thumbturn is returned to vertical position or unlocked by key. Auxiliary latch deadlocks latchbolt when door is closed. Inside knob/lever is always free for immediate exit. Vandlgard function allows exterior lever to rotate freely down while remaining securely locked.	28	61	L283-170+
L9056		L9050 with automatic unlocking ⌘ Latchbolt is retracted by knob/lever from either side unless outside is made inoperative by key outside or inside thumbturn. Outside knob/lever is unlocked by key outside or thumbturn. Rotating inside knob/lever simultaneously retracts latchbolt and unlocks outside knob/lever. Auxiliary latch deadlocks latchbolt when door is closed. Inside knob/lever is always free for immediate exit. (Previously XL11-776).	28	64	L283-126
LV9056		LV9050 with automatic unlocking with Vandlgard® ⌘ Latchbolt is retracted by knob/lever from either side unless outside is made inoperative by key outside or inside thumbturn. Outside knob/lever is unlocked by key outside or thumbturn. Rotating inside knob/lever simultaneously retracts latchbolt and unlocks outside knob/lever. Auxiliary latch deadlocks latchbolt when door is closed. Inside knob/lever is always free for immediate exit. Vandlgard function allows exterior lever to rotate freely down while remaining securely locked.	28	65	L283-180+

† Locks with holdback feature are not UL listed. Installation should be in accordance with existing codes only.

* Caution: Double cylinder locks on residences—or on any door in any structure which are used for egress—are a life safety hazard in times of emergency, and their use is not recommended. Installation should be in accordance with existing codes only.

+ Not sold separately as a part.

⌘ Available with Request to Exit feature.

Lock assembly drawing index

L9000 FUNCTIONS ANSI/BHMA A156.13, 1994, Series 1000, Grade 1 Keyed locks			Trim assembly page no.	Lock assembly page no.	Lock case part no.
SCHLAGE	ANSI	Description			
L9060 	F09	Apartment entrance lock* ⌘ Latchbolt is retracted by knob/lever from either side unless outside is locked by key from inside. When locked, latchbolt is retracted by key outside or knob/lever inside. Auxiliary latch deadlocks when door is closed. Inside knob/lever is always free for immediate exit.	29	60	L283-133
LV9060 		Apartment entrance lock* with Vandlgard® ⌘ Latchbolt is retracted by knob/lever from either side unless outside is locked by key from inside. When locked, latchbolt is retracted by key outside or knob/lever inside. Auxiliary latch deadlocks when door is closed. Inside knob/lever is always free for immediate exit. Vandlgard function allows exterior lever to rotate freely down while remaining securely locked.	29	61	L283-170 +
L9070 	F05	Classroom lock ⌘ Latchbolt is retracted by knob/lever from either side unless outside is locked by key. Outside is unlocked by key. Inside knob/lever is always free for immediate exit. Auxiliary latch deadlocks latchbolt when door is closed.	30	60	L283-133
LV9070 		Classroom lock with Vandlgard® ⌘ Latchbolt is retracted by knob/lever from either side unless outside is locked by key. Outside is unlocked by key. Inside knob/lever is always free for immediate exit. Auxiliary latch deadlocks latchbolt when door is closed. Vandlgard function allows exterior lever to rotate freely down while remaining securely locked.	30	61	L283-170 +
L9071 		Classroom Security Lock* ⌘ Latchbolt is retracted by knob/lever from either side unless locked by key from either side. When locked, latchbolt is retracted by key outside or knob/lever inside. Inside knob/lever is always free for immediate exit. Auxiliary latch deadlocks latchbolt when door is closed.	29	60	L283-133
LV9071 		Classroom security lock* with Vandlgard® ⌘ Latchbolt is retracted by knob/lever from either side unless locked by key from either side. When locked, latchbolt is retracted by key outside or knob/lever inside. Inside knob/lever is always free for immediate exit. Auxiliary latch deadlocks latchbolt when door is closed. Vandlgard function allows exterior lever to rotate freely down while remaining securely locked.	29	61	L283-170 +
L9076 	F06	Classroom holdback lock† ⌘ Latchbolt is retracted by knob/lever from either side unless locked by key outside. When locked, latchbolt is retracted by key outside or knob/lever inside. Inside knob/lever is always free for immediate exit. Auxiliary latch deadlocks latchbolt when door is closed. Turn/depress inside knob/lever and turn key 360° for holdback feature.	30	66	L283-039
LV9076 		Classroom holdback lock† with Vandlgard® ⌘ Latchbolt is retracted by knob/lever from either side unless locked by key outside. When locked, latchbolt is retracted by key outside or knob/lever inside. Inside lever is always free for immediate exit. Auxiliary latch deadlocks latchbolt when door is closed. Turn/depress inside knob/lever and turn key 360° for holdback feature. Vandlgard function allows exterior lever to rotate freely down while remaining securely locked.	30	67	L283-172 +
L9077 		Classroom security holdback lock† ⌘ Latchbolt is retracted by knob/lever from either side unless locked by key from either side. When locked, latchbolt is retracted by key outside or knob/lever inside. Auxiliary latch deadlocks latchbolt when door is closed. Turn/depress inside knob/lever and turn key 360° for holdback feature.	29	66	L283-039








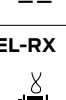
† Locks with holdback feature are not UL listed. Installation should be in accordance with existing codes only.

* Caution: Double cylinder locks on residences—or on any door in any structure which are used for egress—are a life safety hazard in times of emergency, and their use is not recommended. Installation should be in accordance with existing codes only.

+ Not sold separately as a part.

⌘ Available with Request to Exit feature.

Lock assembly drawing index

L9000 FUNCTIONS ANSI/BHMA A156.13, 1994, Series 1000, Grade 1 Keyed locks			Trim assembly page no.	Lock assembly page no.	Lock case part no.
SCHLAGE	ANSI	Description			
LV9077 		Classroom security holdback lock† with Vandlgard® ⌘ Latchbolt is retracted by knob/lever from either side unless locked by key from either side. When locked, latchbolt is retracted by key outside or knob/lever inside. Auxiliary latch deadlocks latchbolt when door is closed. Turn/depress inside knob/lever and turn key 360° for holdback feature. Vandlgard function allows exterior lever to rotate freely down while remaining securely locked.	29	67	L283-172+
L9080 	F07	Storeroom lock ⌘ Latchbolt is retracted by key outside or by knob/lever inside. Outside knob/lever is always inoperative. Auxiliary latch deadlocks latchbolt when door is closed. Inside knob/lever is always free for immediate exit.	30	68	L283-134
LV9080 		Storeroom Lock with Vandlgard® ⌘ Latchbolt is retracted by key outside or by knob/lever inside. Outside knob/lever is always inoperative. Auxiliary latch deadlocks latchbolt when door is closed. Inside knob/lever is always free for immediate exit. Vandlgard function allows exterior lever to rotate freely down while remaining securely locked.	30	69	L283-173+
L9080EL 		Electrically locked (fail safe) ⌘ Outside knob/lever is continuously locked. Latchbolt is retracted by key outside or by knob/lever inside. Switch or power failure allows outside knob/lever to retract latchbolt. Auxiliary latch deadlocks latchbolt when door is closed. Inside knob/lever is always free for immediate exit.	30	72	L283-142
LV9080EL 		Electrically locked (fail safe) with Vandlgard® ⌘ Outside knob/lever is continuously locked. Latchbolt is retracted by key outside or by knob/lever inside. Switch or power failure allows outside knob/lever to retract latchbolt. Auxiliary latch deadlocks latchbolt when door is closed. Inside knob/lever is always free for immediate exit. Vandlgard function allows exterior lever to rotate freely down while remaining securely locked.	30	73	L283-174+
L9080EU 		Electrically unlocked (fail secure) ⌘ Outside knob/lever is continuously unlocked. Latchbolt is retracted by key outside or by knob/lever inside. Inside knob/lever is always free for immediate exit. Auxiliary latch deadlocks latchbolt when door is closed.	30	74	L283-143
LV9080EU 		Electrically unlocked (fail secure) with Vandlgard® ⌘ Outside knob/lever is continuously unlocked. Latchbolt is retracted by key outside or by knob/lever inside. Inside knob/lever is always free for immediate exit. Auxiliary latch deadlocks latchbolt when door is closed. Vandlgard function allows exterior lever to rotate freely down, while remaining securely locked.	30	74	L283-175+
L9080EL-RX 		Request to exit electrically locked (fail safe) Same as L9080EL function. In addition, a microswitch positioned inside the lock case is activated when either inside or outside knob/lever is rotated. The switch signals the use of that opening to security systems, allowing a non-disruptive means of immediate exit. Specify L283-263. (Previously XL11-807)	30	72	L283-142 per L283-263

† Locks with holdback feature are not UL listed. Installation should be in accordance with existing codes only.

* Caution: Double cylinder locks on residences—or on any door in any structure which are used for egress—are a life safety hazard in times of emergency, and their use is not recommended. Installation should be in accordance with existing codes only.

+ Not sold separately as a part.

⌘ Available with Request to Exit feature.

Lock assembly drawing index

L9000 FUNCTIONS ANSI/BHMA A156.13, 1994, Series 1000, Grade 1 Keyed locks			Trim assembly page no.	Lock assembly page no.	Lock case part no.
SCHLAGE	ANSI	Description			
L9080EU-RX 		Request to exit electrically unlocked (fail secure) Same as L9080EU function. In addition, a microswitch positioned inside the lock case is activated when either inside or outside knob/lever is rotated. The switch signals the use of that opening to security systems, allowing a non-disruptive means of immediate exit. Specify L283-263. (Previously XL11-807).	30	74	L283-143 per L283-263
L9082 	F30	Institution lock* Latchbolt is retracted by key on either side. Knob/lever on both sides is always inoperative. Auxiliary latch deadlocks latchbolt when door is closed.	29	76	L283-146
LV9082 		Institution lock* with Vandlgard® Latchbolt is retracted by key on either side. Inside and outside knob/lever are always inoperative. Auxiliary latch deadlocks latchbolt when door is closed. Vandlgard function allows exterior lever to rotate freely down while remaining securely locked.	29	77	L283-182+
L9082EL 		Electrically locked (fail safe) both sides* ⌘ Outside and inside knob/lever are continuously locked. Latchbolt is retracted by key on either side. Switch or power failure allows inside and outside knob/lever to retract latchbolt. Auxiliary latch deadlocks latchbolt when door is closed. (Previously XL11-452).	31	78	L283-085
L9082EU 		Electrically unlocked (fail secure) both sides* ⌘ Outside and inside knob/lever are continuously unlocked. Latchbolt is retracted by key on either side. Switch or power failure prevents retraction of latchbolt by inside and outside knob/lever. (Previously XL11-452).	31	74	L283-086
L9453 	F20	Entrance lock ⌘ Latchbolt is retracted by knob/lever from either side unless outside is locked by 20° rotation of thumbturn. Deadbolt is thrown or retracted by 90° rotation of thumbturn. When locked, key outside or knob/lever inside retracts deadbolt and latchbolt simultaneously. Outside knob/lever remains locked until thumbturn is returned to vertical position. Throwing deadbolt automatically locks outside knob/lever. Auxiliary latch deadlocks latchbolt when door is closed. Inside knob/lever is always free for immediate exit.	28	85	L283-137
LV9453 	F20	Entrance lock with Vandlgard® ⌘ Latchbolt is retracted by knob/lever from either side unless outside is locked by key outside or 20° rotation of thumbturn. Deadbolt is thrown or retracted by 90° rotation of thumbturn. When locked, key outside or knob/lever inside retracts deadbolt and latchbolt simultaneously. Outside knob/lever remains locked until thumbturn is returned to vertical position. Throwing deadbolt automatically locks outside knob/lever. Auxiliary latch deadlocks latchbolt when door is closed. Vandlgard function allows exterior lever to rotate freely down while remaining securely locked.	28	86	L283-176+
L9456 	F13	Corridor lock ⌘ Latchbolt is retracted by knob/lever from either side. Deadbolt is operated by key outside or inside thumbturn. Throwing deadbolt locks outside knob/lever. Turning inside knob/lever simultaneously retracts deadbolt and latchbolt and unlocks outside knob/lever. Inside knob/lever is always free for immediate exit.	28	87	L283-138

† Locks with holdback feature are not UL listed. Installation should be in accordance with existing codes only.

* Caution: Double cylinder locks on residences—or on any door in any structure which are used for egress—are a life safety hazard in times of emergency, and their use is not recommended. Installation should be in accordance with existing codes only.

+ Not sold separately as a part.

⌘ Available with Request to Exit feature.

Lock assembly drawing index

L9000 FUNCTIONS ANSI/BHMA A156.13, 1994, Series 1000, Grade 1 Keyed locks			Trim assembly page no.	Lock assembly page no.	Lock case part no.
SCHLAGE	ANSI	Description			
LV9456		Corridor lock with Vandlgard® ‡	28	88	L283-177+
		Latchbolt is retracted by knob/lever from either side. Deadbolt is operated by key outside or inside thumbturn. Throwing deadbolt locks outside knob/lever. Turning inside knob/lever simultaneously retracts deadbolt and latchbolt and unlocks outside knob/lever. Inside knob/lever is always free for immediate exit. Vandlgard function allows exterior lever to rotate freely down while remaining securely locked.			
L9457	F33	Classroom security lock* ‡	29	87	L283-138
		Latchbolt is retracted by knob/lever from either side. Deadbolt is operated by key from either side. Throwing deadbolt locks outside knob/lever. Turning inside knob/lever simultaneously retracts deadbolt and latchbolt and unlocks outside knob/lever. Inside knob/lever is always free for immediate exit.			
LV9457		Classroom security lock* with Vandlgard® ‡	29	88	L283-177+
		Latchbolt is retracted by knob/lever from either side. Deadbolt is operated by key from either side. Throwing deadbolt locks outside knob/lever. Turning inside knob/lever simultaneously retracts deadbolt and latchbolt and unlocks outside knob/lever. Inside knob/lever is always free for immediate exit. Vandlgard function allows exterior lever to rotate freely down while remaining securely locked.			
L9458	F34	Classroom security lock* with auxiliary latch‡	29	89	L283-310
		Latchbolt is operated by knob/lever from either side except when outside is locked by key from inside or outside. Deadbolt is retracted by key from inside or outside. Operating inside knob/lever retracts both bolts and unlocks the outside. Auxiliary latch deadlocks the latchbolt when deadbolt is thrown. Inside lever is always free for immediate egress.			
LV9458		Classroom security lock* with auxiliary latch with Vandlgard® ‡	29	90	L283-311+
		Latchbolt is operated by knob/lever from either side except when outside is locked by key from inside or outside. Deadbolt is retracted by key from inside or outside. Operating inside knob/lever retracts both bolts and unlocks the outside. Auxiliary latch deadlocks the latchbolt when deadbolt is thrown. Inside lever is always free for immediate egress. Vandlgard function allows exterior lever to rotate freely down while remaining securely locked.			
L9460 x XL11-635		L9460 with fixed dummy trim	35	91	XL11-635+
		Knob/lever is always fixed on both sides. Deadbolt is operated by key outside or thumbturn inside. Specify per XL11-635.			
L9460 x XL11-886		Deadbolt with retraction by inside knob/lever	36	93	—
		Deadbolt is operated by key outside or thumbturn inside. Rotating inside knob/lever retracts deadbolt. Outside knob/lever is always fixed. Specify per XL11-886.			
L9462 x XL11-886		Double cylinder deadbolt* with retraction by inside knob/lever	29	93	—
		Deadbolt is operated by key on either side. Rotating inside knob/lever retracts deadbolt. Outside knob/lever is always fixed. Specify per XL11-886.			
L9464 x XL11-886		Single cylinder deadbolt with retraction by inside knob/lever	30	93	—
		Deadbolt is operated by key outside. Rotating inside knob/lever retracts deadbolt. Outside knob/lever is always fixed. Specify per XL11-886.			

† Locks with holdback feature are not UL listed. Installation should be in accordance with existing codes only.

* Caution: Double cylinder locks on residences—or on any door in any structure which are used for egress—are a life safety hazard in times of emergency, and their use is not recommended. Installation should be in accordance with existing codes only.

+ Not sold separately as a part.

‡ Available with Request to Exit feature.

Lock assembly drawing index

L9000 FUNCTIONS ANSI/BHMA A156.13, 1994, Series 1000, Grade 1 Keyed locks			Trim assembly page no.	Lock assembly page no.	Lock case part no.
SCHLAGE	ANSI	Description			
L9465 		Closet/storeroom lock Latchbolt is operated by knob/lever from either side. Deadbolt is operated by key outside.	30	94	L283-140
L9466 	F14	Storeroom/utility room lock* Latchbolt is operated by knob/lever from either side. Deadbolt is operated by key from either side.	29	94	L283-140
L9473 	F21	Dormitory/bedroom lock Latchbolt is operated by knob/lever from either side. Deadbolt is operated by key outside or thumbturn inside.	28	94	L283-140
L9480 		Storeroom lock with deadbolt Latchbolt is operated by key outside or by knob/lever inside. Outside knob/lever is always fixed. Deadbolt is operated by key outside or thumbturn inside. Turning inside knob/lever simultaneously retracts both deadbolt and latchbolt. Auxiliary latch deadlocks latchbolt when door is closed. Inside knob/lever is always free for immediate exit. (Previously XL11-591).	37	95	L283-141
LV9480 		Storeroom lock with deadbolt with Vandlgard® Latchbolt is operated by key outside or by knob/lever inside. Outside knob/lever is always inoperative. Deadbolt is operated by key outside or thumbturn inside. Turning inside knob/lever simultaneously retracts both deadbolt and latchbolt. Auxiliary latch deadlocks latchbolt when door is closed. Inside knob/lever is always free for immediate exit. Vandlgard function allows exterior lever to rotate freely down while remaining securely locked. (Previously XL11-591).	37	96	L283-178 +
L9482 x XL11-543 		Institution lock with deadbolt* Latchbolt is operated by key from either side. Knob/lever on both sides is always fixed. Deadbolt is operated by key on either side. Auxiliary latch deadlocks latchbolt when door is closed. Specify per XL11-543.	38	97	—
LV9482 x XL11-543 		Institution lock with deadbolt* with Vandlgard® Latchbolt is operated by key from either side. Inside and outside knob/lever are always inoperative. Deadbolt is thrown or retracted by key on either side. Auxiliary latch deadlocks latchbolt when door is closed. Vandlgard function allows exterior lever to rotate freely down while remaining securely locked. Specify per XL11-543.	38	98	—
L9485 		Hotel or restroom lock Latchbolt is operated by key outside or by knob/lever inside. Outside knob/lever is always fixed. Deadbolt is thrown or retracted by inside thumbturn. When deadbolt is thrown all keys become inoperative except emergency keys. Turning inside knob/lever simultaneously retracts both deadbolt and latchbolt. Auxiliary latch deadlocks latchbolt when door is closed.	37	95	L283-141

† Locks with holdback feature are not UL listed. Installation should be in accordance with existing codes only.

* Caution: Double cylinder locks on residences—or on any door in any structure which are used for egress—are a life safety hazard in times of emergency, and their use is not recommended. Installation should be in accordance with existing codes only.

+ Not sold separately as a part.

⌘ Available with Request to Exit feature.

Lock assembly drawing index

L9000 FUNCTIONS ANSI/BHMA A156.13, 1994, Series 1000, Grade 1 Keyed locks			Trim assembly page no.	Lock assembly page no.	Lock case part no.
SCHLAGE	ANSI	Description			
LV9485		Hotel or restroom lock with Vandlgard® Latchbolt is retracted by key outside or by knob/lever inside. Outside knob/lever is always inoperative. Deadbolt is thrown or retracted by inside thumbturn. When deadbolt is thrown, all keys become inoperative except emergency or display keys. Turning inside knob/lever simultaneously retracts both deadbolt and latchbolt. Auxiliary latch deadlocks latchbolt when door is closed. Vandlgard function allows exterior lever to rotate freely down while remaining securely locked.	37	96	L283-178+
					
L9485 x XL11-557		Prison lock Latchbolt is operated by key outside or by knob inside. Outside knob is always free spinning. Inside knob is fixed when deadbolt is thrown. Deadbolt is thrown or retracted by guard's key. Prisoner's key retracts latchbolt. Furnished with tamper-resistant Torx® screws. Specify per XL11-557.	39	99	—
					
L9486	F15	Hotel lock with “Do not disturb” indicator Latchbolt is operated by key outside or by knob/lever inside. Outside knob/lever is always fixed. Deadbolt is thrown or retracted by inside thumbturn. When deadbolt is thrown, “DO NOT DISTURB” plate is displayed. Deadbolt thrown by inside thumbturn shuts out all keys except emergency keys. Inside knob/lever simultaneously retracts both deadbolt and latchbolt. Auxiliary latch deadlocks latchbolt when door is closed.	40	95	L283-141
					
LV9486		Hotel lock with “Do not disturb” indicator with Vandlgard® Latchbolt is operated by key outside or by knob/lever inside. Outside knob/lever is always inoperative. Deadbolt is thrown or retracted by inside thumbturn. When deadbolt is thrown, “DO NOT DISTURB” plate is displayed. Deadbolt thrown by inside thumbturn shuts out all keys except emergency keys. Inside knob/lever simultaneously retracts both deadbolt and latchbolt. Vandlgard function allows exterior lever to rotate freely down while remaining securely locked.	40	96	L283-178+
					
L9486 x L583-375		Hotel lock with “Occupied” indicator Latchbolt is operated by key outside or by knob/lever inside. Outside knob/lever is always inoperative. Deadbolt is thrown or retracted by inside thumbturn. When deadbolt is thrown, “OCCUPIED” plate is displayed. Deadbolt thrown by inside thumbturn shuts out all keys except emergency keys. Inside knob/lever simultaneously retracts both deadbolt and latchbolt. Auxiliary latch deadlocks latchbolt when door is closed. Specify per L583-375. (Previously XL11-580).	40	95	L283-141
					
LV9486 x L583-375		Hotel lock with “Occupied” indicator with Vandlgard® Latchbolt is operated by key outside or by knob/lever inside. Outside knob/lever is always inoperative. Deadbolt is thrown or retracted by inside thumbturn. When deadbolt is thrown, “OCCUPIED” plate is displayed. Deadbolt thrown by inside thumbturn shuts out all keys except emergency keys. Inside knob/lever simultaneously retracts both deadbolt and latchbolt. Auxiliary latch deadlocks latchbolt when door is closed. Vandlgard function allows exterior lever to rotate freely down while remaining securely locked. Specify per L583-375.	40	96	L283-178+
					
L9496		Privacy lock with “Occupied” indicator ‡ Latchbolt is operated by knob/lever on either side. Deadbolt is thrown or retracted by key outside (retraction by key required in the event of an emergency) or inside thumbturn. Throwing deadbolt locks outside knob/lever and displays “OCCUPIED” plate. Rotating inside knob/lever simultaneously retracts both deadbolt and latchbolt and unlocks outside knob/lever. (Previously XL11-885).	40	87	L283-138
					
LV9496		Privacy lock with “Occupied” indicator ‡ Latchbolt is operated by knob/lever on either side. Deadbolt is thrown or retracted by key outside (retraction by key required in the event of an emergency) or inside thumbturn. Throwing deadbolt locks outside knob/lever and displays “OCCUPIED” plate. Rotating inside knob/lever simultaneously retracts both deadbolt and latchbolt and unlocks outside knob/lever. Vandlgard function allows exterior lever to rotate freely down while remaining securely locked.	40	88	L283-178+
					





† Locks with holdback feature are not UL listed. Installation should be in accordance with existing codes only.

* Caution: Double cylinder locks on residences—or on any door in any structure which are used for egress—are a life safety hazard in times of emergency, and their use is not recommended. Installation should be in accordance with existing codes only.

+ Not sold separately as a part.



‡ Available with Request to Exit feature.

Lock assembly drawing index

L9000 FUNCTIONS ANSI/BHMA A156.13, 1994, Series 1000, Grade 1 Keyed L9000-Series deadbolts			Trim assembly page no.	Lock assembly page no.	Lock case page no.
SCHLAGE	ANSI	Description			
L9460 	F17	Cylinder by thumbturn lock Deadbolt is operated by key outside or thumbturn inside.	35	91	L283-139
L9462 	F16	Double cylinder lock* Deadbolt is operated by key on either side.	35	91	L283-139
L9463 	F29	Classroom lock Deadbolt is operated by key on outside. Inside cylinder turn retracts deadbolt but cannot extend it.	35	91	L283-139
L9464 	F18	Cylinder lock Deadbolt is operated by key on one side. No trim on opposite side. Available with rose trim only.	35	91	L283-139

+ Not sold separately as a part.

⌘ Available with Request to Exit feature.






LM9300 Multipoint functions ANSI/ICC 500 for tornadoes FEMA 320 and FEMA 361 certified for tornadoes Non-keyed locks		Trim assembly page no.	Lock assembly page no.	Lock case page no.
SCHLAGE	Description			
LM9310 	Passage latch function multipoint Latchbolt is always retracted by knob/lever from either side. Auxiliary latch deadlocks latchbolt when door is closed. Inside and outside knob/lever are always free for immediate egress. For use with Multipoint lock system only.	23	57	L283-314
LM9325 	Exit lock function multipoint Latchbolt is always retracted by inside knob/lever. No outside trim. Auxiliary latch deadlocks latchbolt when door is closed. For use with Multipoint lock system only.	24	57	L283-314


Lock assembly drawing index

LM9300 Multipoint functions ANSI/ICC 500 for tornadoes FEMA 320 and FEMA 361 certified for tornadoes Keyed Locks		Trim assembly page no.	Lock assembly page no.	Lock case page no.
SCHLAGE	Description			
LM9350 	Office and inner entry lock function multipoint Latchbolt is retracted by knob/lever from either side unless outside is made inoperative by key outside or inside thumbturn. When outside is locked, latchbolt is retracted by key and knob/lever outside or by knob/lever inside. Outside knob/lever remains locked until thumbturn is returned to vertical position or unlocked by key. Auxiliary latch deadlocks latchbolt when door is closed. Inside knob/lever is always free for immediate egress. For use with Multipoint lock system only.	28	62	L283-316
LMV9350 	Office and inner entry lock function multipoint with Vandlgard® Latchbolt is retracted by knob/lever from either side unless outside is made inoperative by key outside or inside thumbturn. When outside is locked, latchbolt is retracted by key and knob/lever outside or by knob/lever inside. Outside knob/lever remains locked until thumbturn is returned to vertical position or unlocked by key. Auxiliary latch deadlocks latchbolt when door is closed. Inside knob/lever is always free for immediate egress. Vandlgard function allows exterior lever to rotate freely down while remaining securely locked. For use with Multipoint lock system only.	28	63	L283-317
LM9370 	Classroom lock function multipoint Latchbolt is retracted by knob/lever from either side unless outside is locked by key. Outside is unlocked by key. When outside is locked, latchbolt is retracted by key and knob/lever outside or by knob/lever inside. Inside knob/lever is always free for immediate egress. Auxiliary latch deadlocks latchbolt when door is closed. For use with Multipoint lock system only.	30	62	L283-316
LMV9370 	Classroom lock function multipoint with Vandlgard® Latchbolt is retracted by knob/lever from either side unless outside is locked by key. Outside is unlocked by key. When outside is locked, latchbolt is retracted by key and knob/lever outside or by knob/lever inside. Inside knob/lever is always free for immediate egress. Auxiliary latch deadlocks latchbolt when door is closed. Vandlgard function allows exterior lever to rotate freely down while remaining securely locked. For use with Multipoint lock system only.	30	63	L283-317
LM9371 	Classroom security lock* function Multipoint Latchbolt is retracted by knob/lever from either side unless locked by key from either side. When outside is locked, latchbolt is retracted by key and knob/lever outside or knob/lever inside. Inside knob/lever is always free for immediate egress. Auxiliary latch deadlocks latchbolt when door is closed. Available with lock indicator on inside per XL11-986. For use with Multipoint lock system only.	29	62	L283-316
LMV9371 	Classroom Security Lock* Function Multipoint with Vandlgard® Latchbolt is retracted by knob/lever from either side unless locked by key from either side. When outside is locked, latchbolt is retracted by key and knob/lever outside or knob/lever inside. Inside knob/lever is always free for immediate egress. Auxiliary latch deadlocks latchbolt when door is closed. Available with lock indicator on inside per XL11-986. Vandlgard function allows exterior lever to rotate freely down while remaining securely locked. For use with Multipoint lock system only.	29	63	L283-317
LM9380 	Storeroom lock function multipoint Latchbolt is retracted by outside knob/lever after key is inserted and rotated 280°, or anytime by inside knob/lever. Outside knob/lever is always inoperative. Auxiliary latch deadlocks latchbolt when door is closed. Inside knob/lever is always free for immediate egress. For use with Multipoint lock system only.	30	70	L283-316
LMV9380 	Storeroom lock function multipoint with Vandlgard® Latchbolt is retracted by outside knob/lever after key is inserted and rotated 280°, or anytime by inside knob/lever. Outside knob/lever is always inoperative. Auxiliary latch deadlocks latchbolt when door is closed. Inside knob/lever is always free for immediate egress. Vandlgard function allows exterior lever to rotate freely down while remaining securely locked. For use with Multipoint lock system only.	30	71	L283-317

* Caution: Double cylinder locks on residences—or on any door in any structure which are used for egress—are a life safety hazard in times of emergency, and their use is not recommended. Installation should be in accordance with existing codes only.

Lock assembly drawing index

L400 FUNCTIONS ANSI/BHMA A156.13, 1994, Series 1000, Grade 1 Keyed L400-Series			Trim assembly page no.	Lock assembly page no.	Lock case page no.
SCHLAGE	ANSI				
L460	E06071	Cylinder by thumbturn lock Deadbolt is operated by key outside or thumbturn inside. 	22	55	L283-099
L462	E06061	Double cylinder lock* Deadbolt is operated by key on either side. 	22	55	L283-099
L463	E06091	Classroom lock Deadbolt is operated by key on outside. Inside cylinder turn retracts deadbolt but cannot extend it. 	22	55	L283-099
L464	E06081	Cylinder lock Deadbolt is operated by key on one side. No trim on opposite side. Available with rose trim only. 	22	55	L283-099
L496		Deadbolt with "Occupied" indicator Deadbolt is operated by key outside or thumbturn inside. Furnished with 09-611 per L583-375 indicator. When deadbolt is thrown "OCCUPIED" plate is displayed. Available with rose trim only. (Previously XL11-911). 	22	55	L283-099



L400 FUNCTIONS ANSI/BHMA A156.13, 1994, Series 1000, Grade 1 Non-keyed L400-Series			Trim assembly page no.	Lock assembly page no.	Lock case page no.
SCHLAGE	ANSI	Description			
L480	F14	Door Bolt Deadbolt is operated by thumbturn on one side. No trim on opposite side. 	22	55	L283-099

Trim assemblies

- 20 Single dummy trim
- 21 Double dummy trim
- 22 L400-Series deadbolt trim
- 23 Passage latch trim
- 24 Exit trim
- 25 Emergency button x turn trim
- 26 Privacy x turns both sides trim
- 27 Coin turn outside x turn trim
- 28 Cylinder x turn trim
- 29 Double cylinder trim
- 30 Cylinder outside trim
- 31 Electrically locked/unlocked both sides trim
- 32 Active double dummy trim
- 33 Single dummy with case trim
- 34 Double dummy with case trim
- 35 Deadbolt trim
- 36 Deadbolt with fixed double dummy trim
- 37 Fixed outside x turn trim
- 38 Institution deadbolt trim
- 39 Prison lock trim
- 40 Hotel with indicator trim

Single dummy trim


L0170

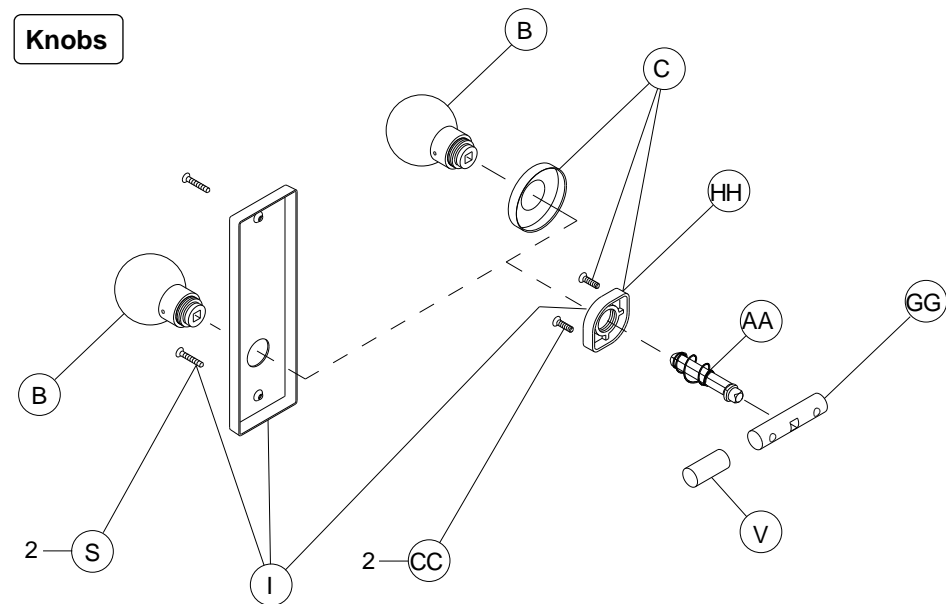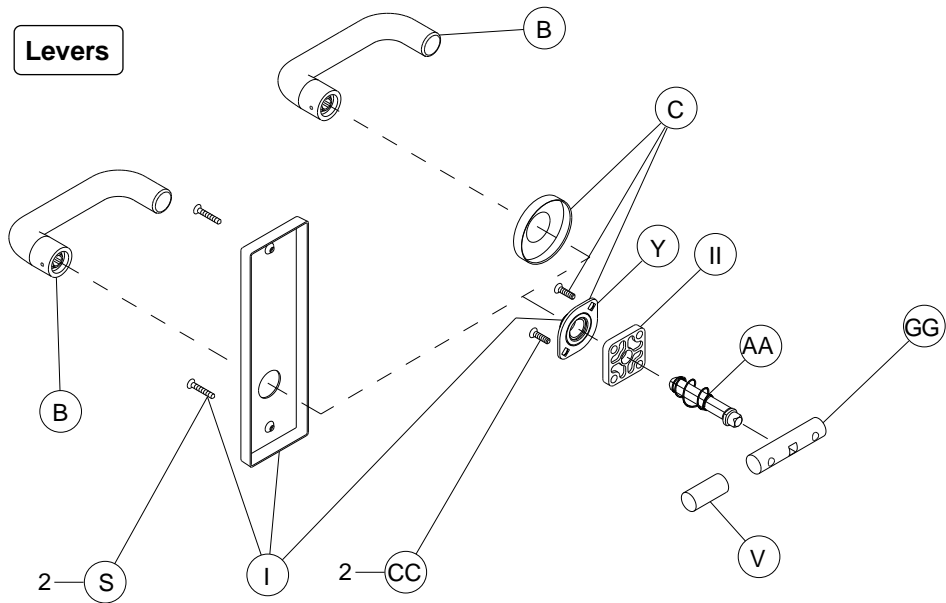

NOTE: Reinforcement required for metal door applications. See Schlage Door Preparation Manual & Template Guide.

Double dummy trim







L0172

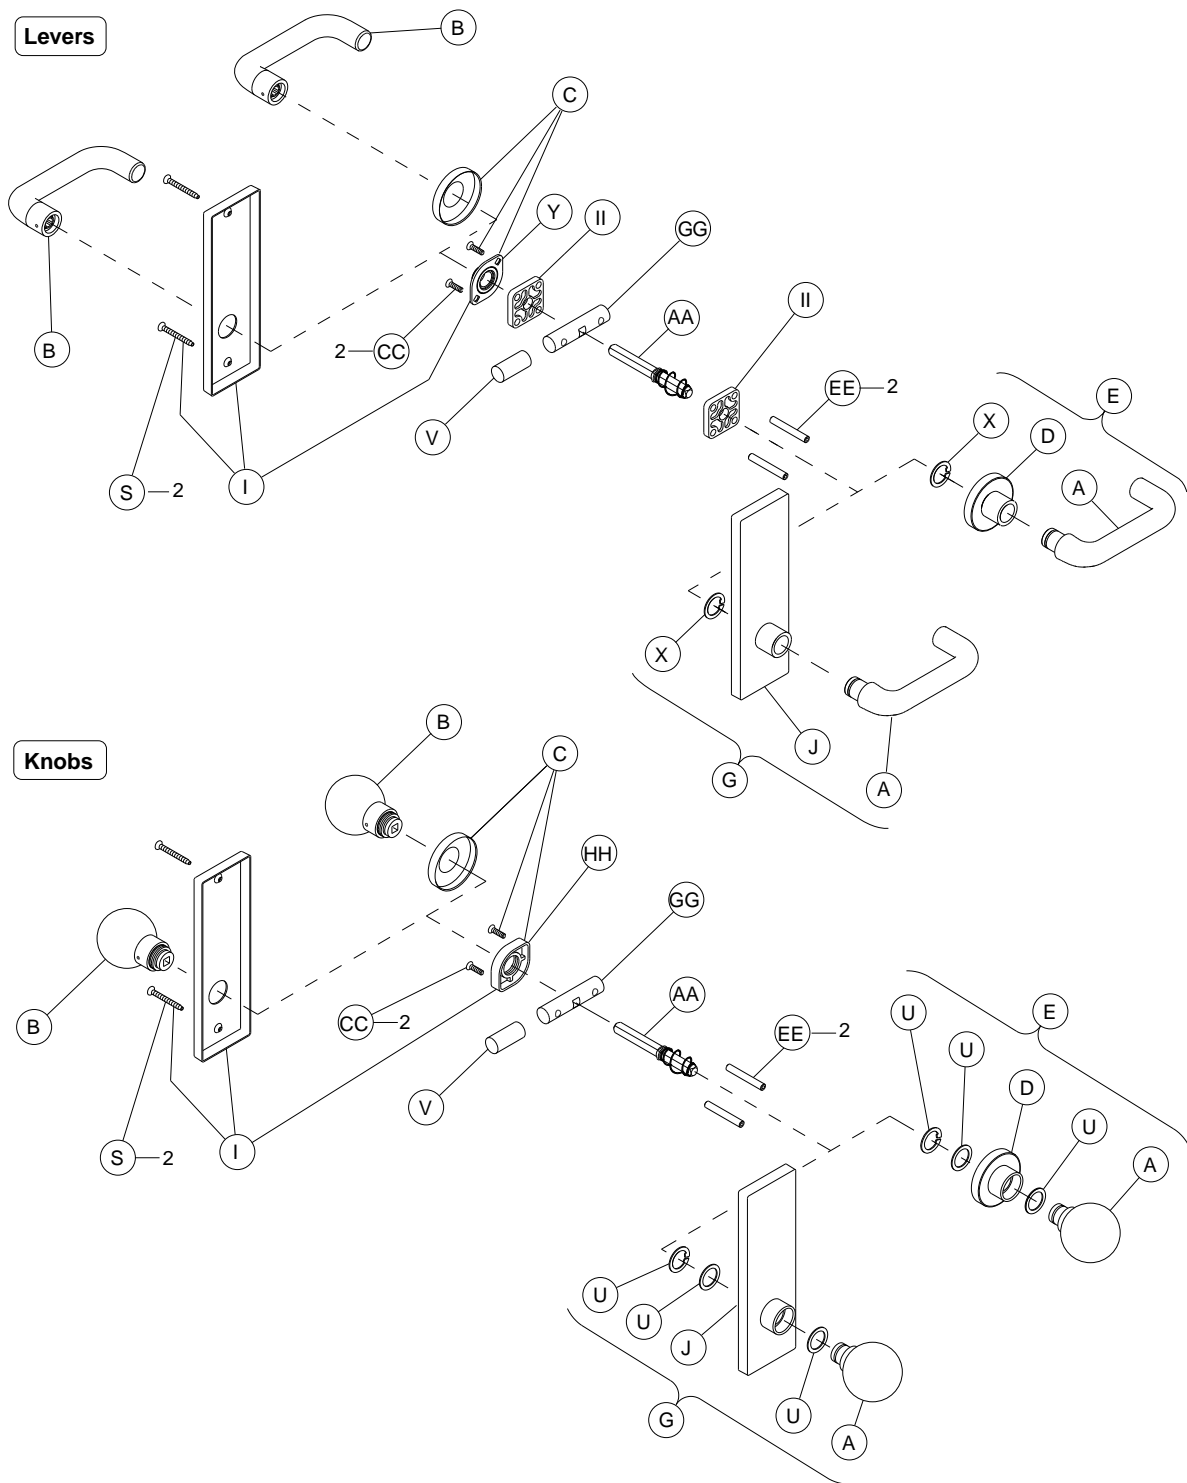

NOTE: Reinforcement required for metal door applications. See Schlage Door Preparation Manual & Template Guide.

L400-Series deadbolt trim


L460, L462, L463, L464, L480, L496

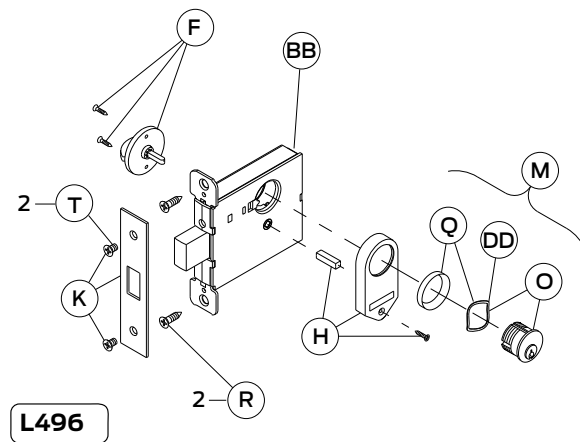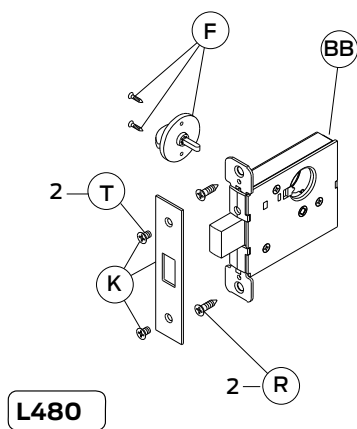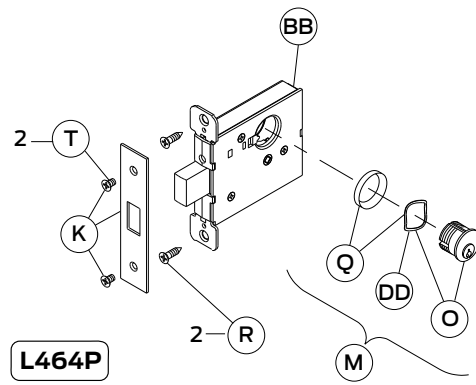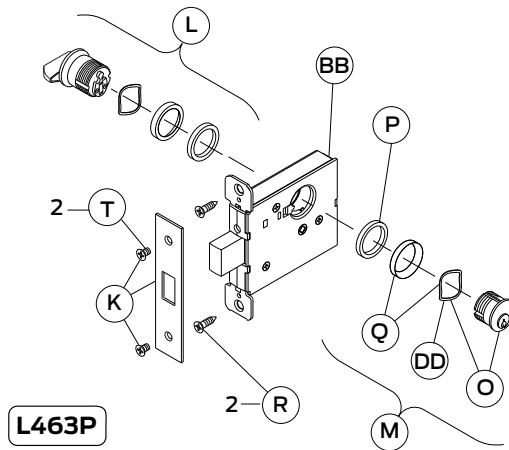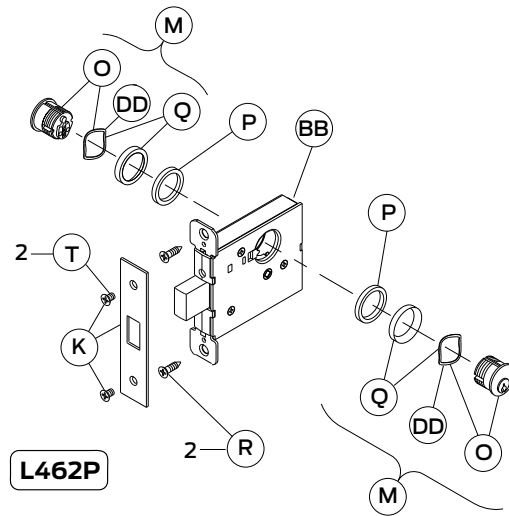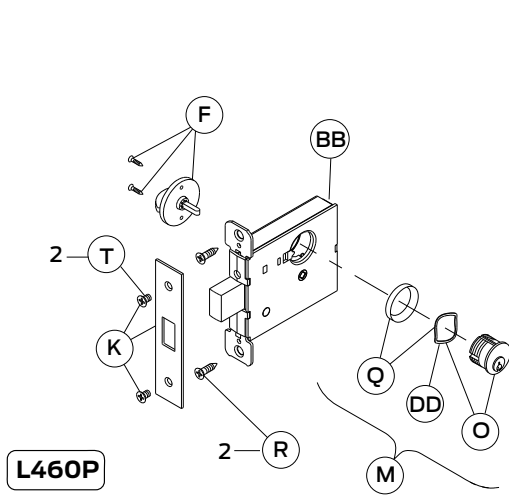

NOTE: Standard full face mortise cylinder shown.

Passage latch trim

L9010, LM9310

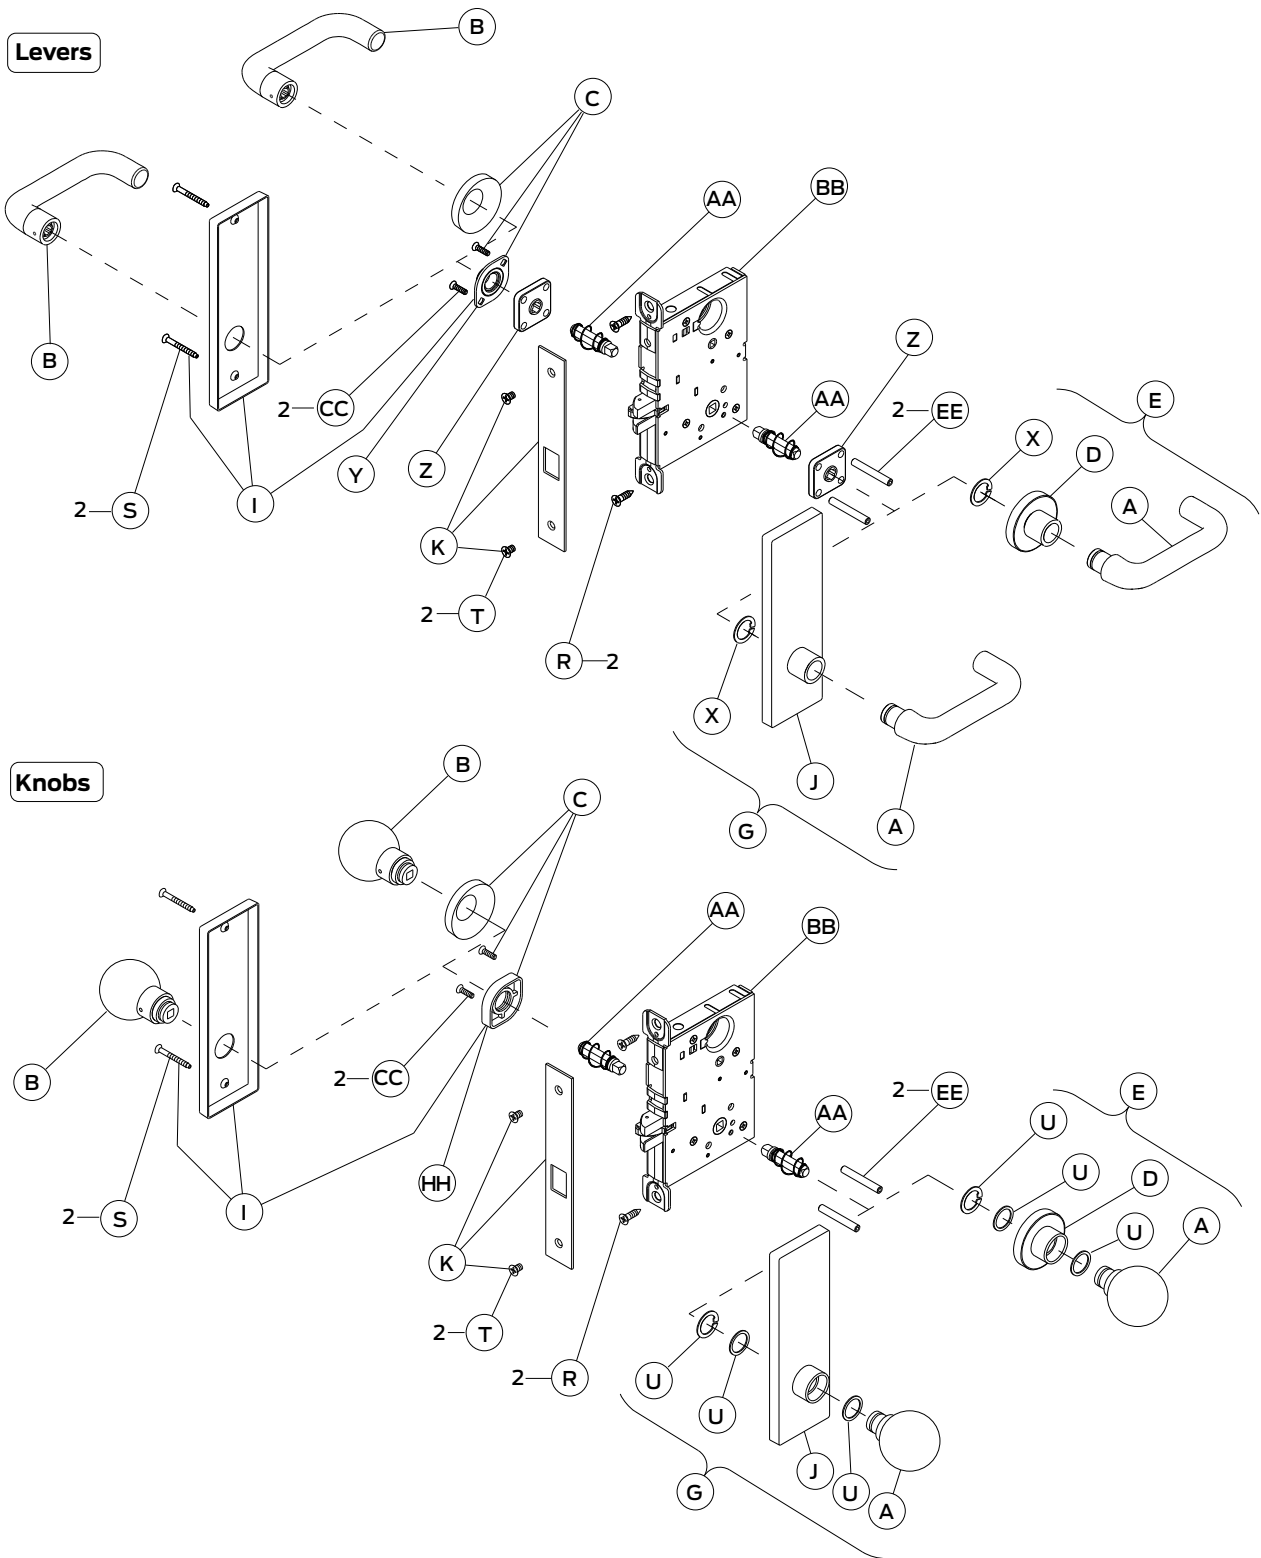


NOTE: LM9310 lock function has latch and auxiliary latch. Lock case and armor front shown with latch only.


Exit trim

LM9325

Levers

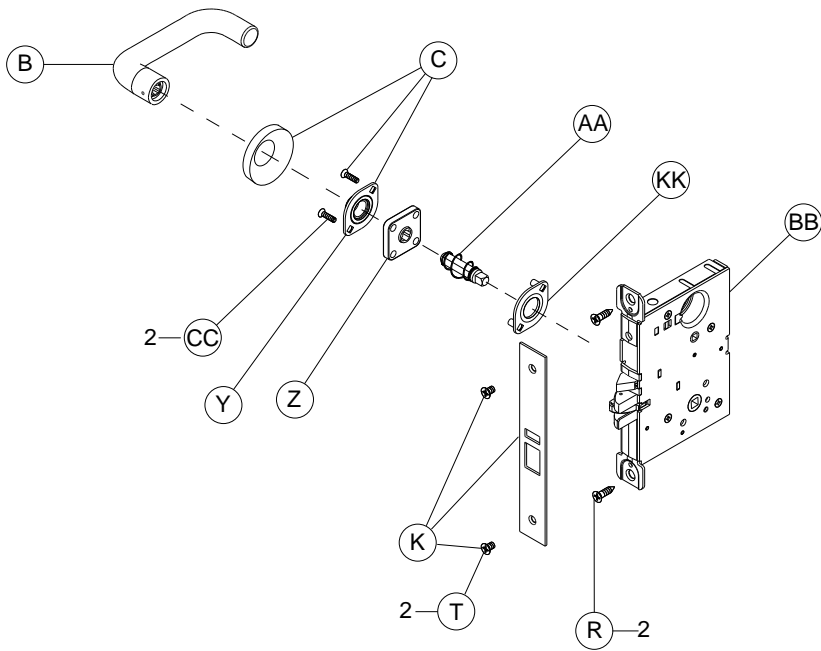


Knobs

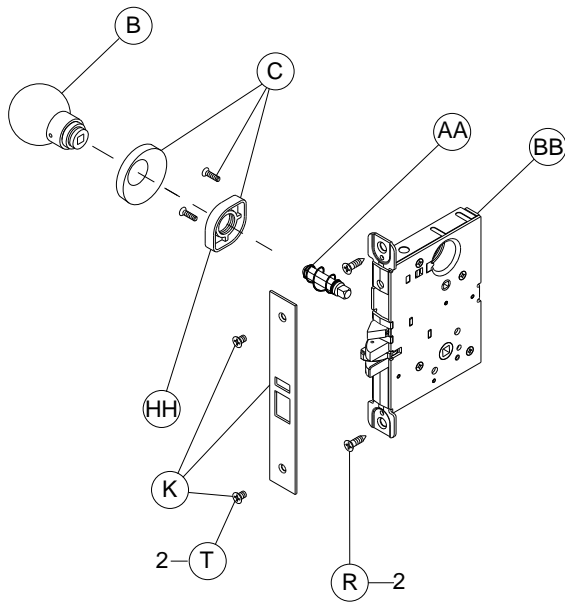

Emergency button x turn trim


L9040, LV9040, L9440, LV9440

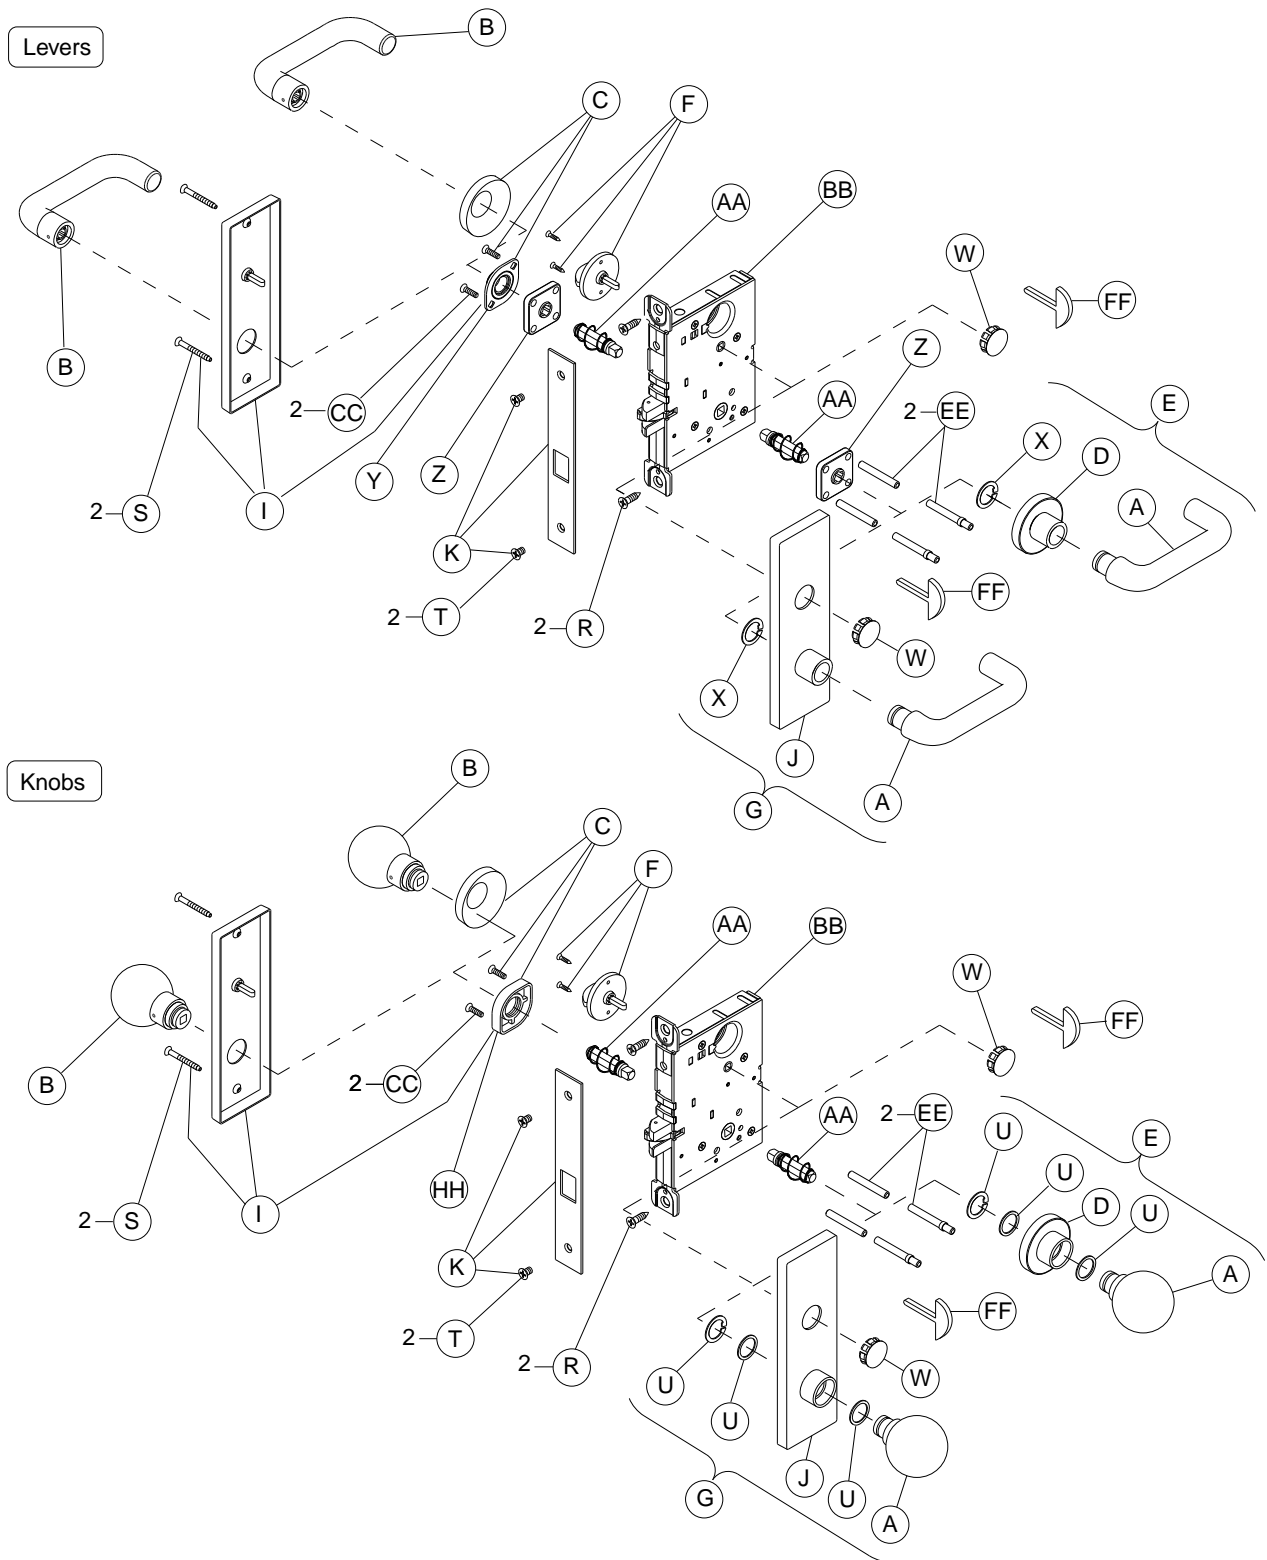

NOTE: L9440 and LV9440 lock functions have latch and deadbolt. Lock case and armor front shown with latch only.



Privacy x turns both sides trim

L9040 x XL11-446, LV9040 x XL11-446

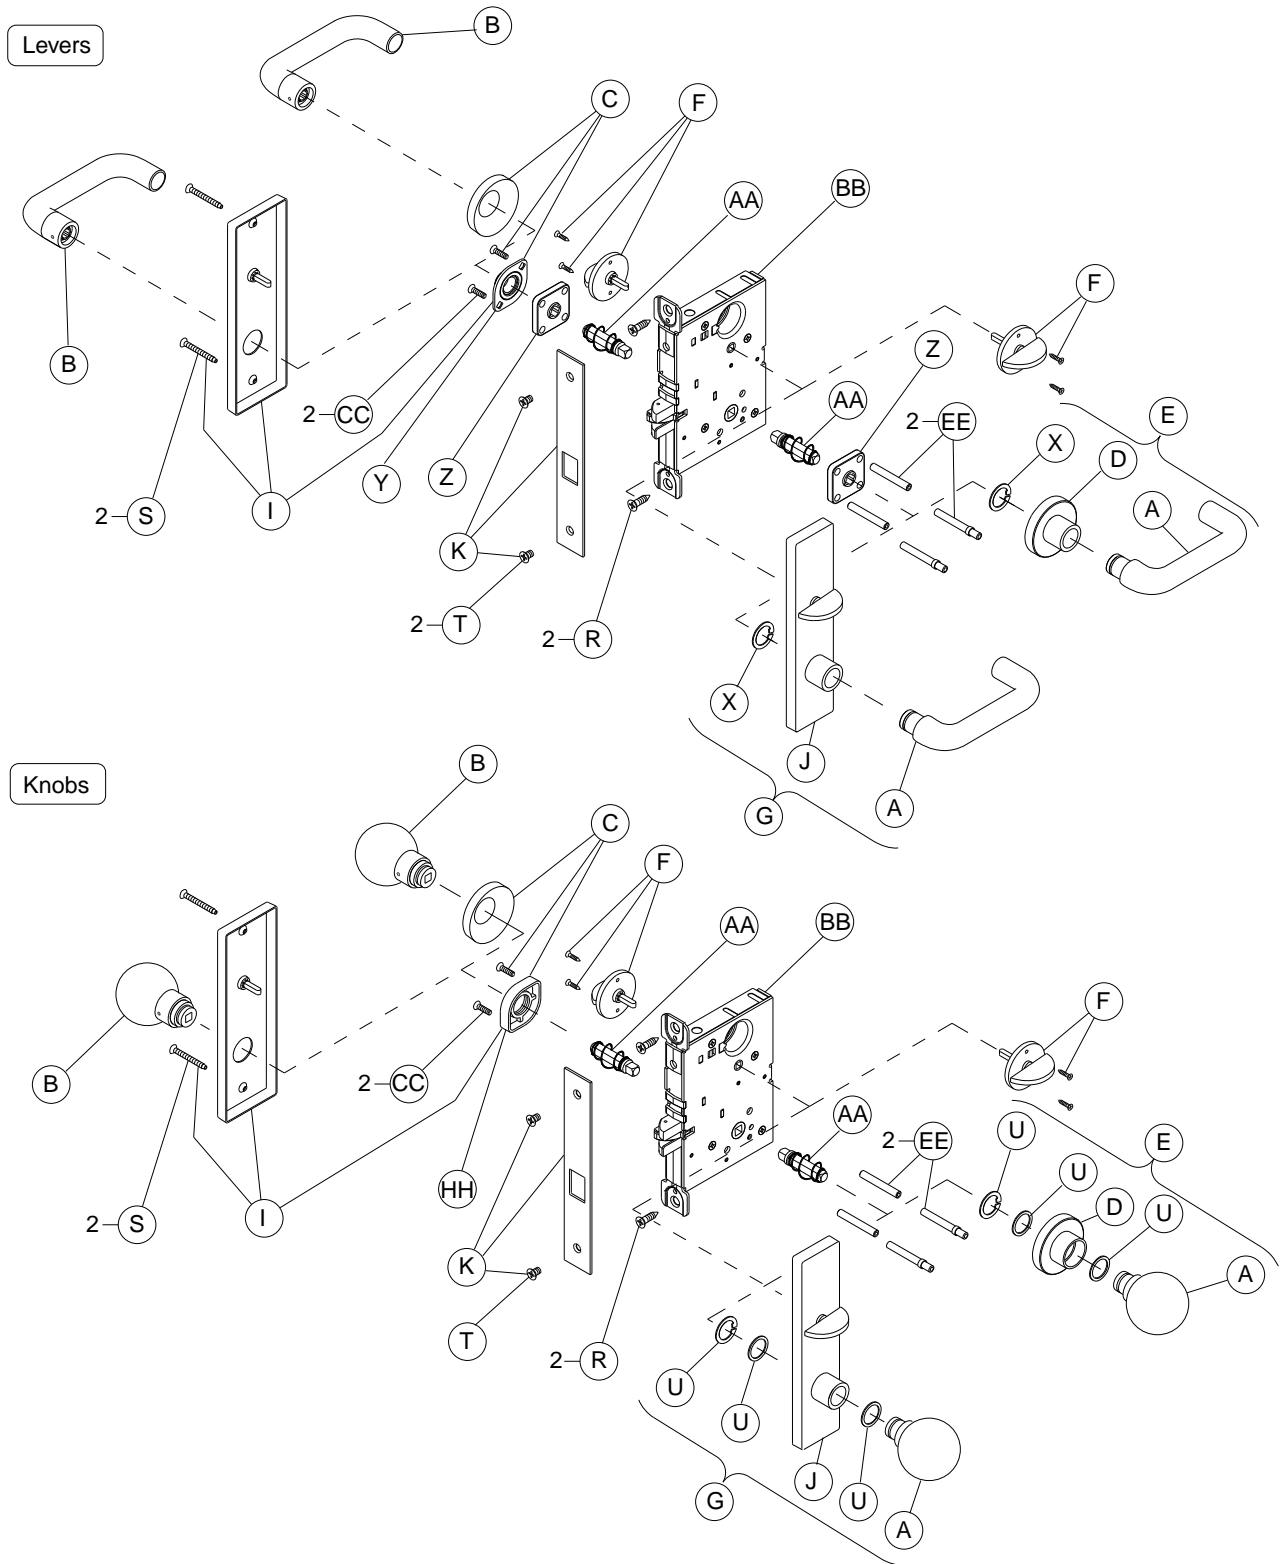

Coin turn outside x turn trim


L9044, LV9044, L9444, LV9444

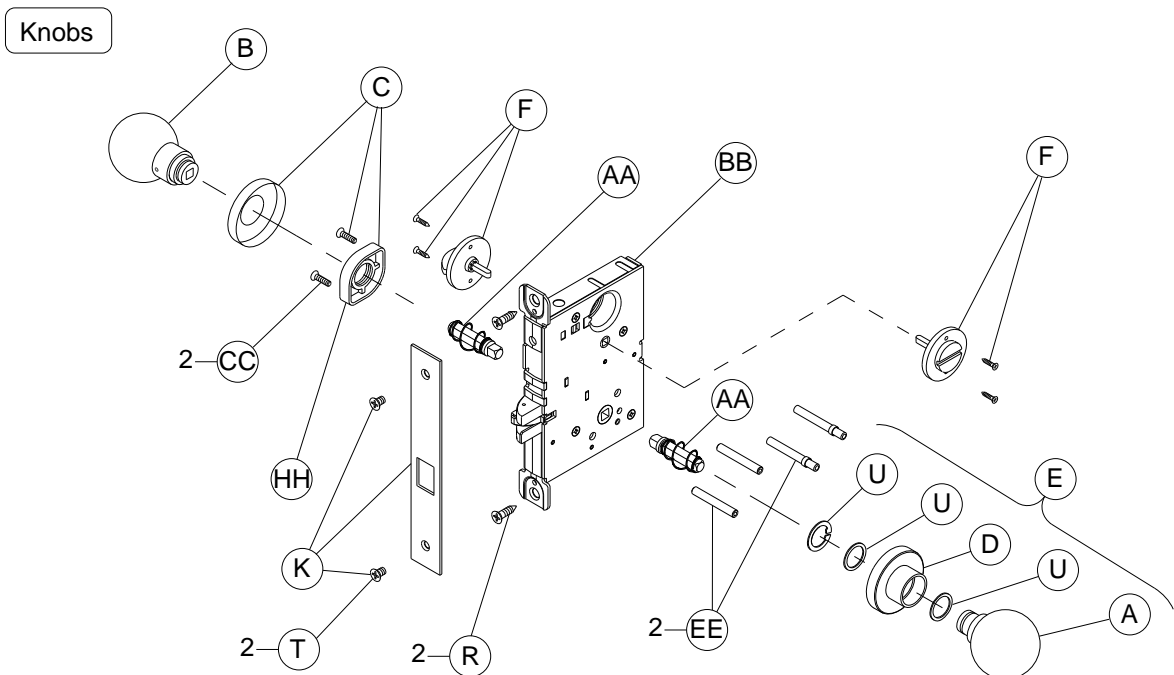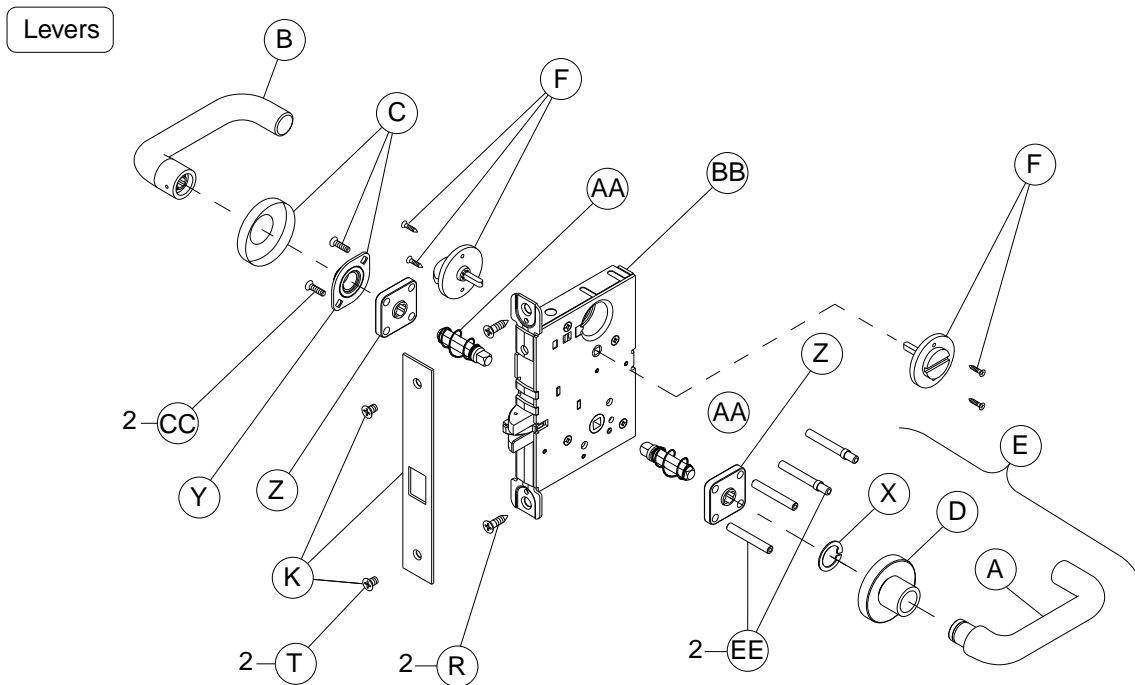

NOTE: L9444 and LV9444 lock functions have latch and deadbolt. Lock case and armor front shown with latch only.

Cylinder x turn trim


L9050, LV9050, LM9350, LMV9350, L9056, LV9056, L9453, LV9453, L9456, LV9456, L9473

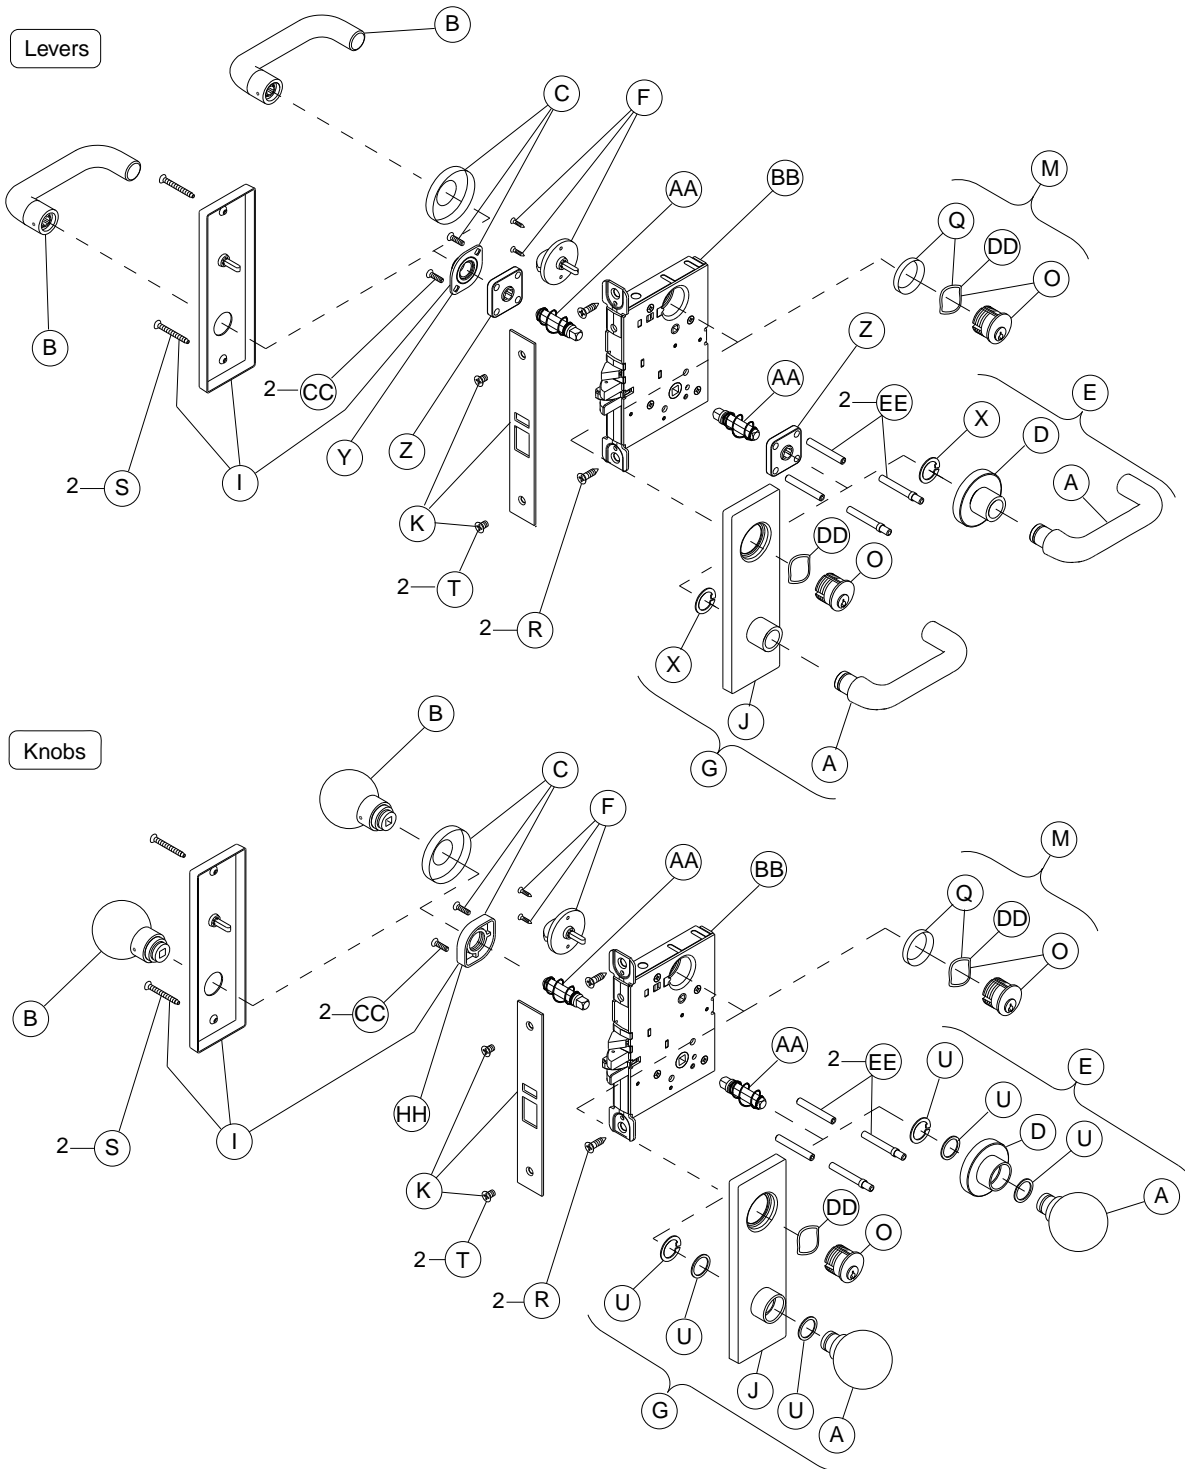

NOTES: L9456, LV9456, and L9473 lock functions have a latch and deadbolt. Lock case and armor front shown with latch and auxiliary latch.
 L/LV9453 lock functions have a latch, auxiliary latch, and deadbolt. Lock case and armor front shown with latch and auxiliary latch only.
 Standard full face mortise cylinder shown.

Double cylinder trim

L9060, LV9060, L9071, LV9071, LM9371, LMV9371, L9077, LV9077, L9082, LV9082, L9457, LV9457, L9458, LV9458, L9462 x XL11-886, L9466

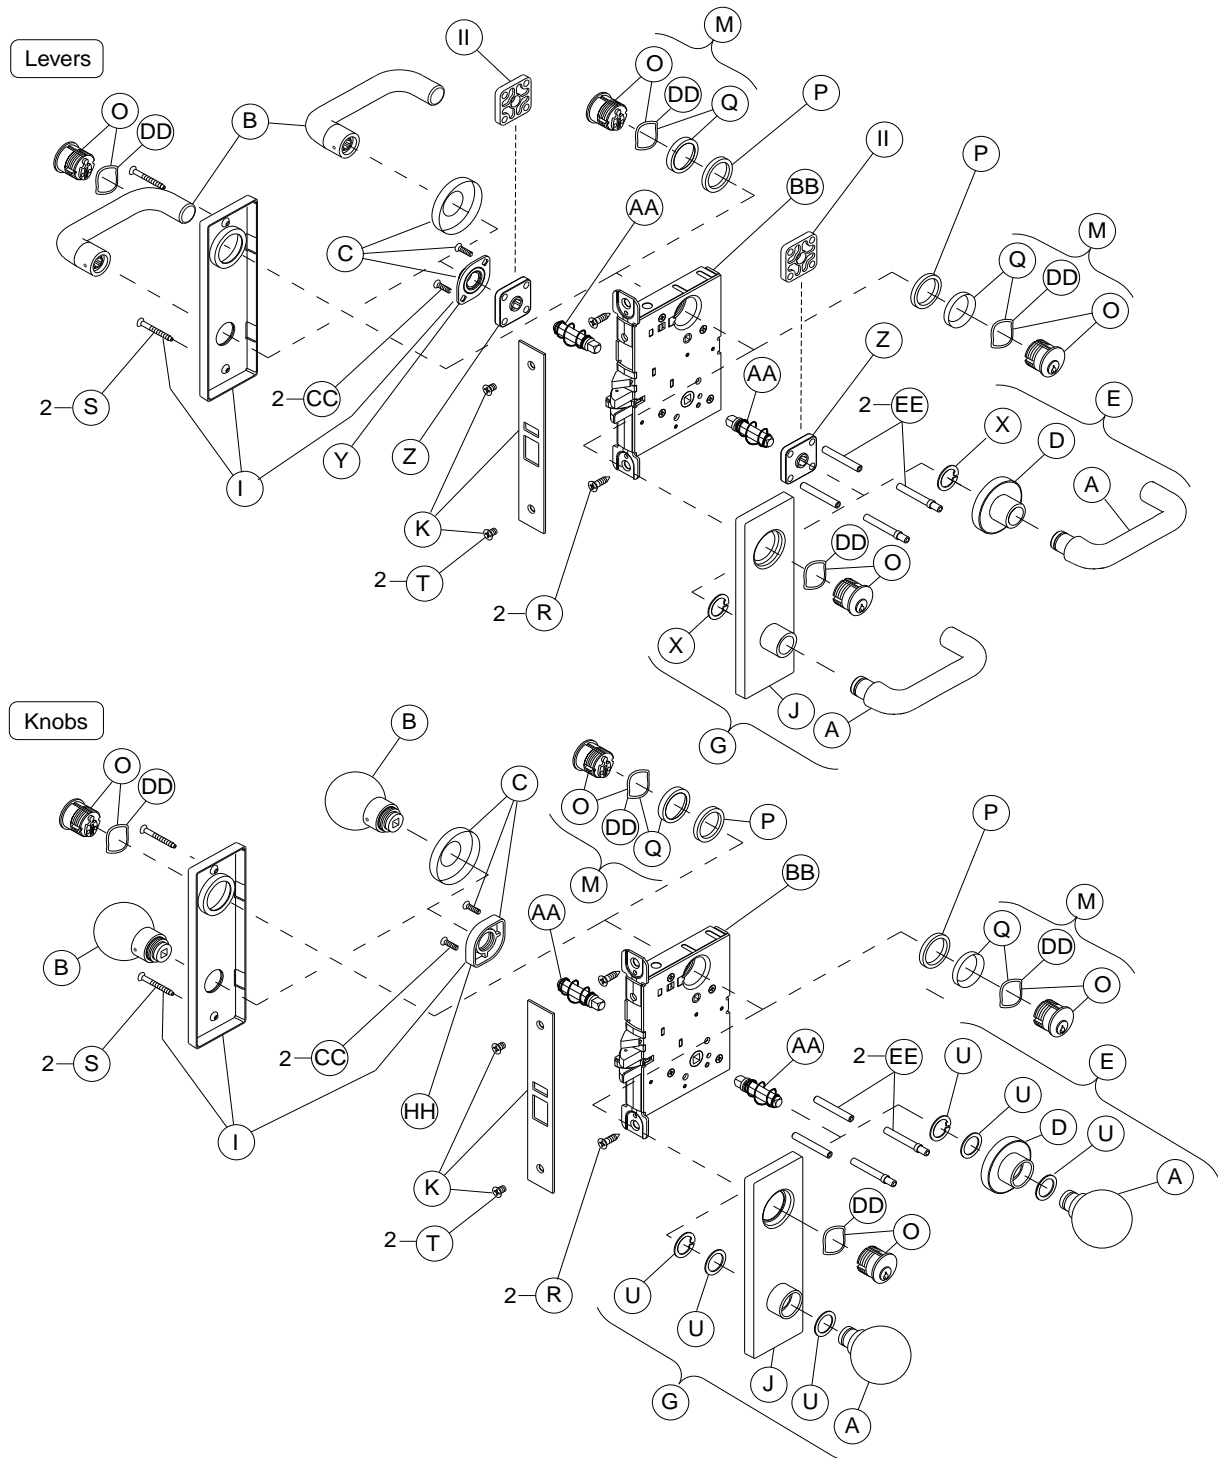


NOTES: L9457, LV9457, and L9466 lock functions have a latch and deadbolt. Lock case and armor front shown with latch and auxiliary latch.
L9458 & LV9458 lock functions have a latch, auxiliary latch & deadbolt. Lock case and armor front shown with latch and auxiliary latch.
L9462 x XL11-886 lock function has deadbolt only. Lock case and armor front shown with latch and auxiliary latch.
Standard full face mortise cylinder shown.


Cylinder outside trim

L9070, LV9070, LM9370, LMV9370, L9076, LV9076, L9080, LV9080, LM9380, LMV9380, L9080EL/EU, LV9080EL/EU, L9080EL/EU-RX, L9464 x XL11-886, L9465

Levers

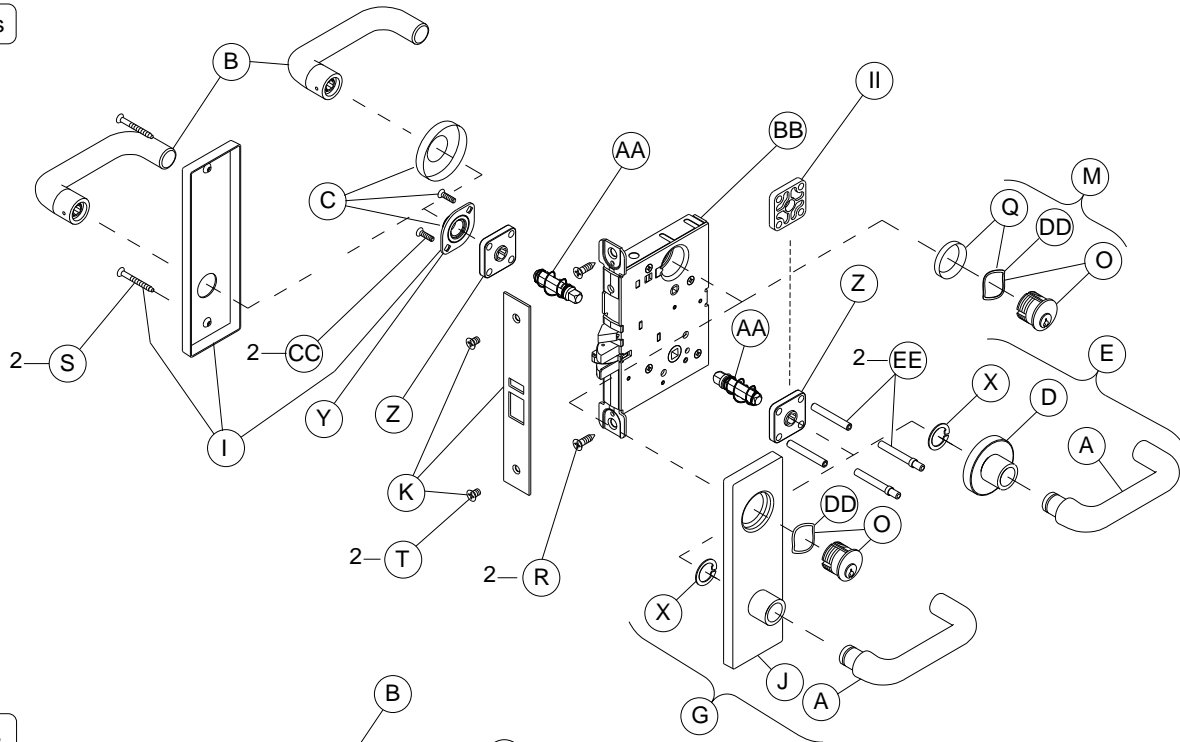


Knobs

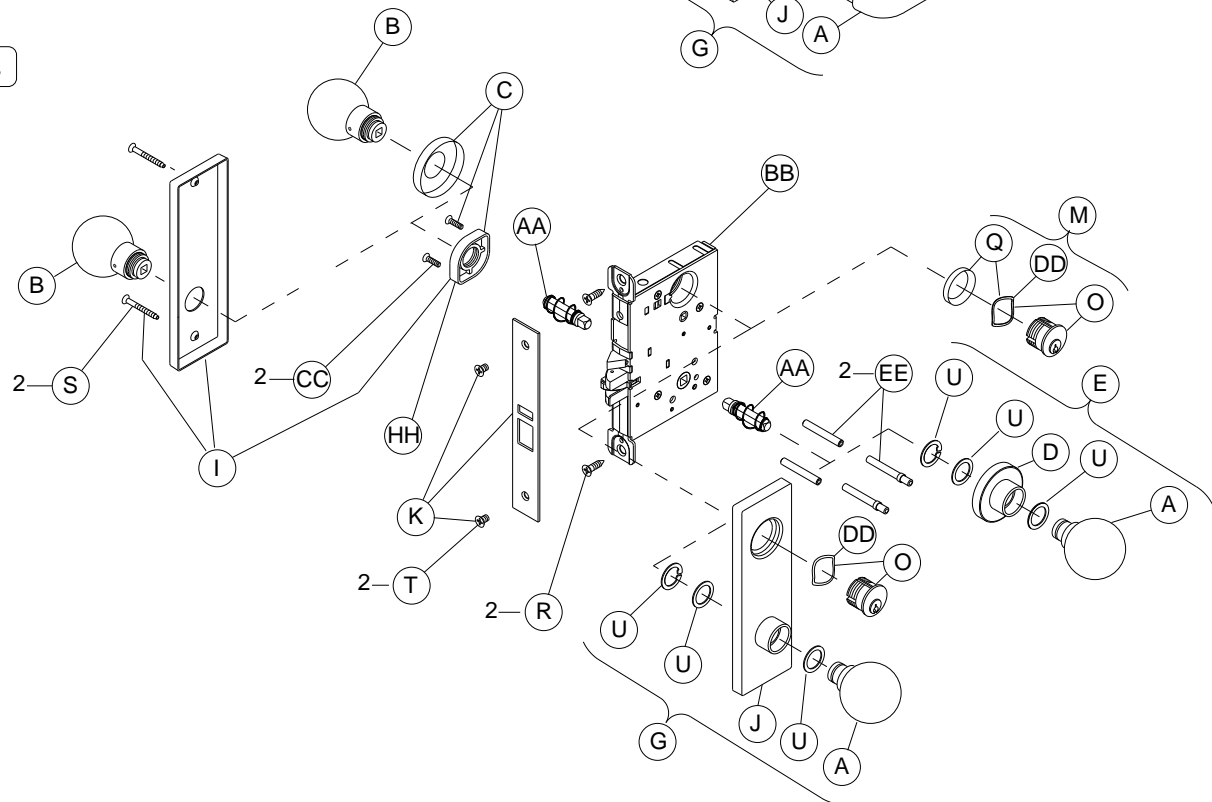

NOTES: L9465 lock function has a latch and deadbolt. Lock case and armor front shown with latch and auxiliary latch.
 L9464 x XL11-886 lock function has deadbolt only. Lock case and armor front shown with latch and auxiliary latch.
 Standard full face mortise cylinder shown.

Electrically locked/unlocked both sides trim

L9082EL/EU

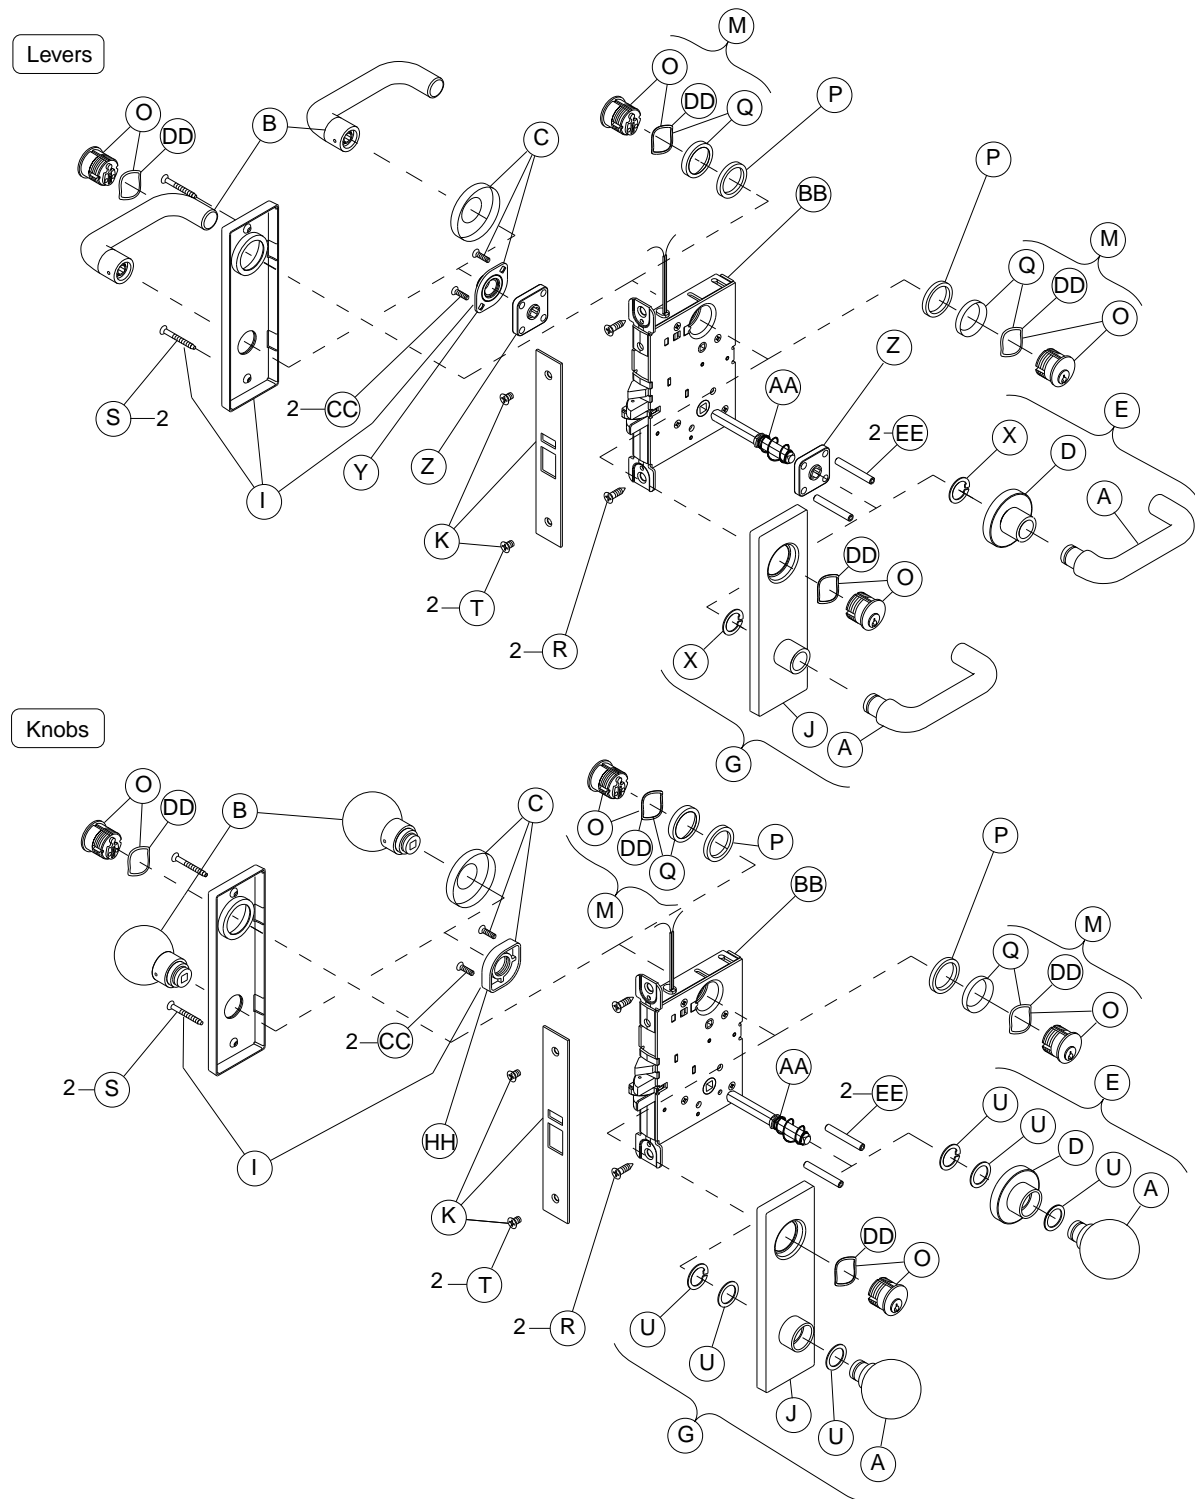

NOTE: Standard full face mortise cylinder shown.

This exploded view diagram illustrates the assembly of a cabinet door. The components are labeled as follows:

- Levers:** Labeled with 'B' and 'C'.
- Knobs:** Labeled with 'A' and 'C'.
- Door Panel:** Labeled 'I'.
- Mounting Hardware:** Includes screws 'S', 'T', 'R', 'Y', 'Z', 'K', 'AA', 'BB', 'CC', 'EE', 'X', 'D', 'G', 'J', and 'Z'.
- Internal Components:** Labeled 'AA', 'BB', 'CC', 'EE', 'X', 'D', 'G', 'J', and 'Z'.
- Decorative Elements:** Labeled 'A' and 'C'.

The diagram shows the door panel (I) being attached to the cabinet frame using screws (S, T, R, Y, Z, K) and the internal hardware (AA, BB, CC, EE, X, D, G, J, Z). The levers (B, C) and knobs (A, C) are shown being attached to the door panel using screws (S, T, R, Y, Z, K) and the internal hardware (AA, BB, CC, EE, X, D, G, J, Z).


This exploded view diagram illustrates the assembly of a door handle. The components are labeled as follows:

- Knobs:** A separate box labeled "Knobs" is shown at the top left.
- Parts A, D, E:** The main door knobs.
- Parts B, J:** The decorative caps for the knobs.
- Parts C, G:** The mounting plates for the knobs.
- Parts H, I:** The main handle body and its mounting plate.
- Parts K, R:** The mounting plate for the main handle.
- Parts L, M, N, O, P, Q, S, T, U:** Various screws, washers, and spacers used in the assembly.
- Parts V, W, X, Y, Z:** The main handle body and its mounting plate.

Single dummy with case trim


L9175, L9177 (discontinued)

Levers

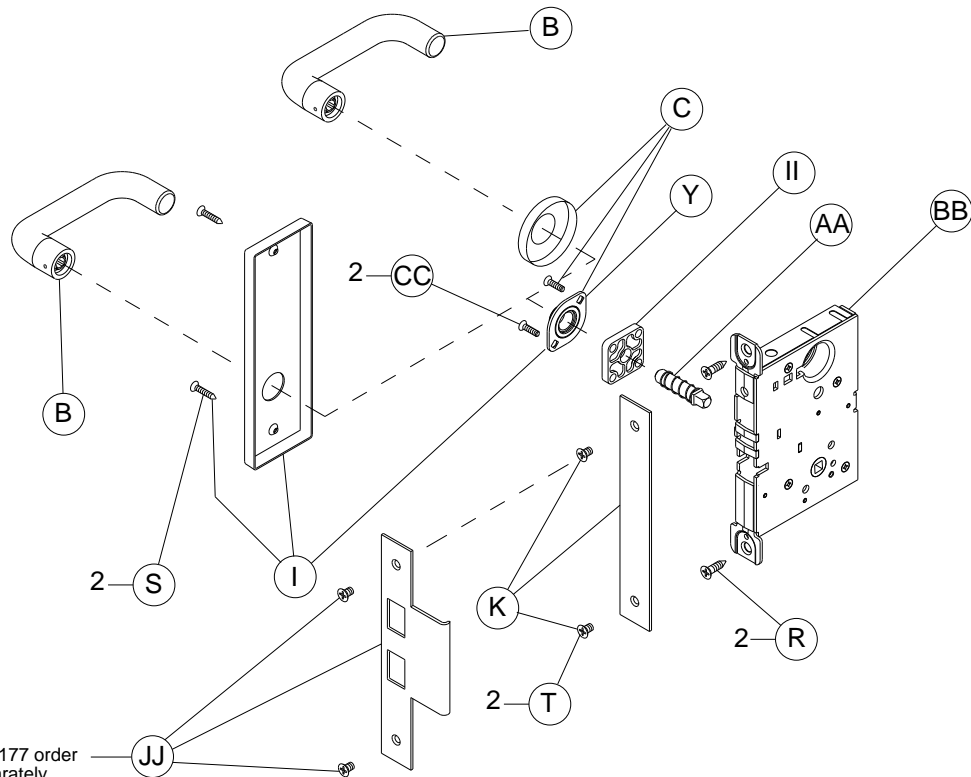

For discontinued function L9177 order L9175 and armor strike separately and specify hand of inactive door. Mount in place of blank armor.


Knobs

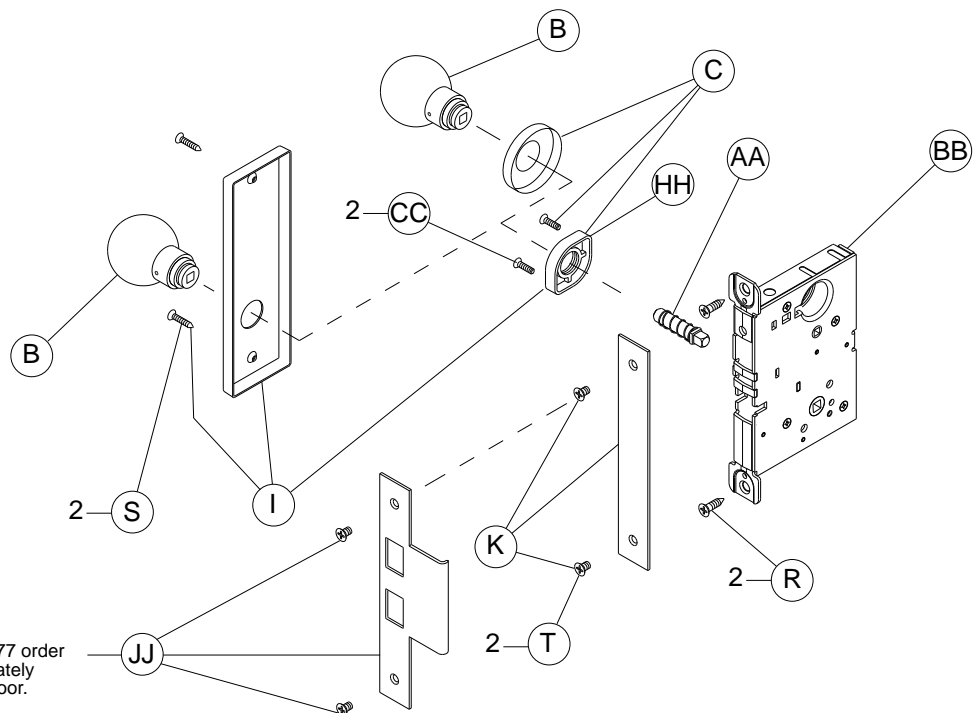

For discontinued function L9177 order L9175 and armor strike separately and specify hand of inactive door. Mount in place of blank armor.

Double dummy with case trim


L9176, L9178 (discontinued)

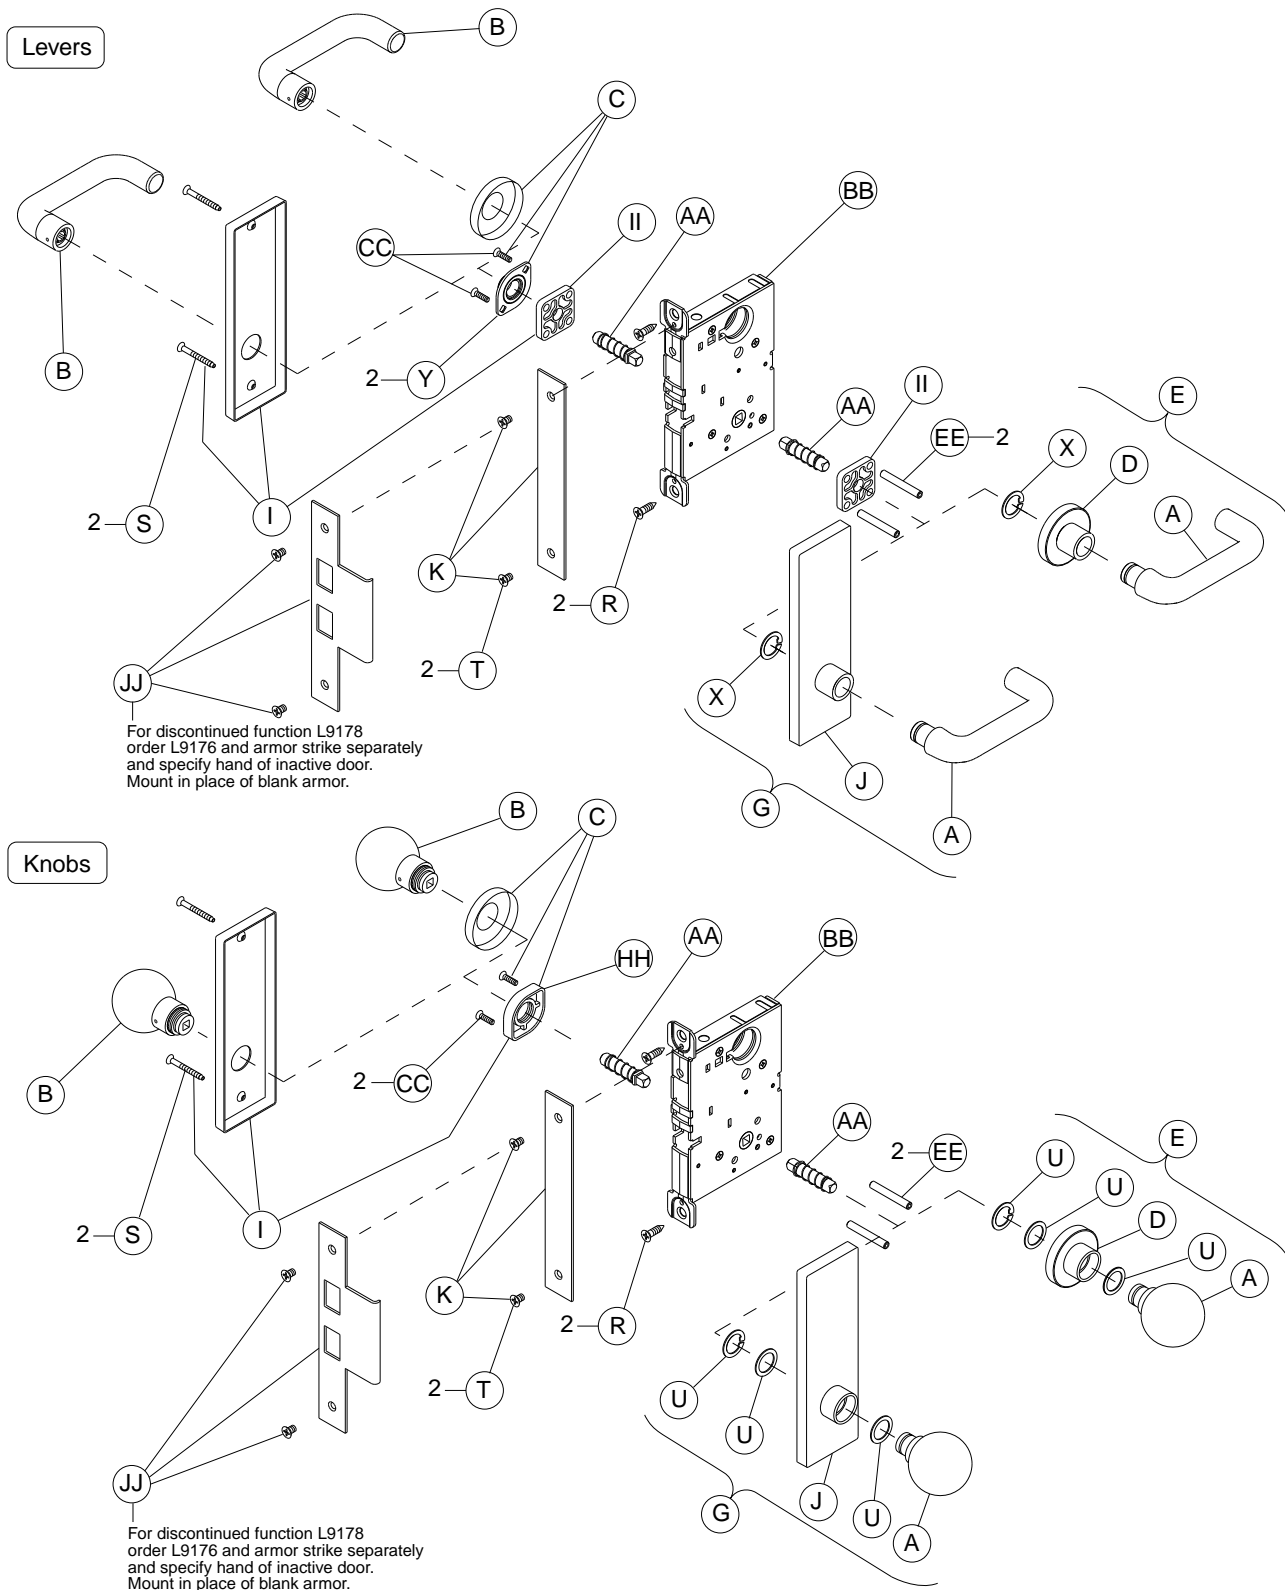


Deadbolt trim

L9460, L9462, L9463, L9464


L9460P

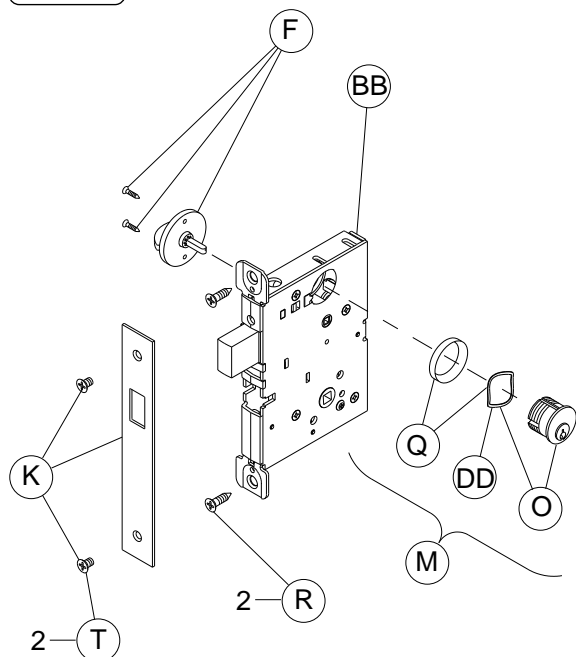


L9462P

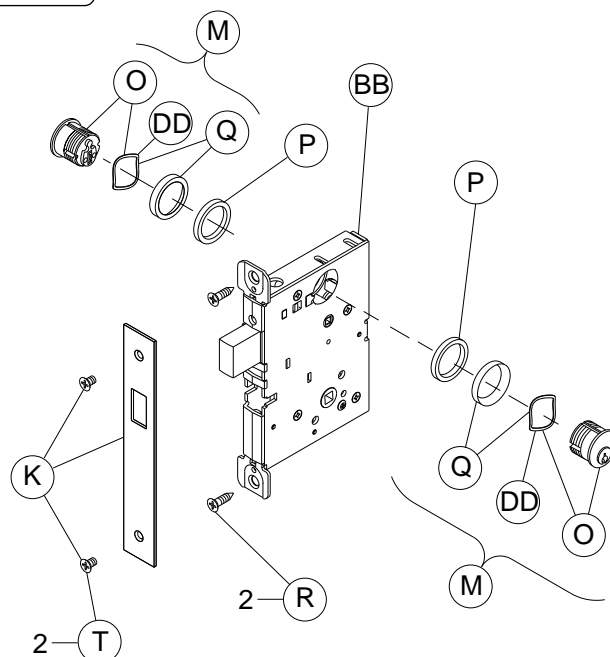

L9463P

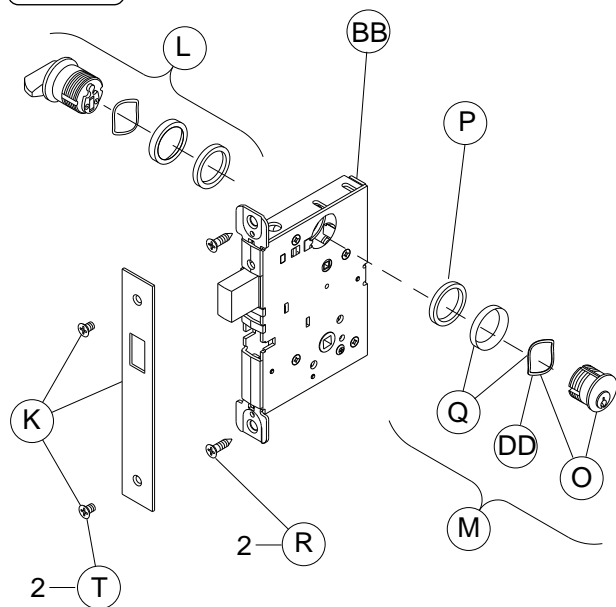


L9464P

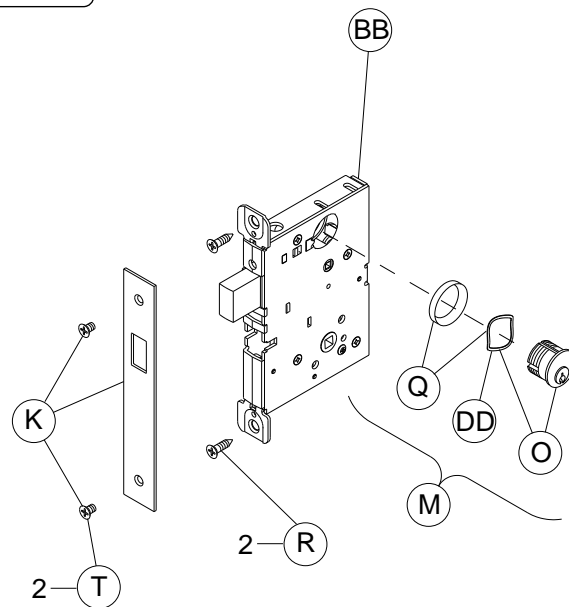


NOTE: Standard full face mortise cylinder shown.

 Levers



Fixed outside x turn trim

L9460 x XL11-886, L9480, LV9480, L9485, LV9485

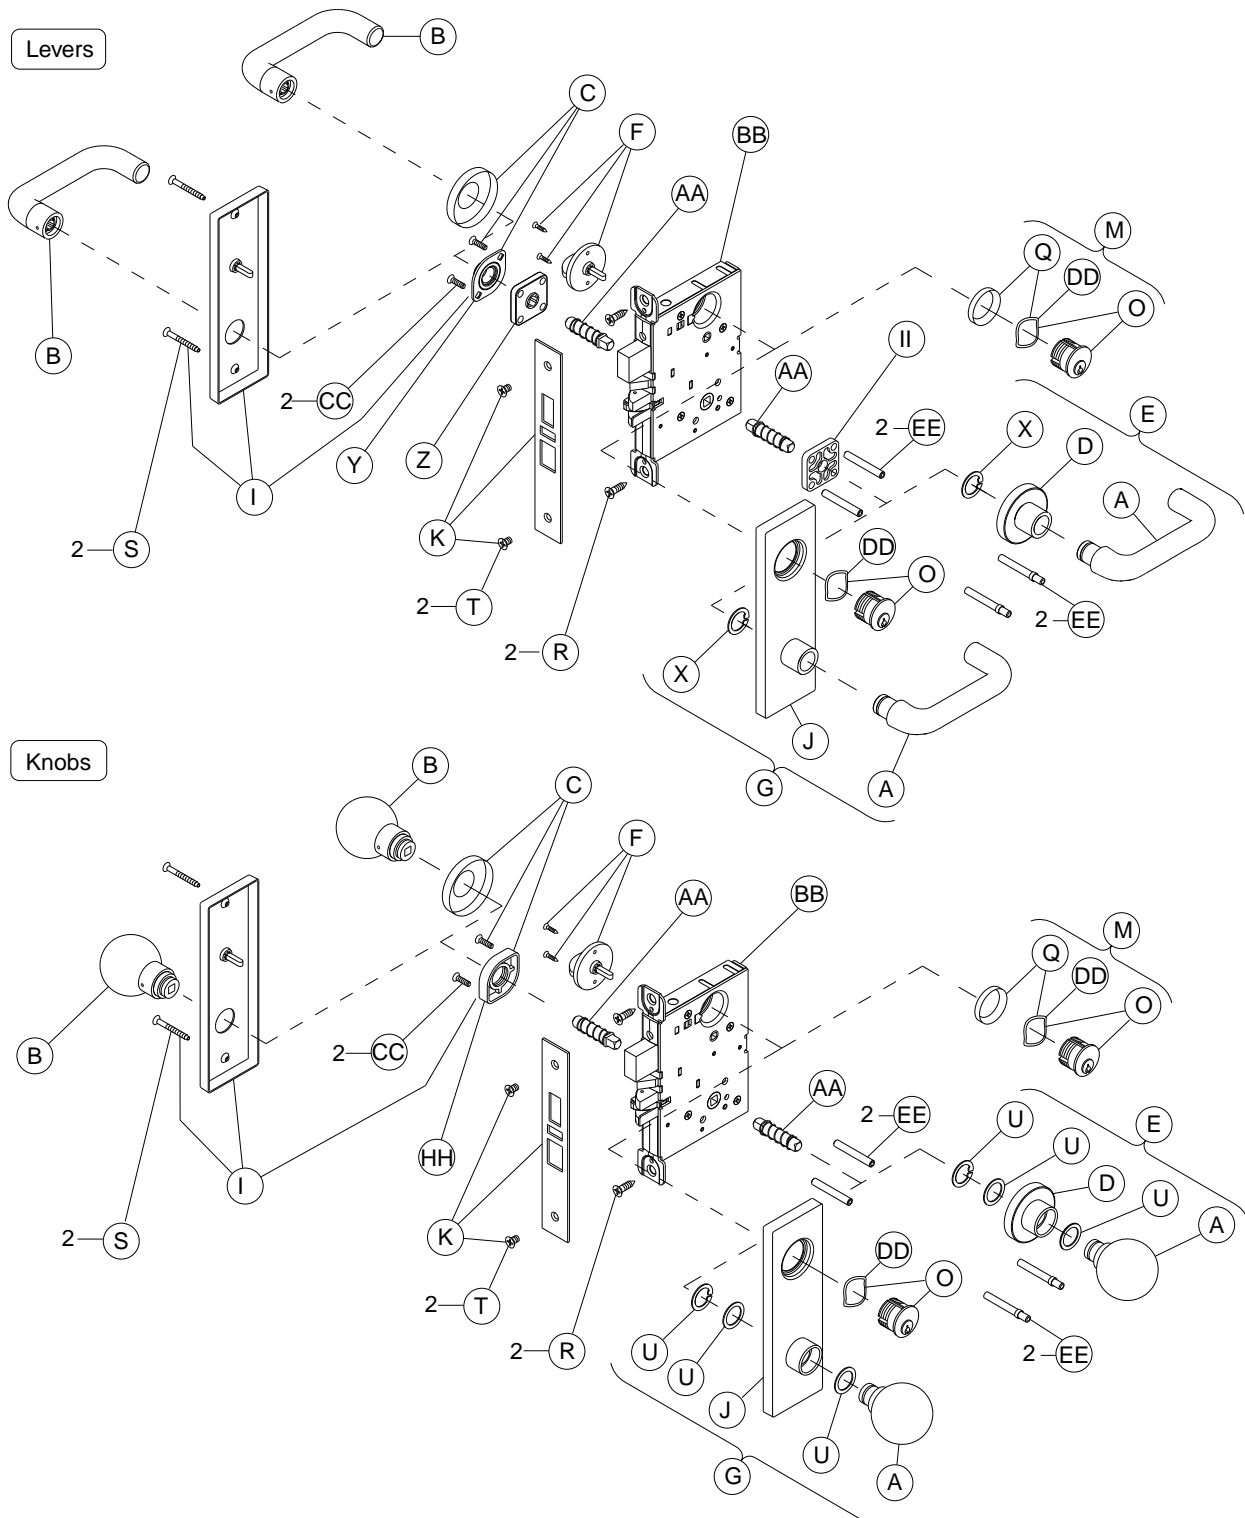

NOTES: L9460 x XL11-886 lock function has a deadbolt only. Lock case and armor front shown with latch, auxiliary latch, and deadbolt.
Standard full face mortise cylinder shown


Levers

Knobs

38 • Schlage • L-Series service manual

Prison lock trim

L9485 x XL11-557

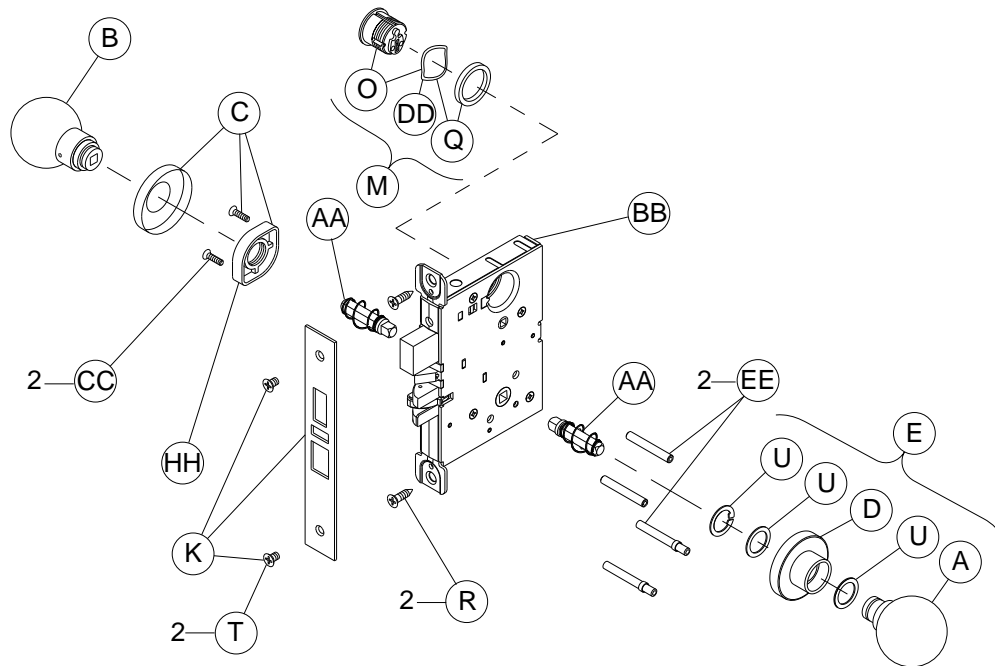

NOTE: Standard full face mortise cylinder shown.

Levers



‡ Not sold separately as a part.
* Available with rose trim only.

L9000 Trim assemblies chart

	P/N	Description	L9082	LV9082	L9082EL	L9082EU	L9110/XL11-741	L9175	L9176	L9177 (disc)	L9178 (disc)	L9440	LV9440	L9444*	LV9444*	L9453	LV9453	L9456	LV9456	L9457	LV9457	L9458	LV9458	L9460	L9460/XL11-635	L9460/XL11-886	L9462	L9462/XL11-886	L9463	L9464	L9464/XL11-886	L9465	L9466	L9473	L9480	LV9480	L9482/XL11-543	LV9482/XL11-543	L9485	LV9485	L9485/XL11-557**	L9486****	LV9486****	L9496	LV9496			
A	09-401	O/S knob and lever	
B	09-402	I/S knob and lever	
C	09-403	I/S rose	
D	09-404	O/S rose and bushing
E	Outside rose and knob/lever:																																															
	09-506	All designs except AST, AVA, MER
	09-655	AST, AVA, MER			
F	09-509	Thumbturn									
	L283-124	Coin turn outside											
G	Outside escutcheon x knob/lever except 93 lever:																																															
	09-550	L and N x blank																																									
	09-550/XL11-446	L x thumbturn†																																														
	09-551	L and N emergency button										.	.																																			
	09-553	L and N x full face cylinder
	09-554	L x concealed cylinder/indicator																																									.	.				
	09-555	L x full face cylinder/indicator																																											.	.		
H	09-611	Occupancy indicator																																									
I	Inside escutcheon for knob/lever:																																															
	09-632	L and N x blank																			
	09-633	L and N x thumbturn								
	09-635	L and N x full face cylinder										

† Not sold separately as a part.

* Available with rose trim only.

** Available with knob x rose trim only.

*** Not available with N escutcheon.

% L9486 and LV9486 available with "Occupied" indicator option. Specify 09-611 x L583-375.

L9000 Trim assemblies chart

	P/N	Description	L0170	L0172	L9010	LM9310	LM9325	L9040	LV9040	L9040/XL11-446**	LV9040/XL11-446**	L9044*	LV9044	L9050	LM9350	LV9050	LMV9350	L9056	LV9056	L9060	LV9060	L9070	LM9370	LV9070	LMV9370	L9071	LM9371	LV9071	LMV9371	L9076	LV9076	L9077	LV9077	L9080	LM9380	LV9080	LMV9380	L9080EL	LV9080EL	L9080EU	LV9080EU	L9080EL-RX	L9080EU-RX		
J	Outside escutcheon and bushing x knob/lever except 93 lever:																																												
	09-636	L and N x blank	.	.	.																																								
	09-636/ XL-446	L x thumbturn†								.	.																																		
	09-637	L and N x emergency button						.	.																																				
	09-639	L and N x full face cylinder												
	09-640	L x concealed cylinder, indicator																																											
	09-641	L x full face cylinder, indicator																																											
	Outside n escutcheon and bushing x 93 lever:																																												
	09-650	Blank	.	.	.																																								
	09-651	Emergency button																																							
	09-652	Full face cylinder											
K	1¼" armor front x schlage logo:																																												
	09-661	Blank																																											
	09-662	Latch																																		
	09-663	Latch and aux. latch			
	09-664	Latch and deadbolt																																											
	09-665	Deadbolt																																											
	09-666	Latch, aux. latch and deadbolt																																											
L	09-713	Latch, aux. latch less UL stamp																																							
	09-905	Classroom turn and 1⅝" blocking ring																																											
M	Full face cylinder with compression ring and spring:																																												
	20-001	Straight cam																	.	.																									
	30-001	Clover leaf cam										
	30-002	Hotel (handed)																																											

† Not sold separately as a part.

* Available with rose trim only.

** Not available with N escutcheon.

NOTE: Standard cylinder part numbers are shown for cylinder function locks. See page 115 for other cylinder options.

L9000 Trim assemblies chart

	P/N	Description	L9082	LV9082	L9082EL	L9082EU	L9110/XL11-741	L9175	L9176	L9177 (disc)	L9178 (disc)	L9440	LV9440	L9444*	LV9444*	L9453	LV9453	L9456	LV9456	L9457	LV9457	L9458	LV9458	L9460	L9460/XL11-635	L9460/XL11-886	L9462	L9462/XL11-886	L9463	L9464	L9464/XL11-886	L9465	L9466	L9473	L9480	LV9480	L9482/XL11-543	LV9482/XL11-543	L9485	LV9485	L9485/XL11-557**	L9486 ***§	LV9486 ***§	L9496	LV9496										
J	Outside escutcheon and bushing x knob/lever except 93 lever:																																																						
	09-636	L and N x blank				•		•		•																																													
	09-636/ XL-446	L x thumbturn‡																																																					
	09-637	L and N x emergency button										•	•																																										
	09-639	L and N x full face cylinder	•	•	•	•										•	•	•	•	•	•	•	•		•	•		•		•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•								
	09-640	L x concealed cylinder, indicator																																																					
	09-641	L x full face cylinder, indicator																																									•	•	•	•	•								
Outside n escutcheon and bushing x 93 lever:																																																							
09-650	Blank								•		•																																												
09-651	Emergency button											•	•																																										
09-652	Full face cylinder	•	•													•	•	•	•	•	•	•	•																																
K	1¼" armor front x Schlage logo:																																																						
	09-661	Blank					•	•	•																																														
	09-662	Latch																																																					
	09-663	Latch and aux. latch	•	•	•	•																																																	
	09-664	Latch and deadbolt											•	•	•	•			•	•	•	•																											•	•					
	09-665	Deadbolt																							•	•	•	•	•	•	•	•																							
	09-666	Latch, aux. latch and deadbolt															•	•				•	•																																
09-713	Latch, aux. latch less UL stamp																																																						
L	09-905	Classroom Turn and 1½" blocking ring																											•																										
M	Full face cylinder with compression ring and spring:																																																						
	20-001	Straight cam																																																					
	30-001	Clover leaf cam	2	2	•	•										•	•	•	•	2	2	2	2	•	•	•	2	2	•	•	•	•	2	•	•	•	•	2	•	•	•	2	2	•	•					•	•				
	30-002	Hotel (handed)																																																			•	•	•

† Not sold separately as a part.

* Available with rose trim only.

** Available with knob x rose trim only.

*** Not available with N escutcheon.

§ L9486 and LV9486 available with "Occupied" indicator option. Specify 09-611 x L583-375.

NOTE: Standard cylinder part numbers are shown for cylinder function locks. See page 115 for other cylinder options.

L9000 Trim assemblies chart

	P/N	Description	L0170	L0172	L9010	LM9310	LM9325	L9040	LV9040	L9040/XL11-446**	LV9040/XL11-446**	L9044*	LV9044	L9050	LM9350	LV9050	LMV9350	L9056	LV9056	L9060	LV9060	L9070	LM9370	LV9070	LMV9370	L9071	LM9371	LV9071	LMV9371	L9076	LV9076	L9077	LV9077	L9080	LM9380	LV9080	LMV9380	L9080EL	LV9080EL	L9080EU	LV9080EU	L9080EL-RX	L9080EU-RX
O	Full face cylinder with compression spring:																																										
	26-021	Straight cam																																									
	30-021	Clover leaf cam																																									
	30-022	Hotel (handed)																																									
P	36-082	Blocking ring																																									
Q	36-083	Compression ring and spring																																									
R	C203-736	Case mounting screw pack																																									
S	Escutcheon thru-bolts/screws:																																										
	K510-389	N escutcheon																																									
	L583-120	L escutcheon																																									
	L583-133	N escutcheon																																									
T	Escutcheon thru-bolts/screws:																																										
	L583-287	L escutcheon																																									
	K110-020	Armor screw pack																																									
	K110-550	Knob truarc rings and spacer pack																																									
V	K510-320	Dummy mounting plug																																									
W	K510-330	Emergency button																																									
X	L283-030	Lever truarc rings																																									
Y	L283-031	I/S Lever mounting plate																																									
Z	L283-040	Lever spring cage																																									
AA	Spindles and springs:																																										
	L283-060	Spindle and spring																																									
	L283-064	Double dummy																																									
	L283-065	Single dummy																																									
	XL11-766	Free spinning spindle and spring†																																									

† Not sold separately as a part.

* Available with rose trim only.

** Not available with N escutcheon.

NOTE: Standard cylinder part numbers are shown for cylinder function locks. See page 115 for other cylinder options.

L9000 Trim assemblies chart

	P/N	Description	L9082	LV9082	L9082EL	L9082EU	L9110/XL11-741	L9175	L9176	L9177 (disc)	L9178 (disc)	L9440	LV9440	L9444*	LV9444*	L9453	LV9453	L9456	LV9456	L9457	LV9457	L9458	LV9458	L9460	L9460/XL11-635	L9460/XL11-886	L9462	L9462/XL11-886	L9463	L9464	L9464/XL11-886	L9465	L9466	L9473	L9480	LV9480	L9482/XL11-543	LV9482/XL11-543	L9485	LV9485	L9485/XL11-557**	L9486***%	LV9486***%	L9496	LV9496						
O	Full face cylinder with compression spring:																																																		
	26-021	Straight cam																																																	
	30-021	Clover leaf cam	2	2	2	2	2	2	.	.	.	2	2	2	2	2			
	30-022	Hotel (handed)																																								.	.	.							
P	36-082	Blocking ring	2	2	2	2																	2	2	.				2				2	2													
Q	36-083	Compression ring and spring	2	2	2	2	2	2	.	.	.	2	2	2			
R	C203-736	Case mounting screw pack	2	2	2	2			
S	Escutcheon thru-bolts/screws:																																																		
	K510-389	N escutcheon	2	2	2	2	2					2	2			2	2	2	2	2	2	2	2	2	2	2	2	2			2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2		
	L583-120	L escutcheon	2	2	2	2	2					2	2			2	2	2	2	2	2	2	2	2	2	2	2	2			2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	
	L583-133	N escutcheon						2	2	2	2																																								
	L583-287	L escutcheon						2	2	2	2																																						2	2	
T	K110-020	Armor screw pack		
U	K110-550	Knob truarc rings and spacer pack		
V	K510-320	Dummy mounting plug																																																	
W	K510-330	Emergency button										.	.																																						
X	L283-030	Lever truarc rings	
Y	L283-031	I/S Lever mounting plate	
Z	L283-040	Lever spring cage		2	2	2	2					2	2	2	2	2	2	2	2	2	2	2	2	2	2	2		.	.		.	2	2	2	2	.	2		2	2	2	2	2	2	2	2	2	2	2	2	
AA	Spindles and springs:																																																		
	L283-060	Spindle and spring	2	2			2	.	2	.	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2			2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2
	L283-064	Double dummy			.	.																																													
	L283-065	Single dummy																																																	
	XL11-766	Free spinning spindle and spring†																																														.			

† Not sold separately as a part.

* Available with rose trim only.

** Available with knob x rose trim only.

*** Not available with N escutcheon.

§ L9486 and LV9486 available with "Occupied" indicator option. Specify 09-611 x L583-375.

NOTE: Standard cylinder part numbers are shown for cylinder function locks. See page 115 for other cylinder options.

L9000 Trim assemblies chart

	P/N	Description	L0170	L0172	L9010	LM9310	LM9325	L9040	LV9040	L9040/XL11-446**	LV9040/XL11-446**	L9044*	LV9044	L9050	LM9350	LV9050	LMV9350	L9056	LV9056	L9060	LV9060	L9070	LM9370	LV9070	LMV9370	L9071	LM9371	LV9071	LM9371	L9076	LV9076	L9077	LV9077	L9080	LM9380	LV9080	LMV9380	L9080EL	LV9080EL	L9080EU	LV9080EU	L9080EL-RX***	LV9080EL-RX***			
BB	Assembled lock case:																																													
	L283-039	Classroom holdback																													.		.													
	L283-062	Privacy w/ deadbolt																																												
	L283-085	L9082 EL																																												
	L283-086	L9082 EU																																												
	L283-126	Office with simultaneous retraction																	.																											
	L283-131	Passage			.																																									
	L283-132	Privacy, L					.			.		.																																		
	L283-133	Office, classroom, apartment security																																
	L283-134	Storeroom																																	.											
	L283-137	Entrance																																												
	L283-138	Corridor, classroom security x deadbolt																																												
	L283-139	L9000 deadbolt																																												
	L283-140	Closet, storeroom and dormitory																																												
	L283-141	Hotel/hotel x indicator																																												
	L283-142	Electrically locked																																						.			.			
	L283-143	Electrically unlocked																																								.		.		
	L283-144	Single dummy with case																																												
	L283-145	Double dummy with case																																												
	L283-146	Institution																																												
	L283-170	Office, classroom, apartment security, LV ‡																														
	L283-171	Privacy, LV ‡							.		.		.																																	
	L283-172	Classroom holdback, LV ‡																															.		.											

‡ Not sold separately as a part.

* Available with rose trim only.

** Available with knob x rose trim only.

*** Not available with N escutcheon.

L9000 Trim assemblies chart

	P/N	Description	L9082	LV9082	L9082EL	L9082EU	L9110/XL11-741	L9175	L9176	L9177 (disc)	L9178 (disc)	L9440	LV9440	L9444*	LV9444**	L9453	LV9453	L9456	LV9456	L9457	LV9457	L9458	LV9458	L9460	L9460/XL11-635	L9460/XL11-886	L9462	L9462/XL11-886	L9463	L9464	L9464/XL11-886	L9465	L9466	L9473	L9480	LV9480	L9482/XL11-543	LV9482/XL11-543	L9485	LV9485	L9485/XL11-557**	L9486***%g	LV9486***%g	L9496	LV9496																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																													
BB	Assembled lock case:																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																									

‡ Not sold separately as a part.

* Available with rose trim only.

** Available with knob x rose trim only.

*** Not available with N escutcheon.

⌘ L9486 and LV9486 available with "Occupied" indicator option. Specify 09-611 x L583-375.

L9000 Trim assemblies chart

	P/N	Description	L0170	L0172	L9010	LM9310	LM9325	L9040	LV9040	L9040/XL11-446**	LV9040/XL11-446**	L9044*	LV9044	L9050	LM9350	LV9050	LMV9350	L9056	LV9056	L9060	LV9060	L9070	LM9370	LV9070	LMV9370	L9071	LM9371	LV9071	LMV9371	L9076	LV9076	L9077	LV9077	L9080	LM9380	LV9080	LMV9380	L9080EL	LV9080EL	L9080EU	LV9080EU	L9080EL-RX***	LV9080EU-RX***
BB	Assembled lock case:																																										
	L283-173	Storeroom, LV‡																																									
	L283-174	Electrically locked, LV‡																																									
	L283-175	Electrically unlocked, LV‡																																									
	L283-176	Entrance, LV‡																																									
	L283-177	Corridor, classroom security x deadbolt, LV‡																																									
	L283-178	Hotel/Hotel x indicator, LV‡																																									
	L283-180	Office with simultaneous retraction, LV‡																																									
	L283-181	Privacy with deadbolt, LV‡																																									
	L283-182	Institution, LV‡																																									
	L283-183	Institution deadbolt, LV‡																																									
	L283-146	Institution deadbolt‡																																									
	XL11-557	Prison‡																																									
	L283-139	Deadbolt with fixed trim‡																																									
	XL11-741	Double dummy with active knob/ lever‡																																									
	L283-139	Deadbolt retract x inside knob/lever‡																																									
	L283-310	Classroom security with auxiliary latch x deadbolt																																									
	L283-311	Classroom security with auxiliary latch x deadbolt, LV‡																																									
	L283-314	Passage/Exit x multipoint																																									
	L283-316	Office, inner entry x multipoint																																									
	L283-317	Office, inner entry x multipoint, LV‡																																									

‡ Not sold separately as a part.

* Available with rose trim only.

** Available with knob x rose trim only.

*** Not available with N escutcheon.

L9000 Trim assemblies chart

P/N	Description	L9082	LV9082	L9082EL	L9082EU	L9110/XL11-741	L9175	L9176	L9177 (disc)	L9178 (disc)	L9440	LV9440	L9444*	LV9444**	L9453	LV9453	L9456	LV9456	L9457	LV9457	L9458	LV9458	L9460	L9460/XL11-635	L9460/XL11-886	L9462	L9462/XL11-886	L9463	L9464	L9464/XL11-886	L9465	L9466	L9473	L9480	LV9480	L9482/XL11-543	LV9482/XL11-543	L9485	LV9485	L9485/XL11-557**	L9486***%	LV9486*** %	L9496	LV9496	
BB	Assembled lock case:																																												
	L283-173	Storeroom, LV‡																																											
	L283-174	Electrically locked, LV‡																																											
	L283-175	Electrically unlocked, LV‡																																											
	L283-176	Entrance, LV‡														*																													
	L283-177	Corridor, classroom security x deadbolt, LV‡																*		*																									*
	L283-178	Hotel/hotel x indicator, LV‡																																			*		*		*				
	L283-180	Office with simultaneous retraction, LV‡																																											
	L283-181	Privacy with deadbolt, LV‡										*		*																															
	L283-182	Institution, LV‡	*																																										
	L283-183	Institution deadbolt, LV‡																																						*					
	L283-146	Institution deadbolt‡																																				*							
	XL11-557	Prison‡																																								*			
	L283-139	Deadbolt with fixed trim‡																							*																				
	XL11-741	Double dummy with active knob/lever‡				*																																							
	L283-139	Deadbolt retract x inside knob/lever‡																							*	*	*																		
	L283-310	Classroom security with auxiliary latch x deadbolt																			*																								
	L283-311	Classroom security with auxiliary latch x deadbolt, LV‡																				*																							
	L283-314	Passage/Exit x multipoint																																											
	L283-316	Office, inner entry x multipoint																																											
	L283-317	Office, inner entry x multipoint, LV‡																																											

‡ Not sold separately as a part.

* Available with rose trim only.

** Available with knob x rose trim only.

*** Not available with N escutcheon.

% L9486 and LV9486 available with "Occupied" indicator option. Specify 09-611 x L583-375.

L9000 Trim assemblies chart

	P/N	Description	L0170	L0172	L9010	LM9310	LM9325	L9040	LV9040	L9040/XL11-446**	LV9040/XL11-446**	L9044*	LV9044	L9050	LM9350	LV9050	LMV9350	L9056	LV9056	L9060	LV9060	L9070	LM9370	LV9070	LMV9370	L9071	LM9371	LV9071	LMV9371	L9076	LV9076	L9077	LV9077	L9080	LM9380	LV9080	LMV9380	L9080EL	LV9080EL	L9080EU	LV9080EU	L9080EL-RX***	L9080EU-RX***		
	Mounting trim screws:																																												
CC	F506-237	Wood doors x L escutcheon	2																																										
	L583-066	Wood/metal doors x rose/escutcheon x knob/lever except single dummy		2	2	2		2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	
	L583-290	Wood/metal doors x rose/escutcheon x lever	2																																										
	L583-291	Wood/metal doors x rose/escutcheon x knob	2																																										
DD	L583-195	Compression spring													2	2	2	2	2	2	2	.	.	2	2	2
EE	L583-212	Mounting posts, L		2	2	2		2		2		2	2	2	2		2	2	2	2	2	2		2	2		2	2		2	2	2	2	2	2	2		2	2		2	2	2	2	
	L583-497	Mounting posts, LV						2		2		2			2	2		2	2	2			2	2		2	2		2	2		2	2		2	2		2	2		2	2			
FF	L583-233	Emergency turn					.	.																																					
GG	L583-286	Dummy mounting bar	.	.																																									
HH	L583-321	I/S Knob mounting plate
II	L583-322	Lever spacer	.	2																																.	.								
JJ	10-091	Armor strike																																											
KK	L283-150	Mounting plate					.																																						

- * Available with rose trim only.
- ** Available with knob x rose trim only.
- ** Available with knob x rose trim only.
- *** Not available with N escutcheon.

L9000 Trim assemblies chart

	P/N	Description	L9082	LV9082	L9082EL	L9082EU	L9110/XL11-741	L9175	L9176	L9177 (disc)	L9178 (disc)	L9440	LV9440	L9444*	LV9444*	L9453	LV9453	L9456	LV9456	L9457	LV9457	L9458	LV9458	L9460	L9460/XL11-635	L9460/XL11-886	L9462	L9462/XL11-886	L9463	L9464	L9464/XL11-886	L9465	L9466	L9473	L9480	LV9480	L9482/XL11-543	LV9482/XL11-543	L9485	LV9485	L9485/XL11-557**	L9486***%	LV9486***%	L9496	LV9496						
	Mounting plate screws:																																																		
CC	F506-237	Wood doors x L escutcheon																																																	
	L583-066	Wood/metal doors x rose/escutcheon x knob/lever except single dummy	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2				2	2	2	2	2		2	2	2	2	2	2	2	2	2	2	2	2		
	L583-290	Wood/metal doors x rose/escutcheon x lever						2		2																																									
	L583-291	Wood/metal doors x rose/escutcheon x knob						2		2																																									
DD	L583-195	Compression spring	2	2	2	2										•	•	•	•	2	2	2	2	•	•	•	2	2	2	•	•	•	•	2	•	•	•	•	2	2	•	•	•	•	•	•	•	•	•	•	
EE	L583-212	Mounting posts, L	2		2	2	2		2		2	2		2		2		2		2		2			2	2		2			2	2	2	2	2		2		2		2	2	2	2	2	2	2				
	L583-497	Mounting posts, LV		2									2		2		2		2		2		2													2		2		2				2		2		2			
FF	L583-233	Emergency turn										•	•																																						
GG	L583-286	Dummy mounting bar																																																	
HH	L583-321	I/S Knob mounting plate	•		•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•			•	•	•					•	•	•	•	•	•		•	•	•	•	•	•	•	•	•	•	•	•	
II	L583-322	Lever spacer	2				•	2	•	2															2	•	•	•				•				•		2		•	2	•		•		•					
JJ	10-091	Armor strike								•	•																																								
KK	L283-150	Mounting plate																																																	

* Available with rose trim only.

** Available with knob x rose trim only.

*** Not available with N escutcheon.

% L9486 and LV9486 available with "Occupied" indicator option. Specify 09-611 x L583-375.

L400 Trim assemblies chart


	P/N	Description	L460	L462	L463	L464	L480	L496
F	Outside rose and knob/lever:							
	09-509	Thumbturn	.				.	.
H	1¼" armor front x schlage logo:							
	09-611	Occupancy Indicator						.
K	09-717	L400-Series deadbolt
L	09-905	Classroom Turn and 1½" Blocking Ring			.			
M	Full face cylinder with compression ring and spring:							
	30-001	Clover leaf cam	.	2	.	.		.
O	Full face cylinder with compression spring:							
	30-021	Clover leaf cam	.	2	.	.		.
P	36-082	Blocking ring		2	.			
Q	36-083	Compression ring and spring	.	2	.	.		.
R	C203-786	Case mounting screw pack
T	Escutcheon thru-bolts/screws:							
	K110-020	Armor screw pack
BB	Assembled lock case:							
	L283-099	L400 deadbolt
DD	L583-195	Compression spring	.	2	.	.		.

Lock case assemblies



55	L460, L462, L463, L464, L480, L496
56	L9010
57	LM9310, LM9325
58	L9040, L9040 x XL11-446, L9044
59	LV9040, LV9040 x XL11-446, LV9044
60	L9050, L9060, L9070, L9071
61	LV9050, LV9060, LV9070, LV9071
62	LM9350, LM9370, LM9371
63	LMV9350, LMV9370, LMV9371
64	L9056
65	LV9056
66	L9076, L9077
67	LV9076, LV9077
68	L9080
69	LV9080
70	LM9380
71	LMV9380
72	L9080EL, L9080EL-RX
73	LV9080EL
74	L9080EU, L9080EU-RX
75	LV9080EU
76	L9082
77	LV9082
78	L9082EL
79	L9082EU
80	L9110 x XL11-741
81	L9175
82	L9176
83	L9440, L9444
84	LV9440, LV9444
85	L9453
86	LV9453
87	L9456, L9457, L9496
88	LV9456, LV9457, LV9496
89	L9458
90	LV9458
91	L9460, L9462, L9463, L9464
92	L9460 x XL11-635
93	L9460 x XL11-886, L9462 x XL11-886, L9464 x XL11-886
94	L9465, L9466, L9473
95	L9480, L9485, L9486, L9486 x L583-375
96	LV9480, LV9485, LV9486, LV9486 x L583-375
97	L9482 x XL11-543
98	LV9482 x XL11-543
99	L9485 x XL11-557
100	Lock case assembly compatibility

L460, L462, L463, L464, L480, L496

Assembled Lock Case L283-099

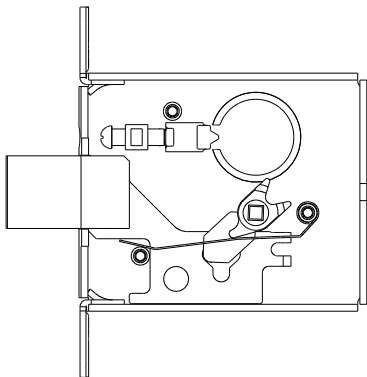


Number	Description	Part Number
3	Deadbolt	L283-003
10	Cylinder Plate & Screw	L283-055
14	L400 Lock Case	L283-128
27	Turn Hub	L583-029
30	Turn Hub Spring	L583-035
51	1 1/4" Faceplate Tab	L583-426
52	Case Cover Screws	L583-454
53	Cylinder Retainer Screw	L583-481
55	Cylinder Retainer	L583-490
56	Screw Plate	L583-492
57	Lock Case Cover	L583-494

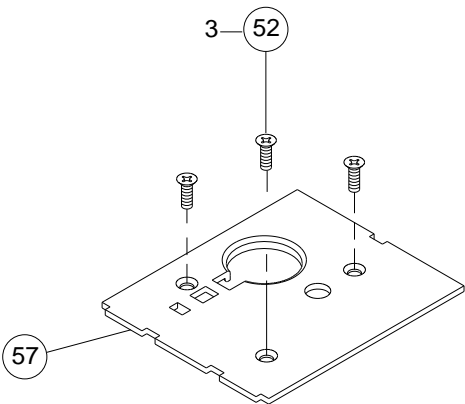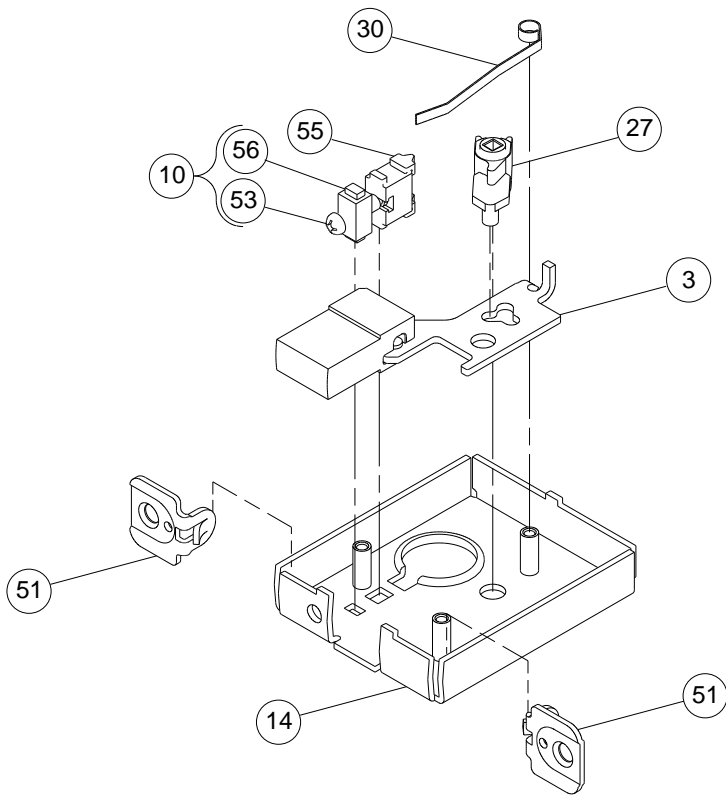

L9010


Assembled Lock Case L283-131

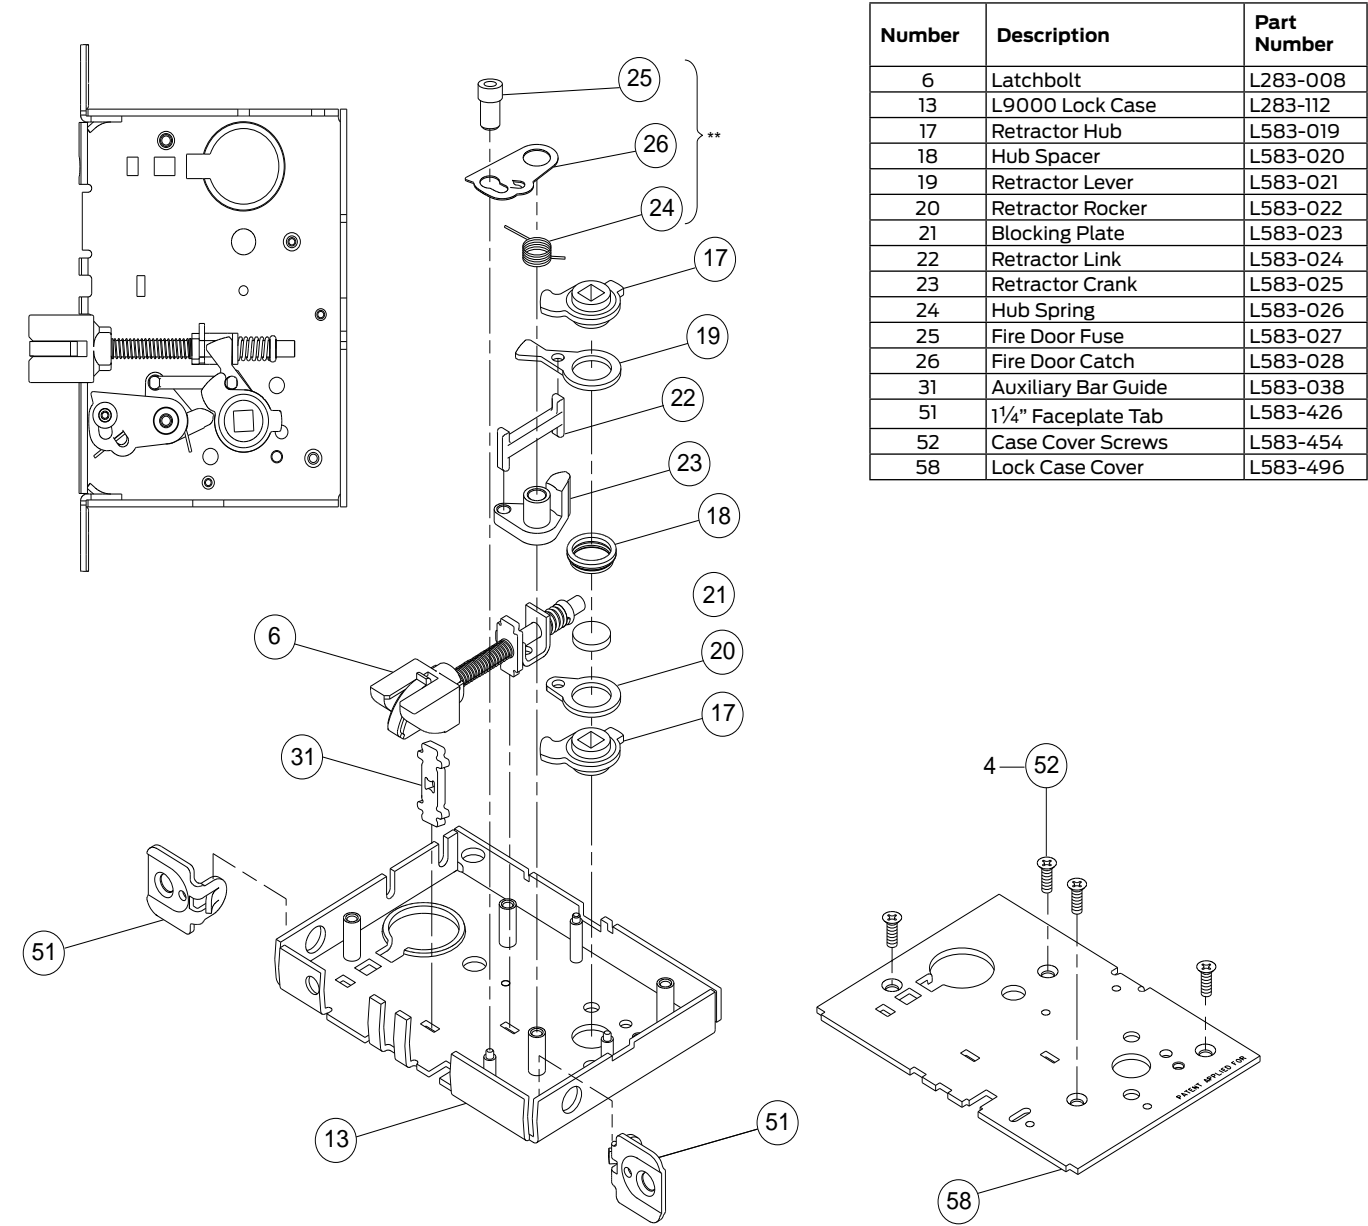


** See "Assembly of lock case parts" on page 101.

LM9310, LM9325

Assembled Lock Case L283-314

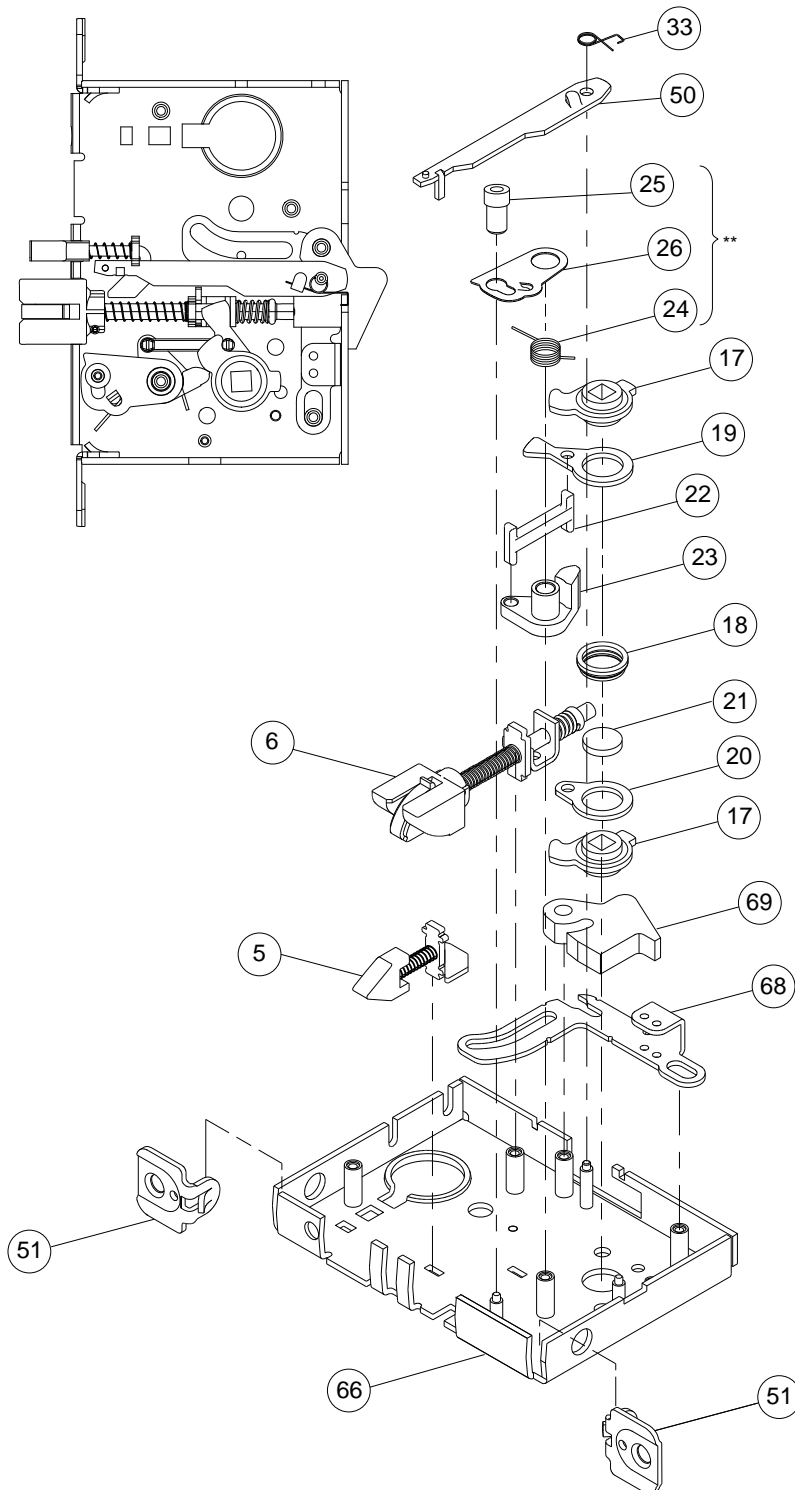


Number	Description	Part Number
5	Auxiliary Latchbolt	L283-006
6	Latchbolt	L283-336
17	Retractor Hub	L583-019
18	Hub Spacer	L583-020
19	Retractor Lever	L583-021
20	Retractor Rocker	L583-022
21	Blocking Plate	L583-023
22	Retractor Link	L583-024
23	Retractor Crank	L583-025
24	Hub Spring	L583-026
25	Fire Door Fuse	L583-027
26	Fire Door Catch	L583-028
33	Stop Spring	L583-044
50	Auxiliary Stop	L583-196
51	1 1/4" Faceplate Tab	L583-426
52	Case Cover Screws	L583-454
66	LM9000 Lock Case	L283-312
67	LM9000 Lock Case Cover	L583-491
68	Locking Link	L583-505
69	Lifter	L583-506

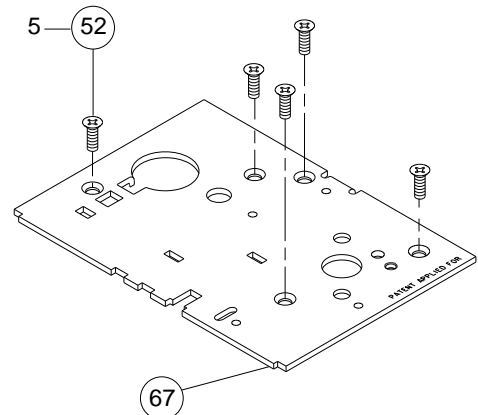


** See "Passage latch trim" on page 23.

L9040, L9040 x XL11-446, L9044

Assembled Lock Case L283-132

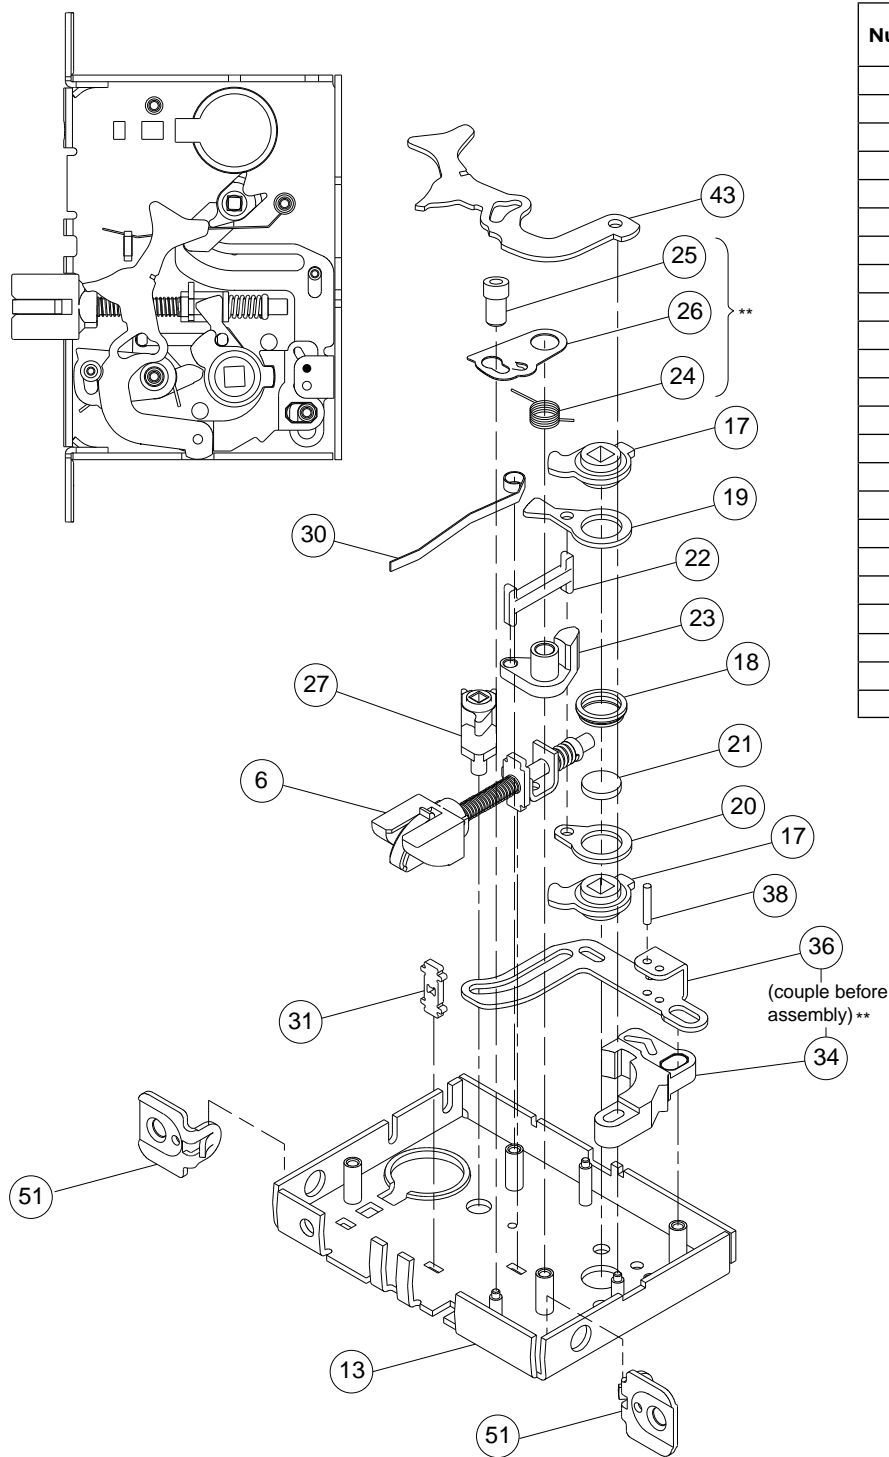


Number	Description	Part Number
6	Latchbolt	L283-008
13	L9000 Lock Case	L283-112
17	Retractor Hub	L583-019
18	Hub Spacer	L583-020
19	Retractor Lever	L583-021
20	Retractor Rocker	L583-022
21	Blocking Plate	L583-023
22	Retractor Link	L583-024
23	Retractor Crank	L583-025
24	Hub Spring	L583-026
25	Fire Door Fuse	L583-027
26	Fire Door Catch	L583-028
27	Turn Hub	L583-029
30	Turn Hub Spring	L583-035
31	Auxiliary Bar Guide	L583-038
34	Locking Catch	L583-045
36	Locking Link	L583-048
38	Link Pin	L583-050
43	Simultaneous Retractor	L583-058
51	1 1/4" Faceplate Tab	L583-426
52	Case Cover Screws	L583-454
54	Lock Handing Screw	L583-485
58	Lock Case Cover	L583-496

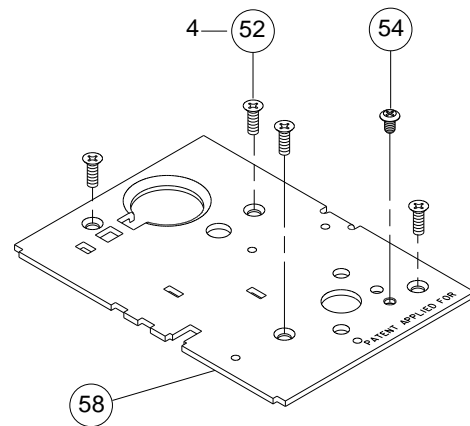


** See "Passage latch trim" on page 23.

LV9040, LV9040 x XL11-446, LV9044

Assembled Lock Case L283-171

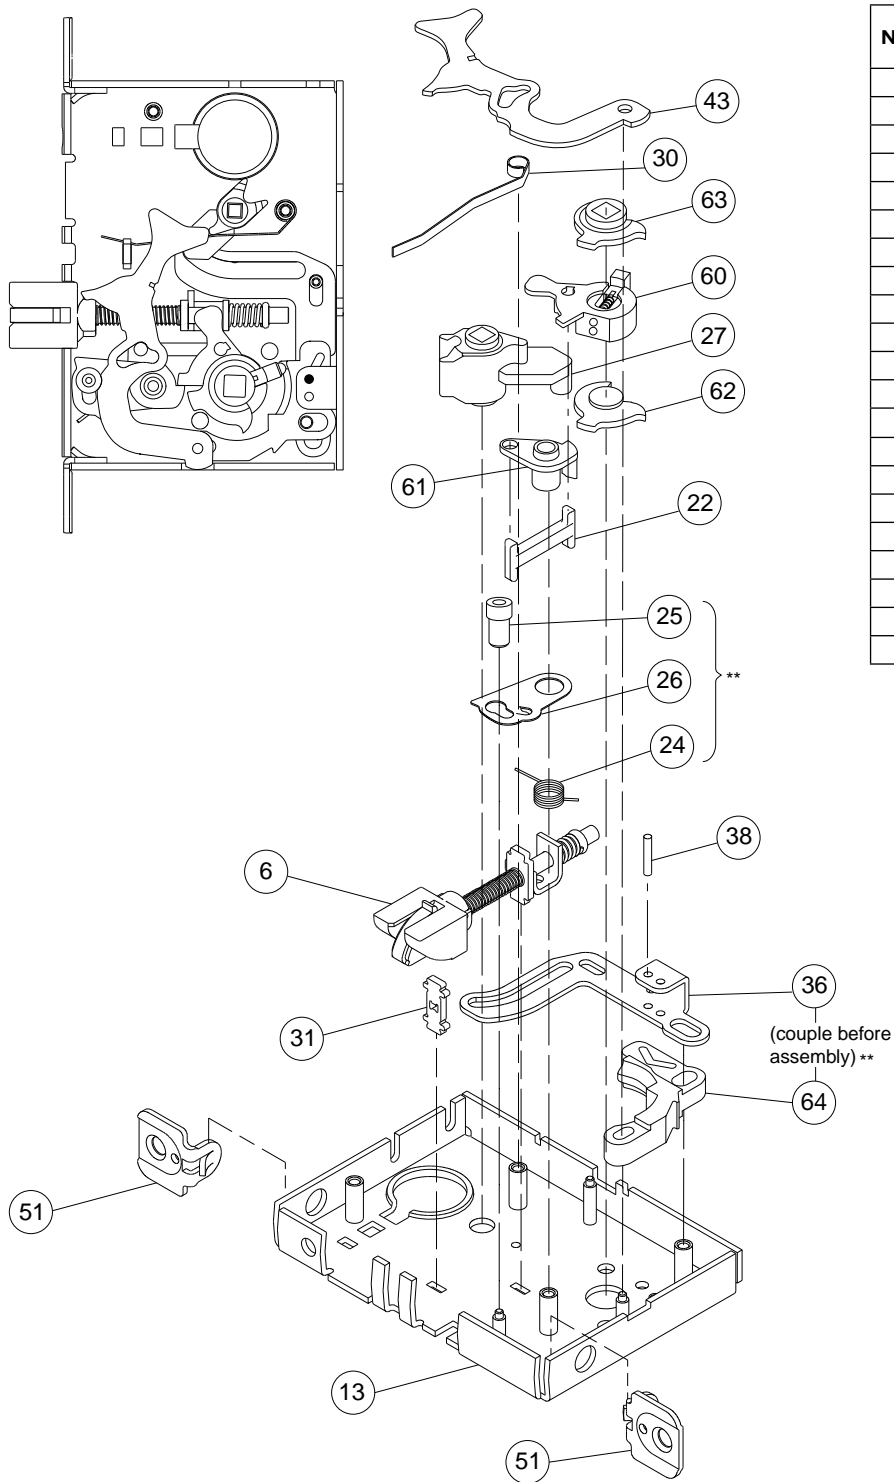


Number	Description	Part Number
6	Latchbolt	L283-008
13	L9000 Lock Case	L283-112
22	Retractor Link	L583-024
24	Hub Spring	L583-026
25	Fire Door Fuse	L583-027
26	Fire Door Catch	L583-028
27	Turn Hub	L583-029
30	Turn Hub Spring	L583-035
31	Auxiliary Bar Guide	L583-038
36	Locking Link	L583-048
38	Link Pin	L583-050
43	Simultaneous Retractor	L583-058
51	1 1/4" Faceplate Tab	L583-426
52	Case Cover Screws	L583-454
54	Lock Handing Screw	L583-485
58	Lock Case Cover	L583-496
60	Retractor Lever Assy	L283-147
61	Crank Retractor	L583-383
62	Bottom Hub	L583-386
63	Top Hub	L583-387
64	Retractor Catch	24061897

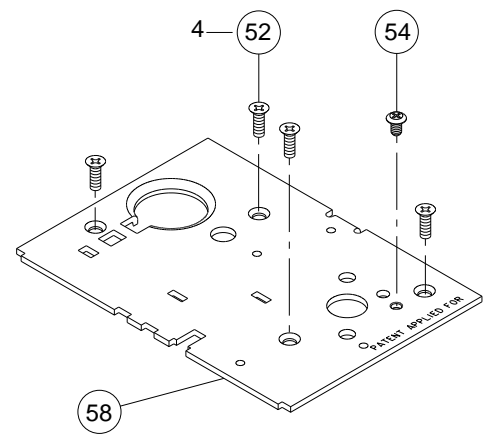


** See "Passage latch trim" on page 23.

L9050, L9060, L9070, L9071

Assembled Lock Case L283-133

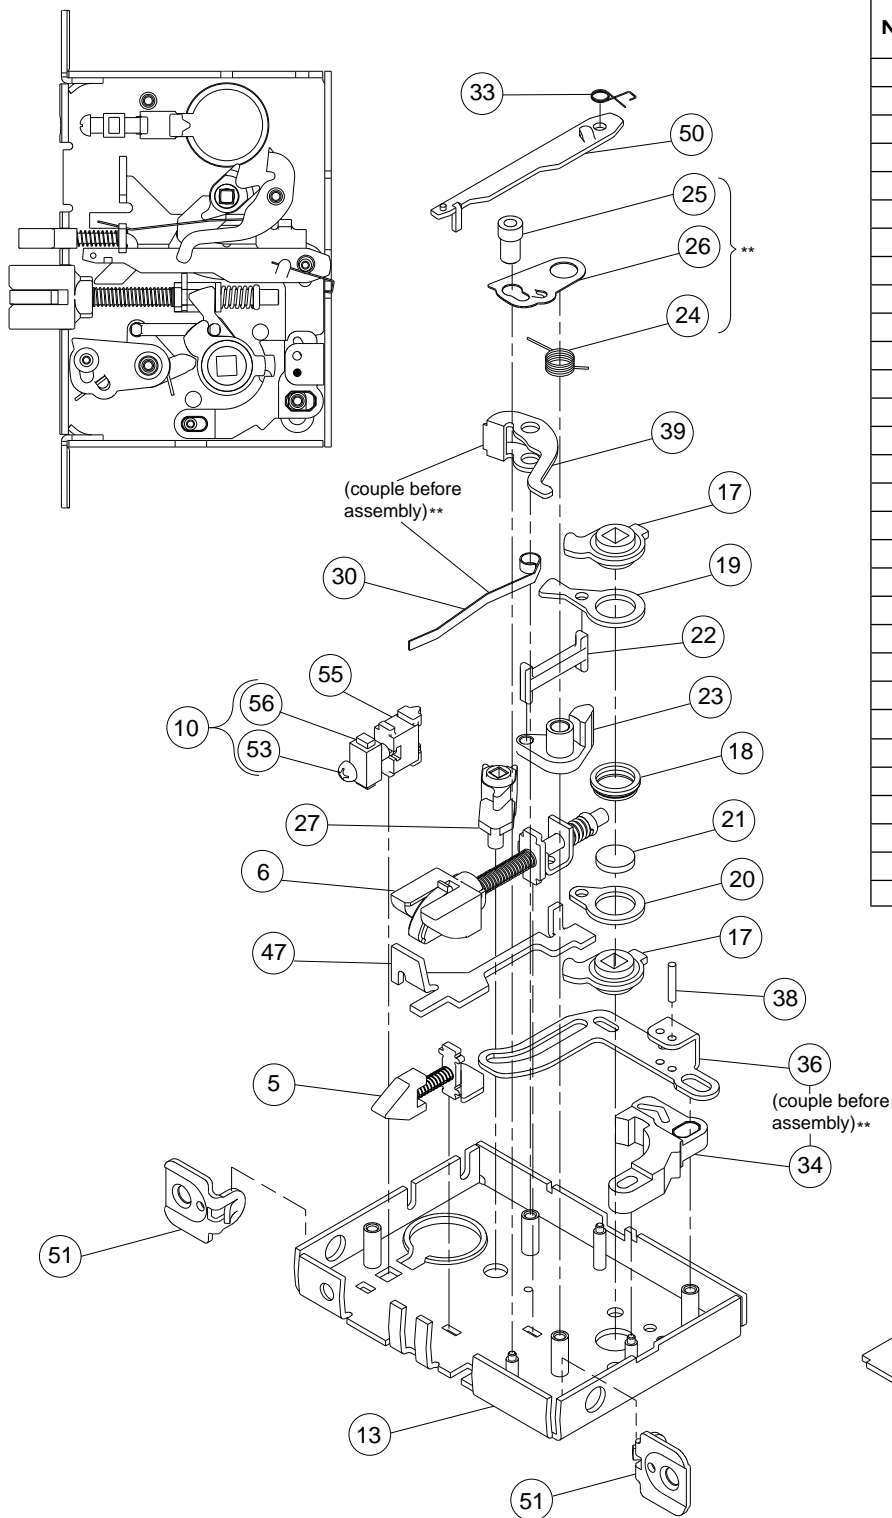


Number	Description	Part Number
5	Auxiliary Latchbolt	L283-006
6	Latchbolt	L283-008
10	Cylinder Plate & Screw	L283-055
13	L9000 Lock Case	L283-112
17	Retractor Hub	L583-019
18	Hub Spacer	L583-020
19	Retractor Lever	L583-021
20	Retractor Rocker	L583-022
21	Blocking Plate	L583-023
22	Retractor Link	L583-024
23	Retractor Crank	L583-025
24	Hub Spring	L583-026
25	Fire Door Fuse	L583-027
26	Fire Door Catch	L583-028
27	Turn Hub	L583-029
30	Turn Hub Spring	L583-035
33	Stop Spring	L583-044
34	Locking Catch	L583-045
36	Locking Link	L583-048
38	Link Pin	L583-050
39	Transfer Lever	L583-051
47	Transfer Lifter	L583-156
50	Auxiliary Stop	L583-196
51	1 1/4" Faceplate Tab	L583-426
52	Case Cover Screws	L583-454
53	Cylinder Retainer Screw	L583-481
54	Lock Handing Screw	L583-485
55	Cylinder Retainer	L583-490
56	Screw Plate	L583-492
58	Lock Case Cover	L583-496

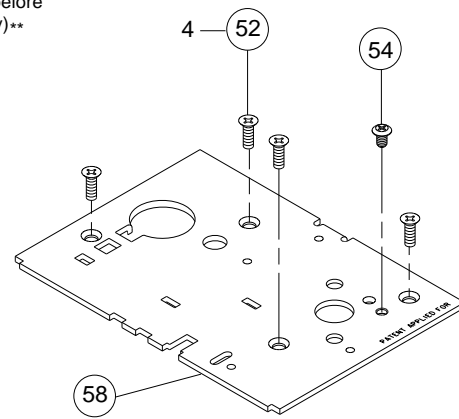

** See "Passage latch trim" on page 23.

LV9050, LV9060, LV9070, LV9071


Assembled Lock Case L283-170

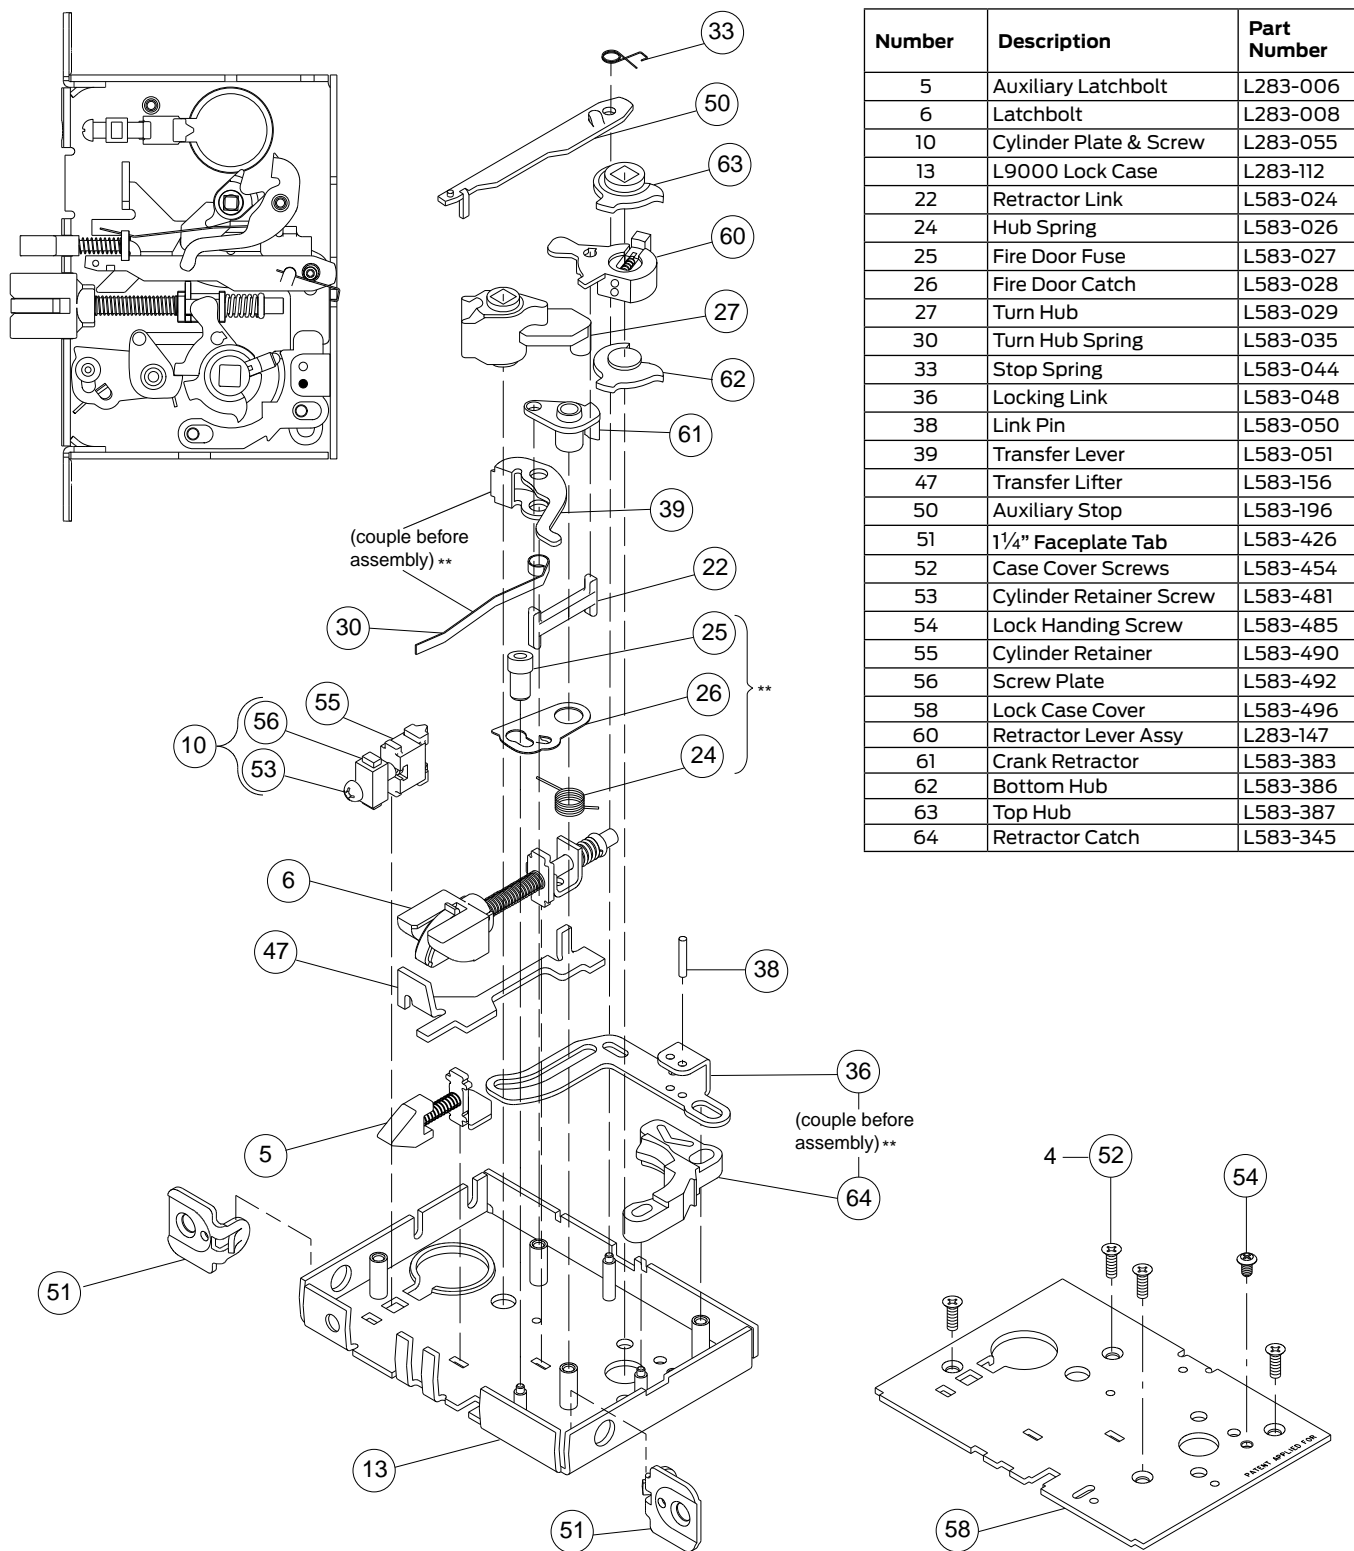

** See "Passage latch trim" on page 23.

LM9350, LM9370, LM9371


Assembled Lock Case L283-316

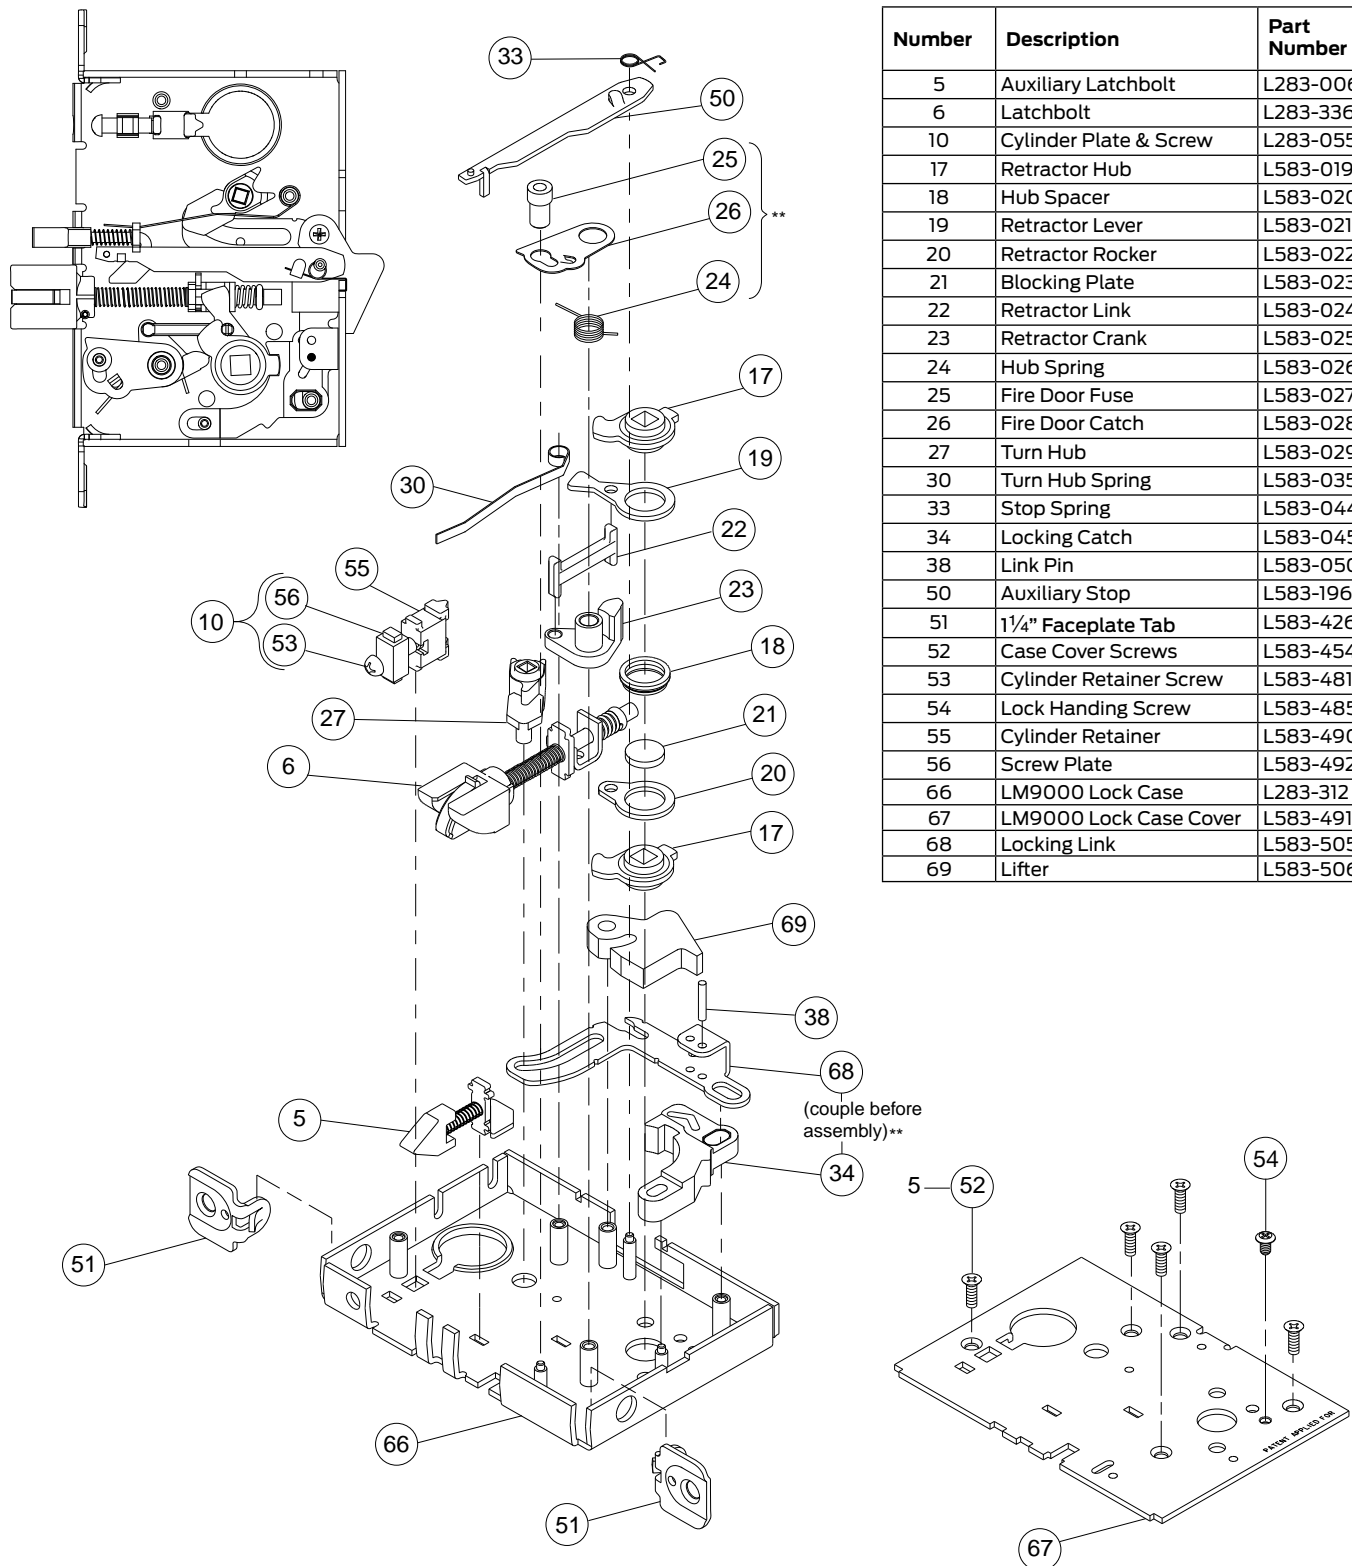

** See "Passage latch trim" on page 23.

LMV9350, LMV9370, LMV9371


Assembled Lock Case L283-317

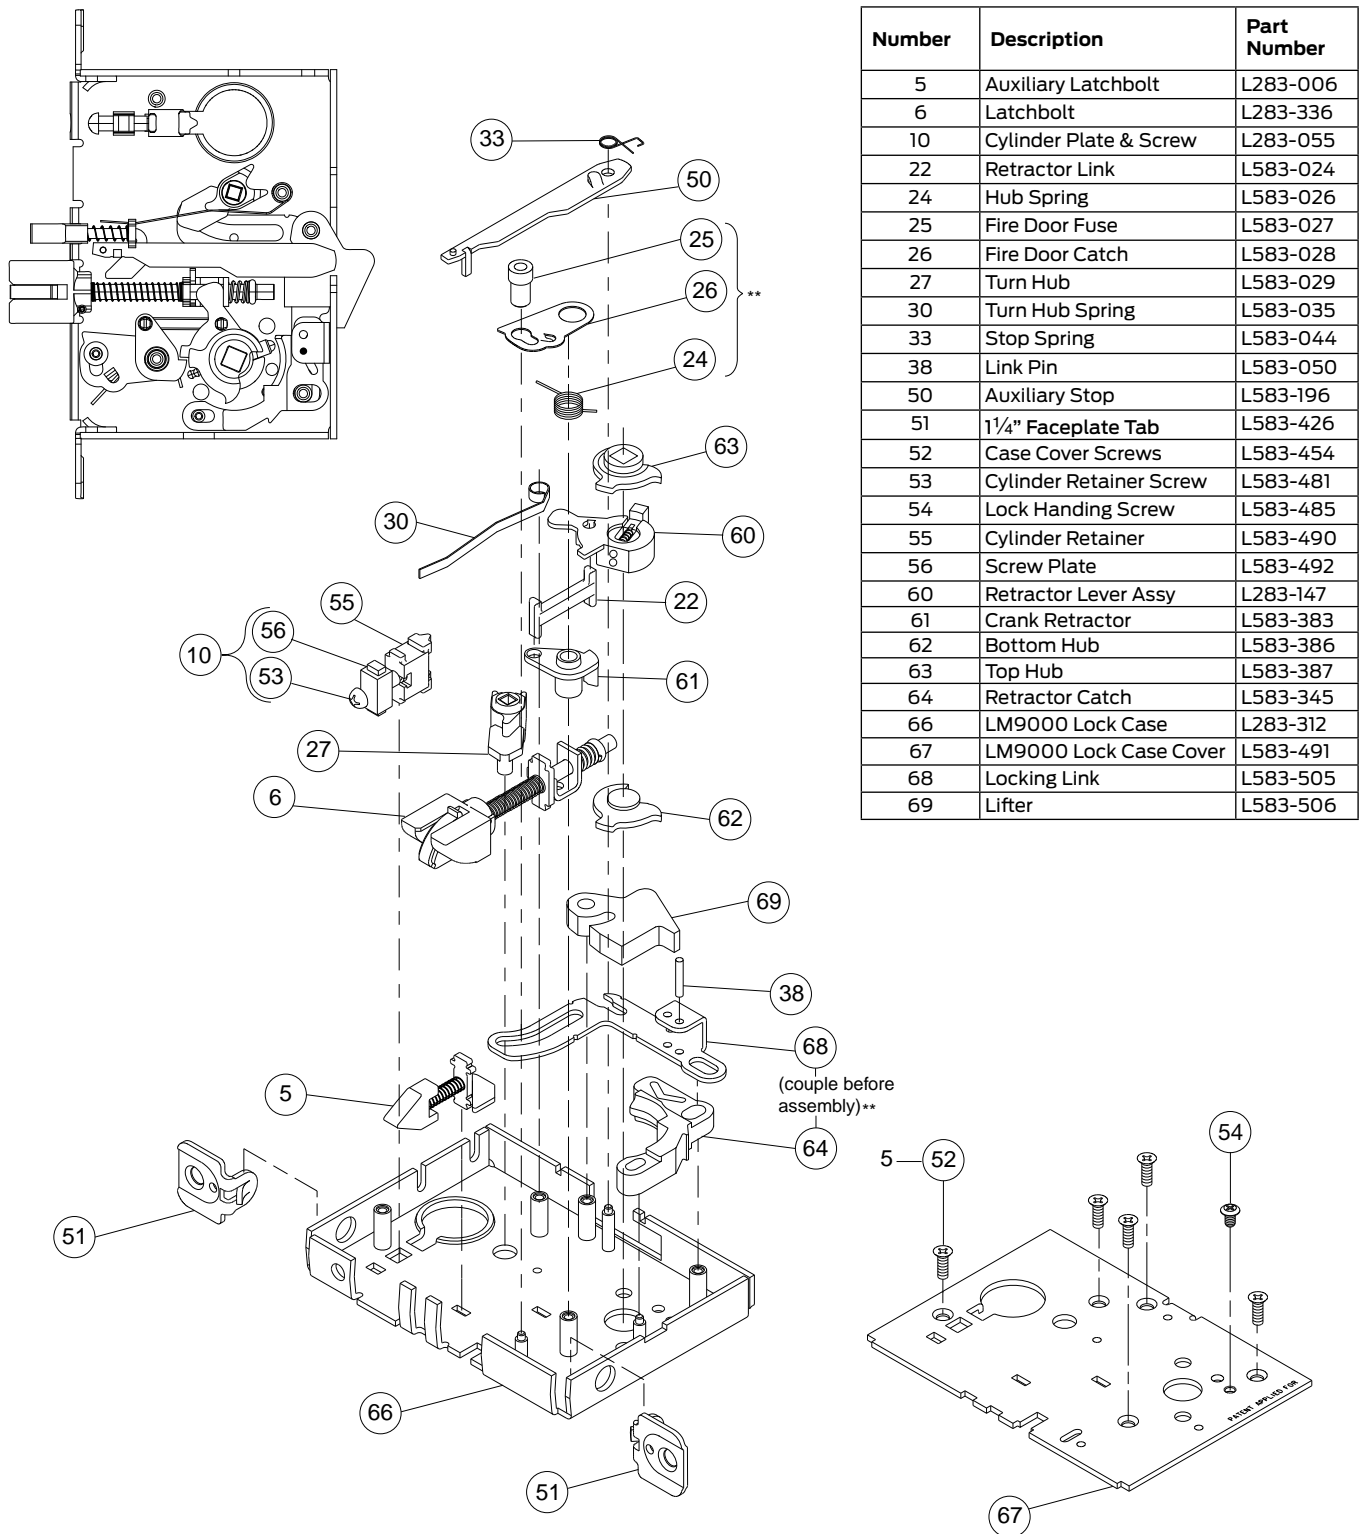


** See "Passage latch trim" on page 23.

L9056

Assembled Lock Case L283-126

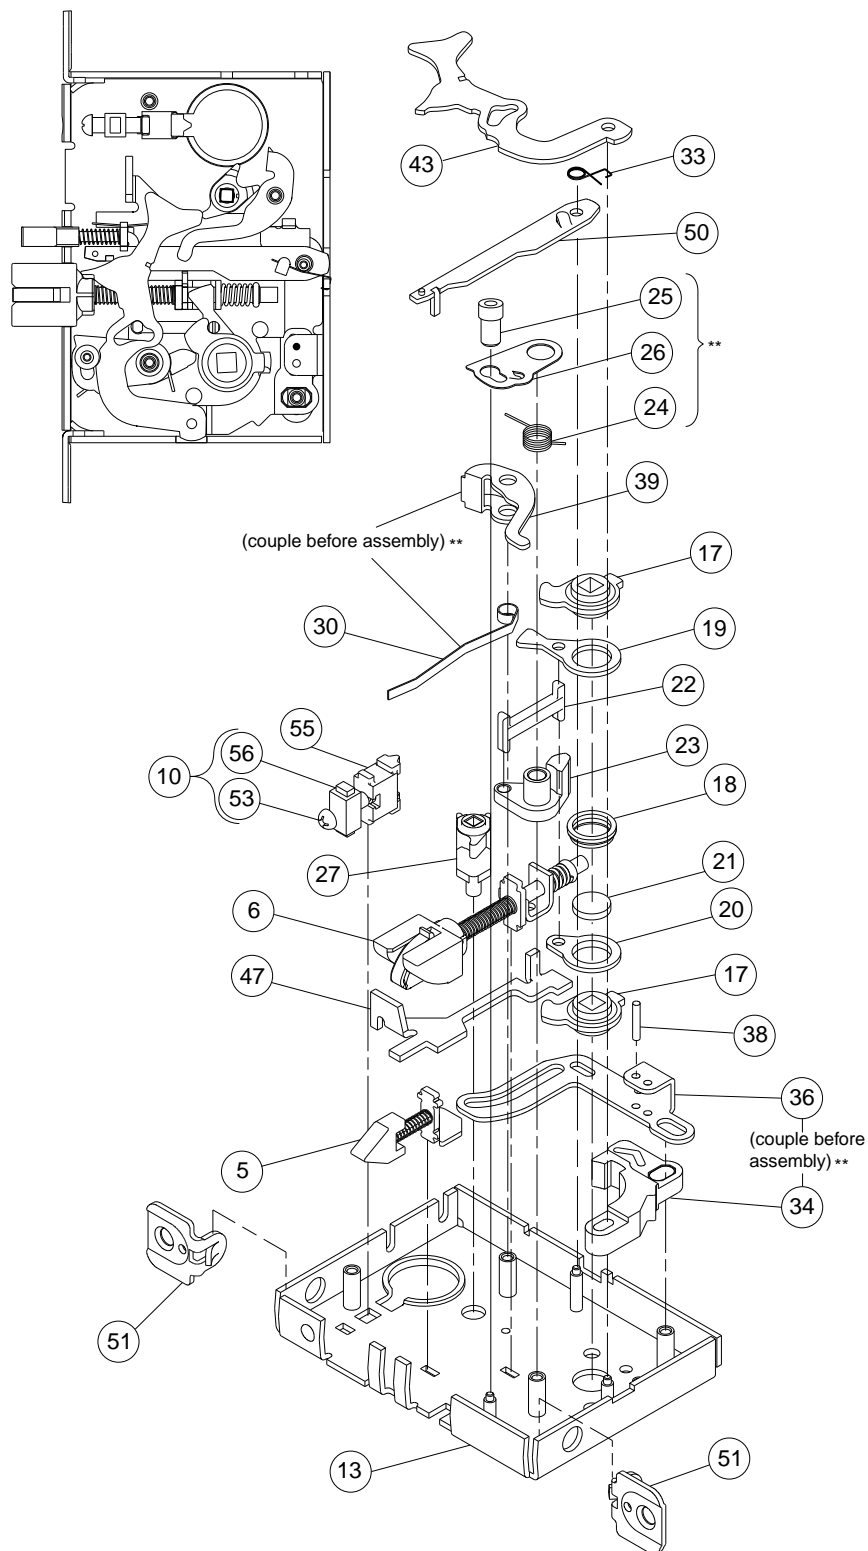


Number	Description	Part Number
5	Auxiliary Latchbolt	L283-006
6	Latchbolt	L283-008
10	Cylinder Plate & Screw	L283-055
13	L9000 Lock Case	L283-112
17	Retractor Hub	L583-019
18	Hub Spacer	L583-020
19	Retractor Lever	L583-021
20	Retractor Rocker	L583-022
21	Blocking Plate	L583-023
22	Retractor Link	L583-024
23	Retractor Crank	L583-025
24	Hub Spring	L583-026
25	Fire Door Fuse	L583-027
26	Fire Door Catch	L583-028
27	Turn Hub	L583-029
30	Turn Hub Spring	L583-035
33	Stop Spring	L583-044
34	Locking Catch	L583-045
36	Locking Link	L583-048
38	Link Pin	L583-050
39	Transfer Lever	L583-051
43	Simultaneous Retractor	L583-058
47	Transfer Lifter	L583-156
50	Auxiliary Stop	L583-196
51	1 1/4" Faceplate Tab	L583-426
52	Case Cover Screws	L583-454
53	Cylinder Retainer Screw	L583-481
54	Lock Handing Screw	L583-485
55	Cylinder Retainer	L583-490
56	Screw Plate	L583-492
58	Lock Case Cover	L583-496

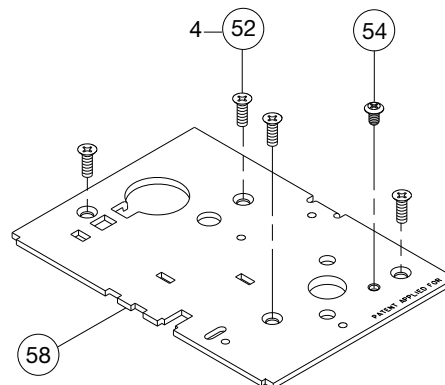


** See "Passage latch trim" on page 23.

LV9056

Assembled Lock Case L283-180

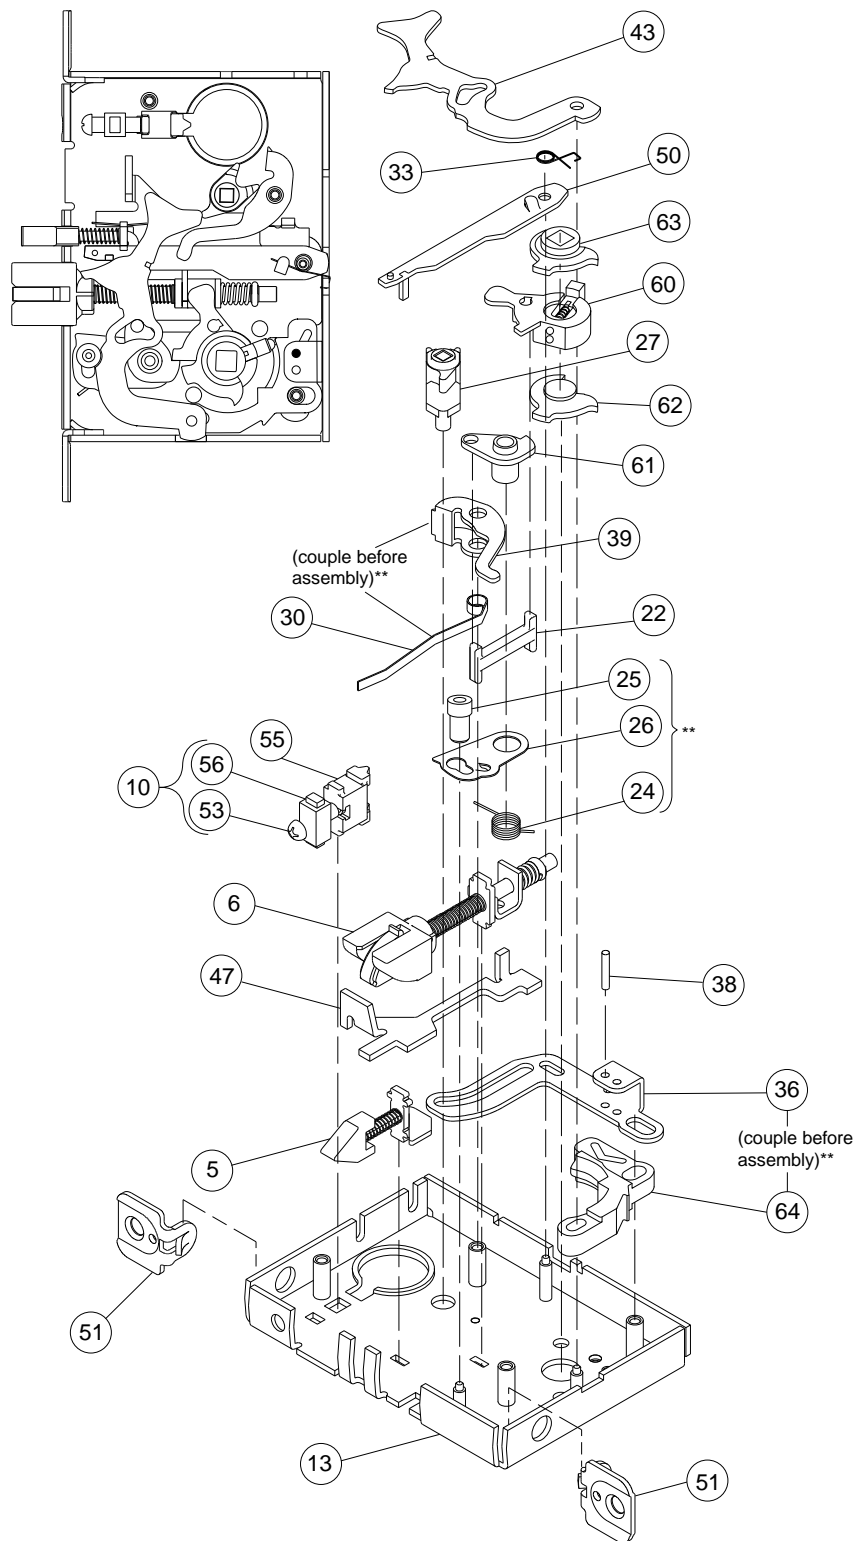


Number	Description	Part Number
5	Auxiliary Latchbolt	L283-006
6	Latchbolt	L283-008
10	Cylinder Plate & Screw	L283-055
13	L9000 Lock Case	L283-112
22	Retractor Link	L583-024
24	Hub Spring	L583-026
25	Fire Door Fuse	L583-027
26	Fire Door Catch	L583-028
27	Turn Hub	L583-029
30	Turn Hub Spring	L583-035
33	Stop Spring	L583-044
36	Locking Link	L583-048
38	Link Pin	L583-050
39	Transfer Lever	L583-051
43	Simultaneous Retractor	L583-058
47	Transfer Lifter	L583-156
50	Auxiliary Stop	L583-196
51	1¼" Faceplate Tab	L583-426
52	Case Cover Screws	L583-454
53	Cylinder Retainer Screw	L583-481
54	Lock Handling Screw	L583-485
55	Cylinder Retainer	L583-490
56	Screw Plate	L583-492
58	Lock Case Cover	L583-496
60	Retractor Lever Assy	L283-147
61	Crank Retractor	L583-383
62	Bottom Hub	L583-386
63	Top Hub	L583-387
64	Retractor Catch	24061897

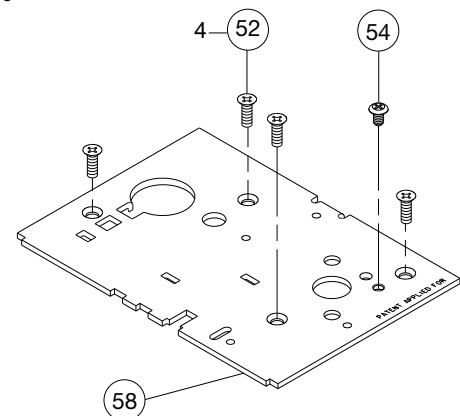


** See "Passage latch trim" on page 23.

L9076, L9077

Assembled Lock Case L283-039

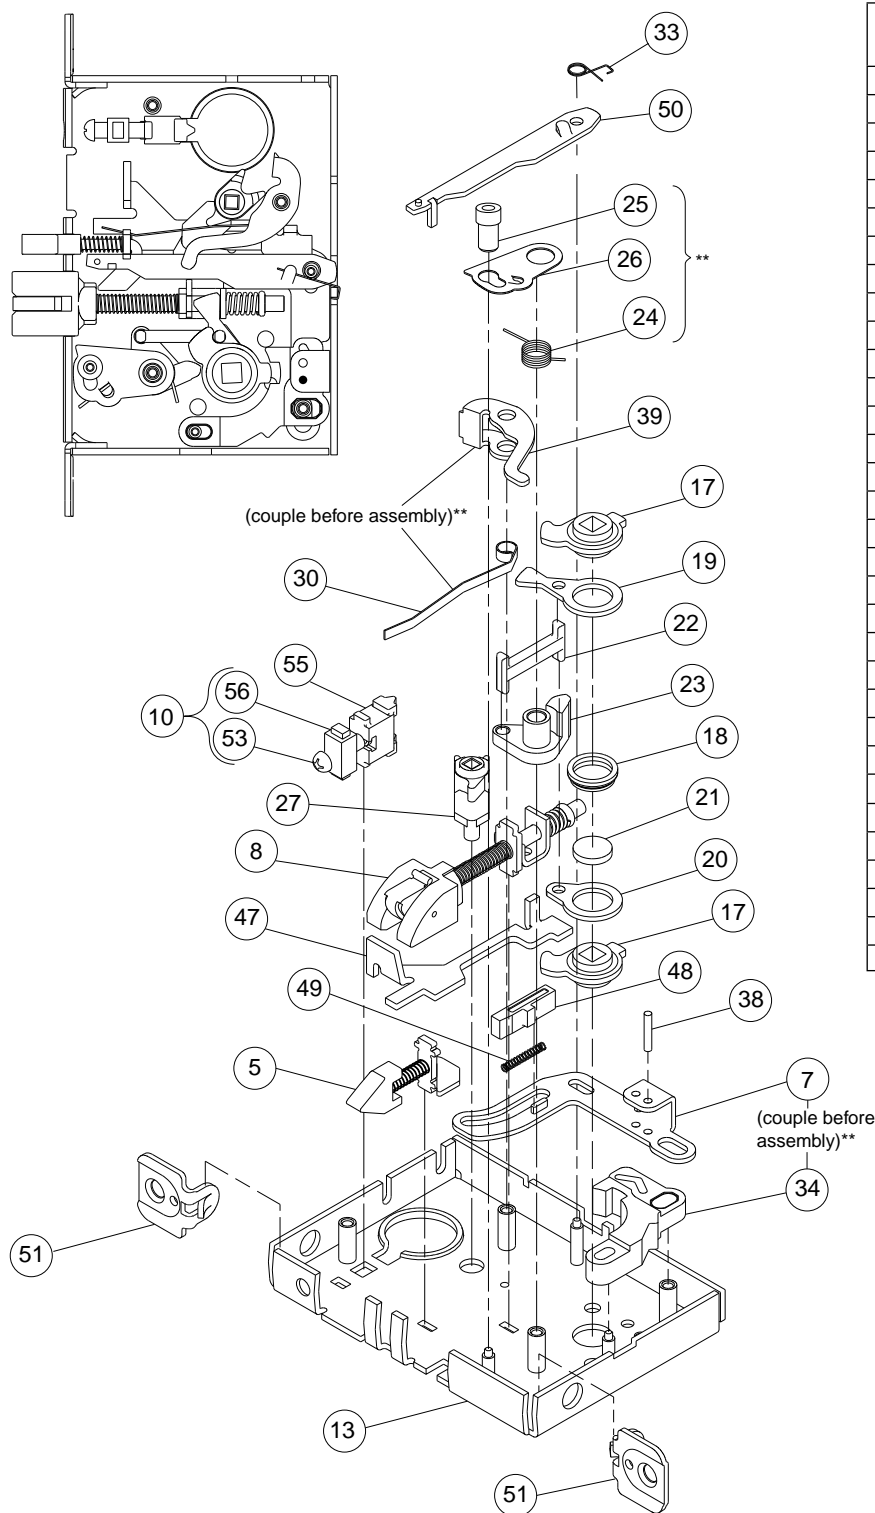


Number	Description	Part Number
5	Auxiliary Latchbolt	L283-006
7	Locking Link	L283-010
8	Latchbolt	L283-049
10	Cylinder Plate & Screw	L283-055
13	L9000 Lock Case	L283-112
17	Retractor Hub	L583-019
18	Hub Spacer	L583-020
19	Retractor Lever	L583-021
20	Retractor Rocker	L583-022
21	Blocking Plate	L583-023
22	Retractor Link	L583-024
23	Retractor Crank	L583-025
24	Hub Spring	L583-026
25	Fire Door Fuse	L583-027
26	Fire Door Catch	L583-028
27	Turn Hub	L583-029
30	Turn Hub Spring	L583-035
33	Stop Spring	L583-044
34	Locking Catch	L583-045
38	Link Pin	L583-050
39	Transfer Lever	L583-051
47	Transfer Lifter	L583-156
48	Holdback Dog	L583-174
49	Dog Spring	L583-192
50	Auxiliary Stop	L583-196
51	1 1/4" Faceplate Tab	L583-426
52	Case Cover Screws	L583-454
53	Cylinder Retainer Screw	L583-481
54	Lock Handing Screw	L583-485
55	Cylinder Retainer	L583-490
56	Screw Plate	L583-492
58	Lock Case Cover	L583-496

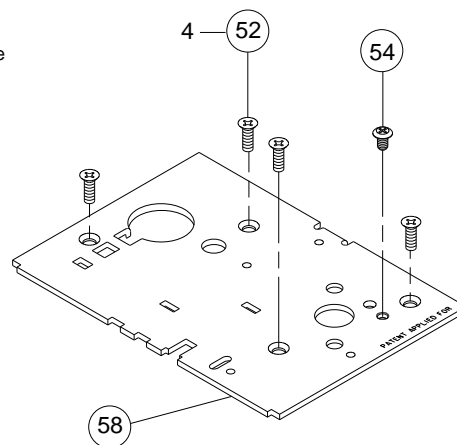

** See "Passage latch trim" on page 23.

LV9076, LV9077

Assembled Lock Case L283-172

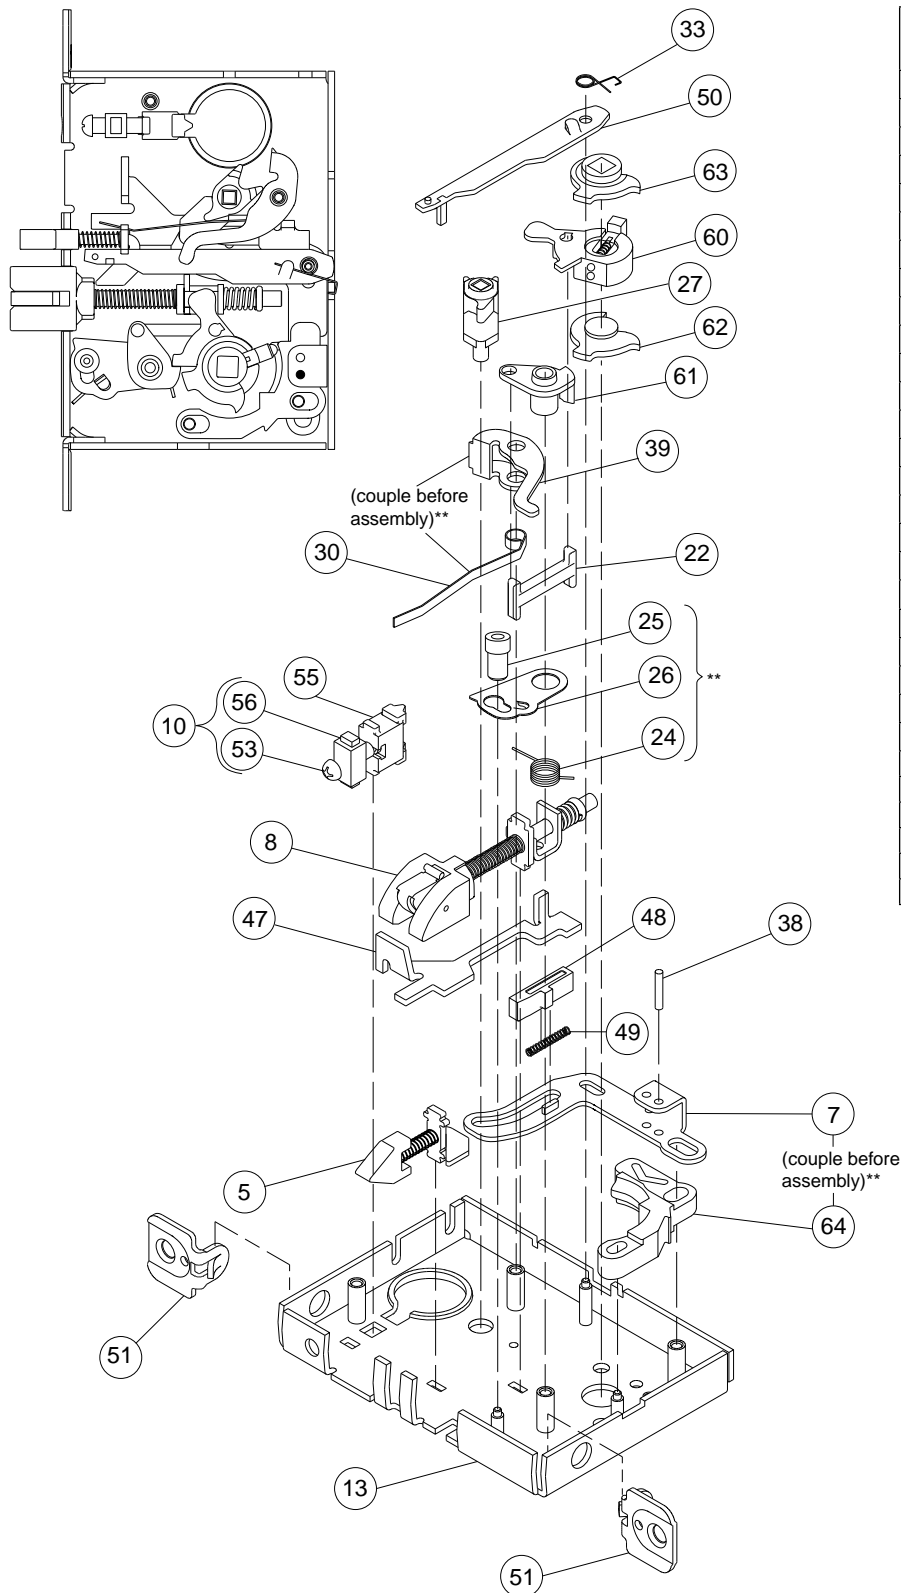


Number	Description	Part Number
5	Auxiliary Latchbolt	L283-006
7	Locking Link	L283-010
8	Latchbolt	L283-049
10	Cylinder Plate & Screw	L283-055
13	L9000 Lock Case	L283-112
22	Retractor Link	L583-024
24	Hub Spring	L583-026
25	Fire Door Fuse	L583-027
26	Fire Door Catch	L583-028
27	Turn Hub	L583-029
30	Turn Hub Spring	L583-035
33	Stop Spring	L583-044
38	Link Pin	L583-050
39	Transfer Lever	L583-051
47	Transfer Lifter	L583-156
48	Holdback Dog	L583-174
49	Dog Spring	L583-192
50	Auxiliary Stop	L583-196
51	1 1/4" Faceplate Tab	L583-426
52	Case Cover Screws	L583-454
53	Cylinder Retainer Screw	L583-481
54	Lock Handling Screw	L583-485
55	Cylinder Retainer	L583-490
56	Screw Plate	L583-492
58	Lock Case Cover	L583-496
60	Retractor Lever Assy	L283-147
61	Crank Retractor	L583-383
62	Bottom Hub	L583-386
63	Top Hub	L583-387
64	Retractor Catch	L583-345

* See "Request to Exit (RX) Feature" on page 84.


** See "Passage latch trim" on page 23.

L9080

Assembled Lock Case L283-134

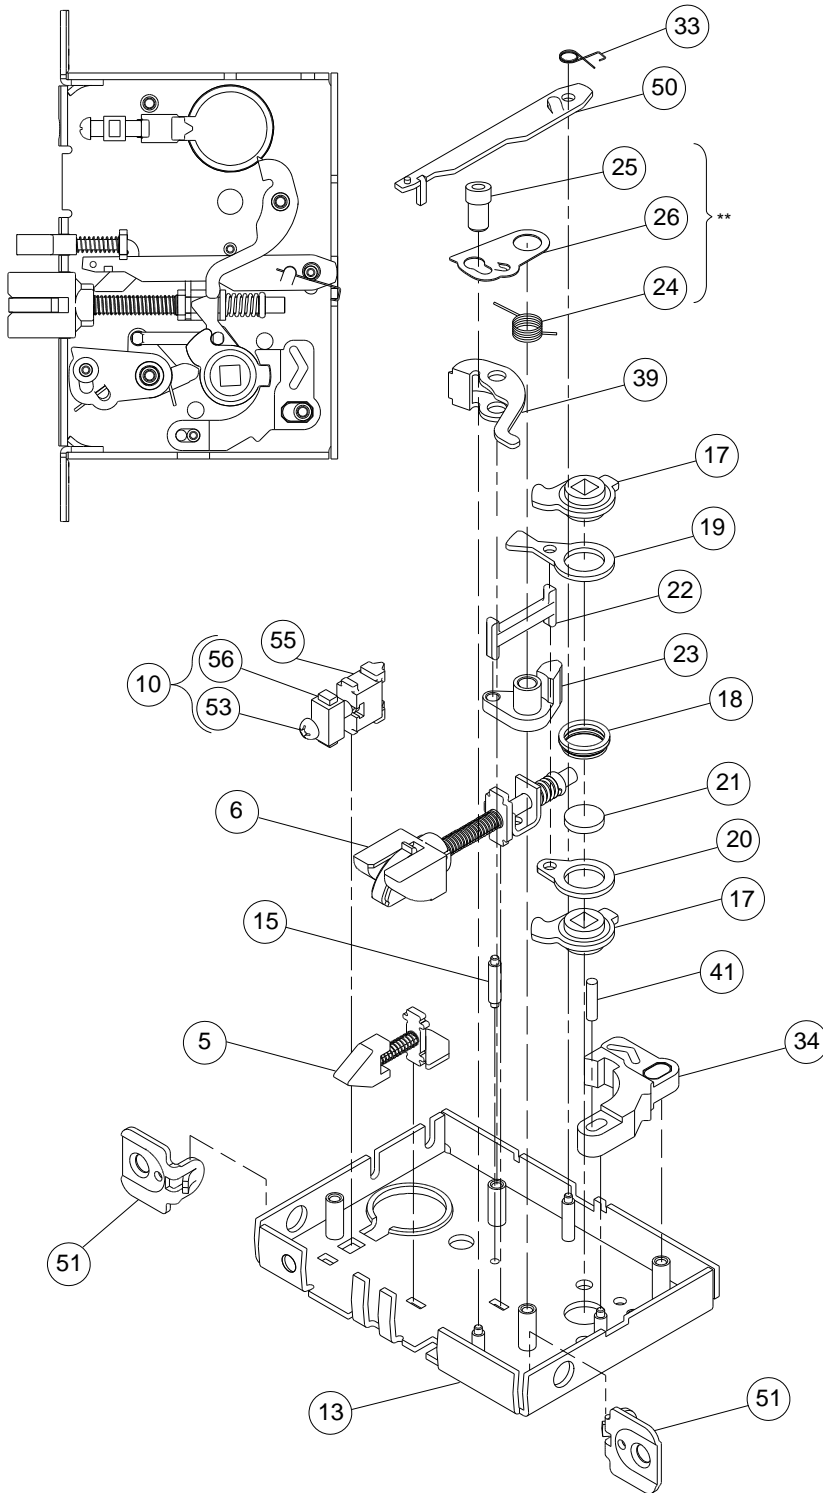


Number	Description	Part Number
5	Auxiliary Latchbolt	L283-006
6	Latchbolt	L283-008
10	Cylinder Plate & Screw	L283-055
13	L9000 Lock Case	L283-112
15	Standoff Post	L583-004
17	Retractor Hub	L583-019
18	Hub Spacer	L583-020
19	Retractor Lever	L583-021
20	Retractor Rocker	L583-022
21	Blocking Plate	L583-023
22	Retractor Link	L583-024
23	Retractor Crank	L583-025
24	Hub Spring	L583-026
25	Fire Door Fuse	L583-027
26	Fire Door Catch	L583-028
33	Stop Spring	L583-044
34	Locking Catch	L583-045
39	Transfer Lever	L583-051
41	Catch Pin	L583-056
50	Auxiliary Stop	L583-196
51	1 1/4" Faceplate Tab	L583-426
52	Case Cover Screws	L583-454
53	Cylinder Retainer Screw	L583-481
54	Lock Handing Screw	L583-485
55	Cylinder Retainer	L583-490
56	Screw Plate	L583-492
58	Lock Case Cover	L583-496

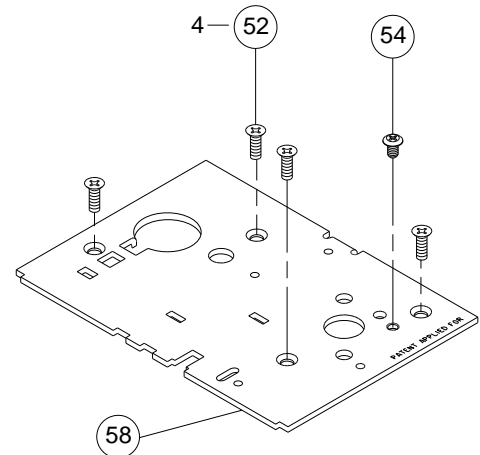


** See "Passage latch trim" on page 23.

LV9080

Assembled Lock Case L283-173

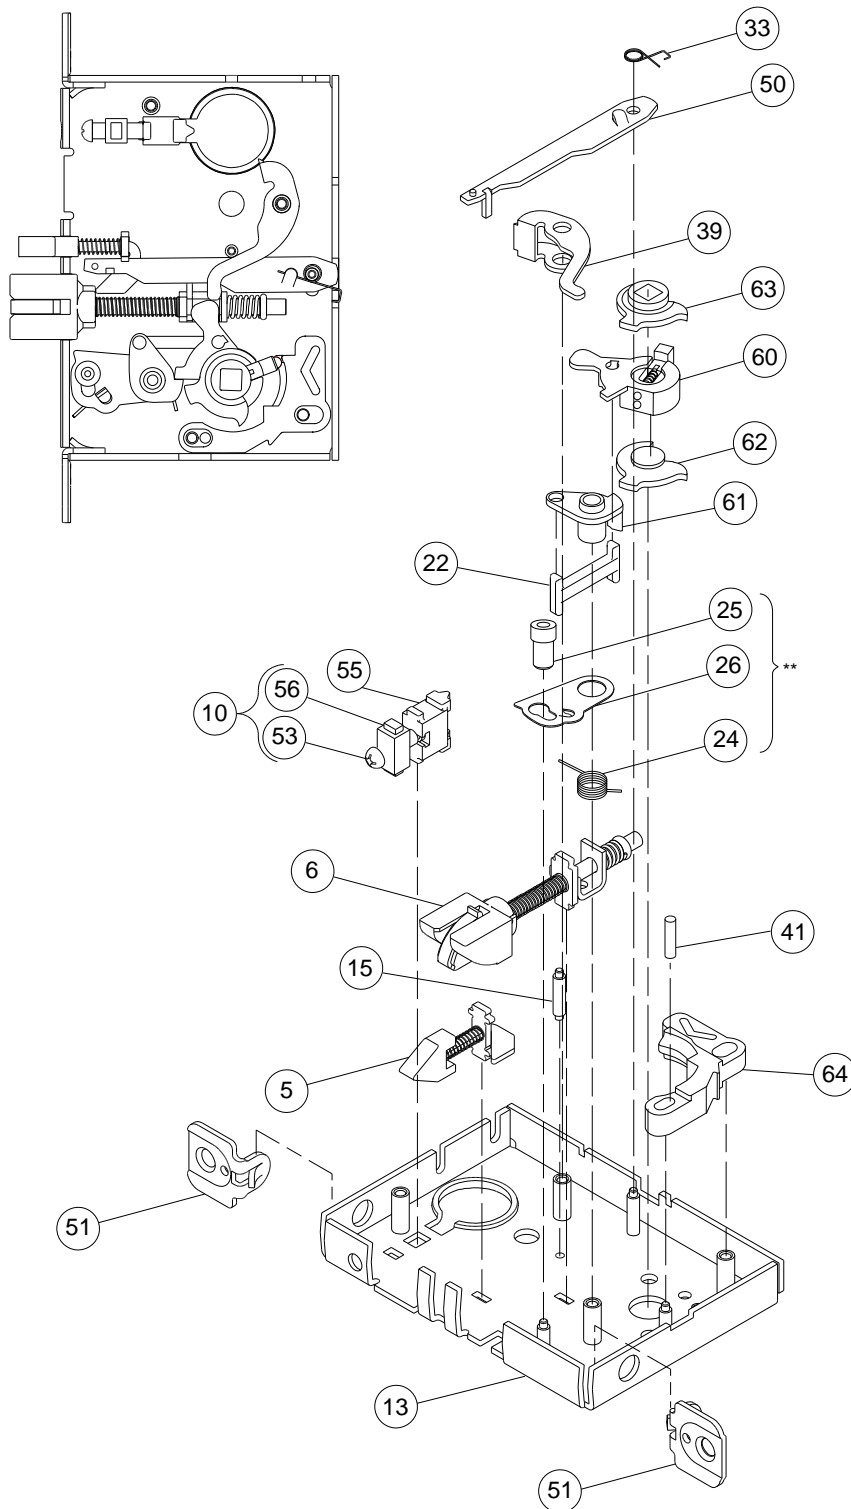


Number	Description	Part Number
5	Auxiliary Latchbolt	L283-006
6	Latchbolt	L283-008
10	Cylinder Plate & Screw	L283-055
13	L9000 Lock Case	L283-112
15	Standoff Post	L583-004
22	Retractor Link	L583-024
24	Hub Spring	L583-026
25	Fire Door Fuse	L583-027
26	Fire Door Catch	L583-028
33	Stop Spring	L583-044
39	Transfer Lever	L583-051
41	Catch Pin	L583-056
50	Auxiliary Stop	L583-196
51	1 1/4" Faceplate Tab	L583-426
52	Case Cover Screws	L583-454
53	Cylinder Retainer Screw	L583-481
54	Lock Handling Screw	L583-485
55	Cylinder Retainer	L583-490
56	Screw Plate	L583-492
58	Lock Case Cover	L583-496
60	Retractor Lever Assy	L283-147
61	Crank Retractor	L583-383
62	Bottom Hub	L583-386
63	Top Hub	L583-387
64	Retractor Catch	L583-345

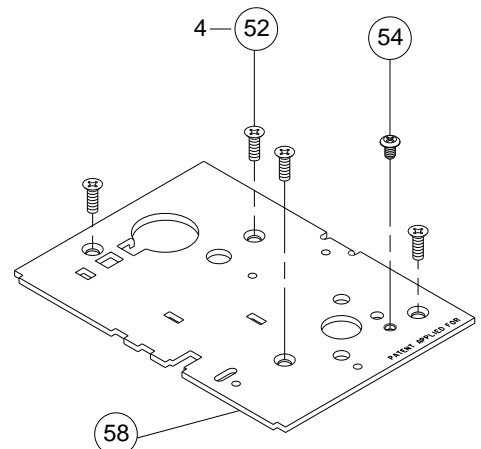

** See "Passage latch trim" on page 23.

LM9380

Assembled Lock Case L283-316

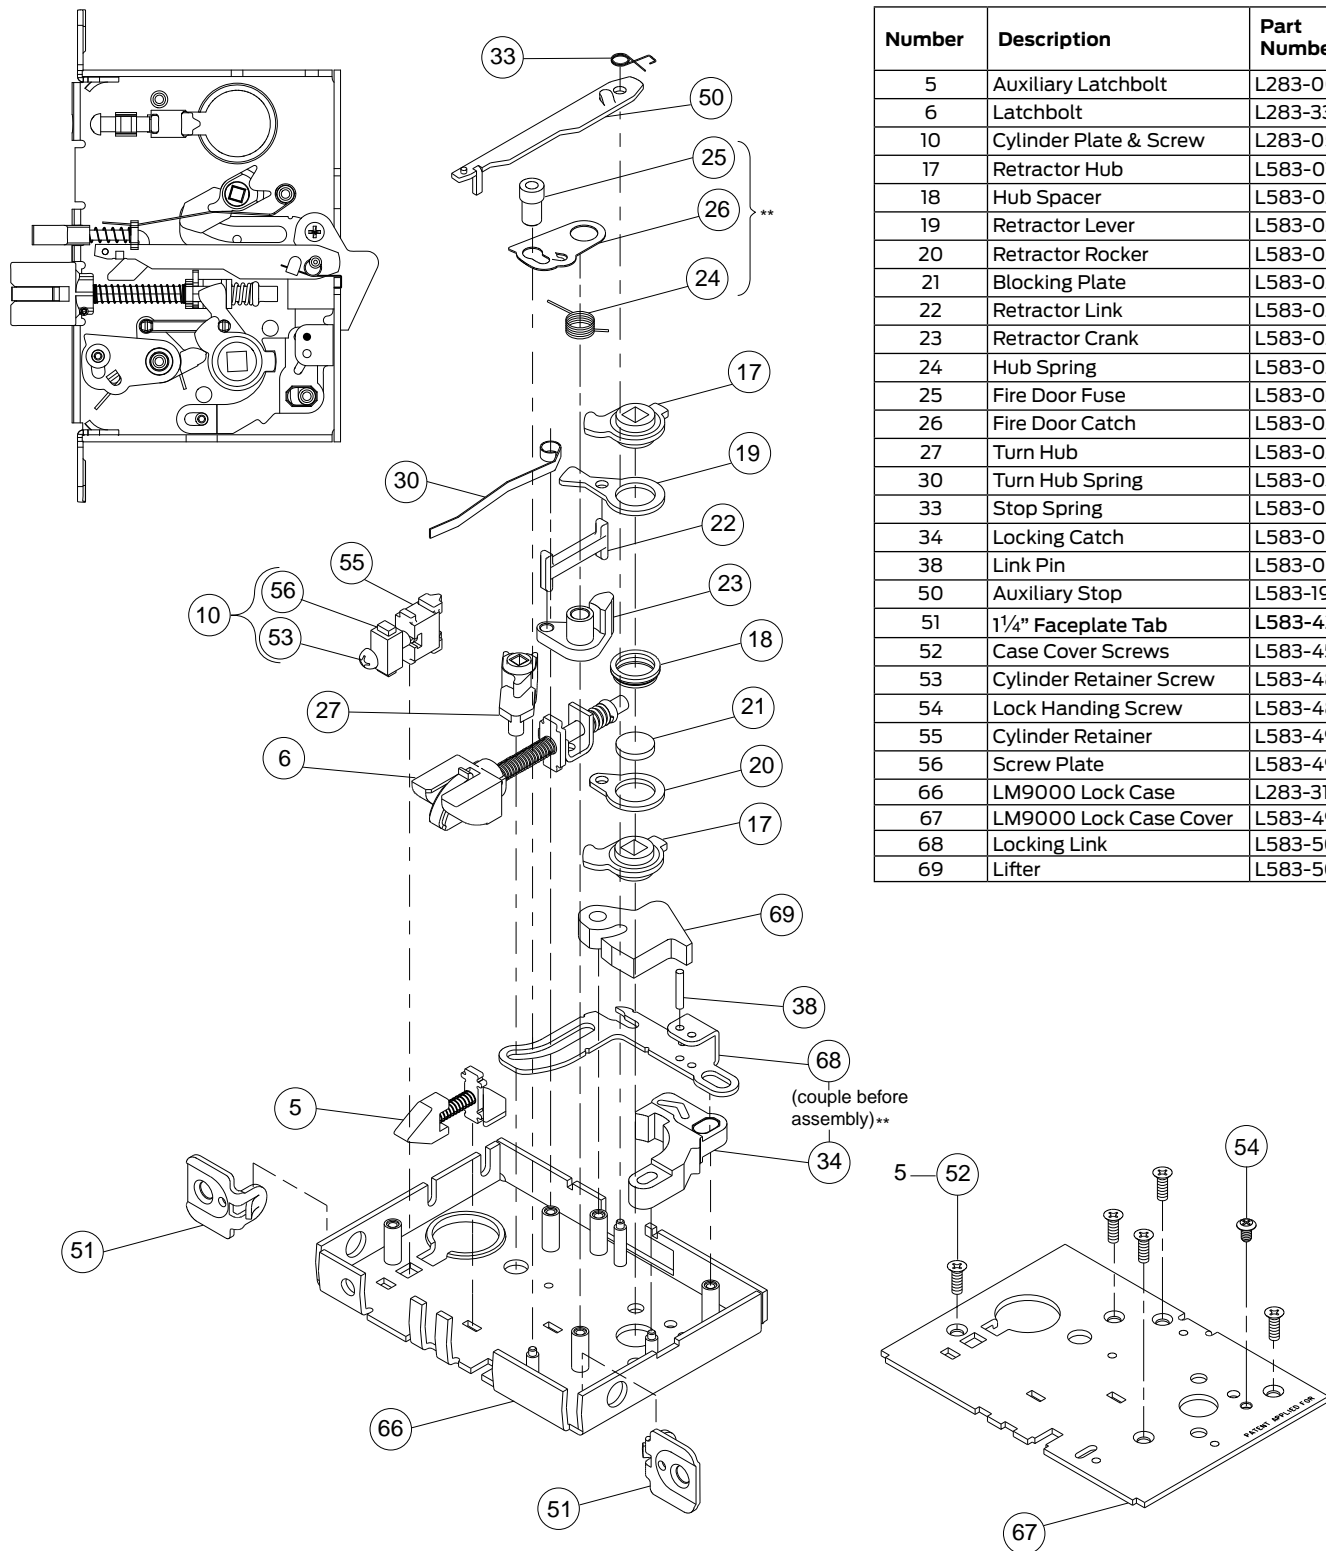


Number	Description	Part Number
5	Auxiliary Latchbolt	L283-006
6	Latchbolt	L283-336
10	Cylinder Plate & Screw	L283-055
17	Retractor Hub	L583-019
18	Hub Spacer	L583-020
19	Retractor Lever	L583-021
20	Retractor Rocker	L583-022
21	Blocking Plate	L583-023
22	Retractor Link	L583-024
23	Retractor Crank	L583-025
24	Hub Spring	L583-026
25	Fire Door Fuse	L583-027
26	Fire Door Catch	L583-028
27	Turn Hub	L583-029
30	Turn Hub Spring	L583-035
33	Stop Spring	L583-044
34	Locking Catch	L583-045
38	Link Pin	L583-050
50	Auxiliary Stop	L583-196
51	1 1/4" Faceplate Tab	L583-426
52	Case Cover Screws	L583-454
53	Cylinder Retainer Screw	L583-481
54	Lock Handling Screw	L583-485
55	Cylinder Retainer	L583-490
56	Screw Plate	L583-492
66	LM9000 Lock Case	L283-312
67	LM9000 Lock Case Cover	L583-491
68	Locking Link	L583-505
69	Lifter	L583-506

** See "Passage latch trim" on page 23.

LMV9380


Assembled Lock Case L283-317

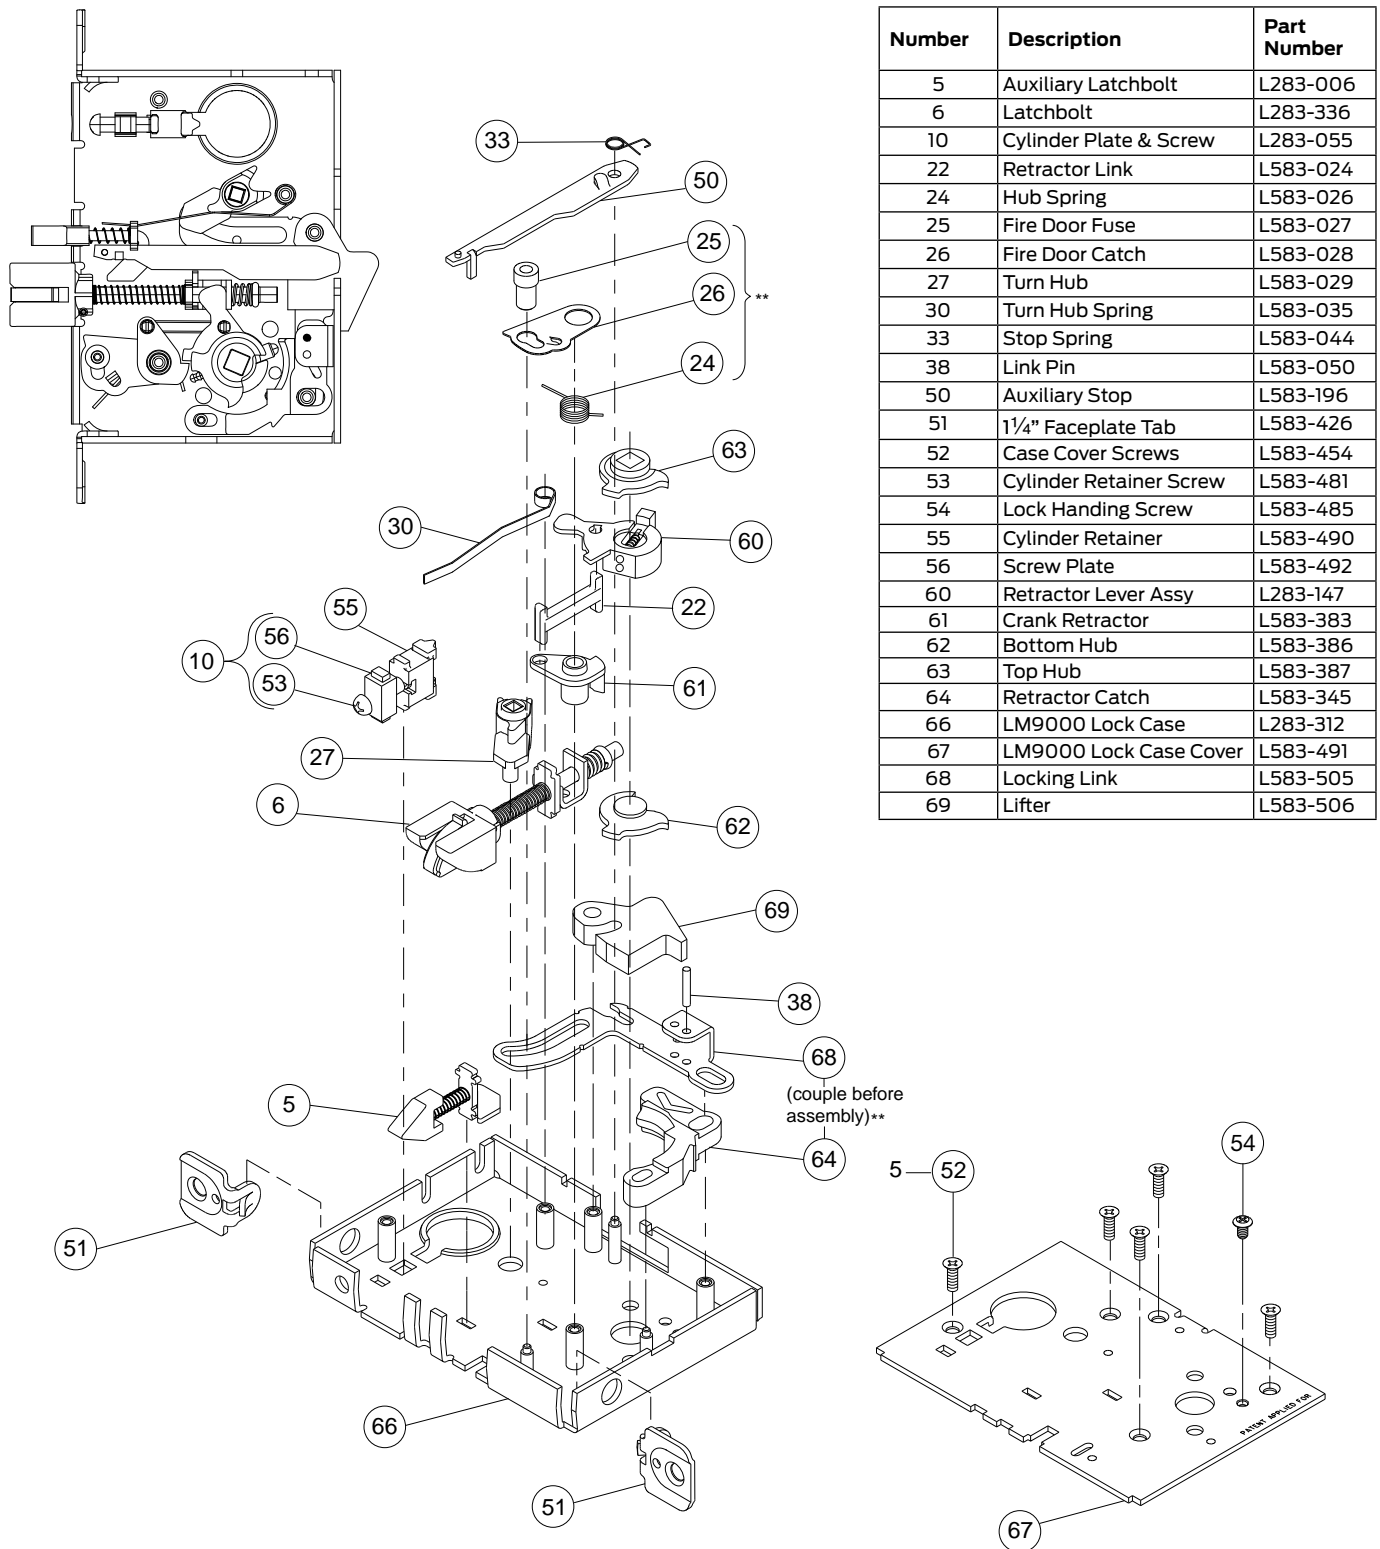


** See "Passage latch trim" on page 23.

L9080EL, L9080EL-RX

Assembled Lock Case L283-142

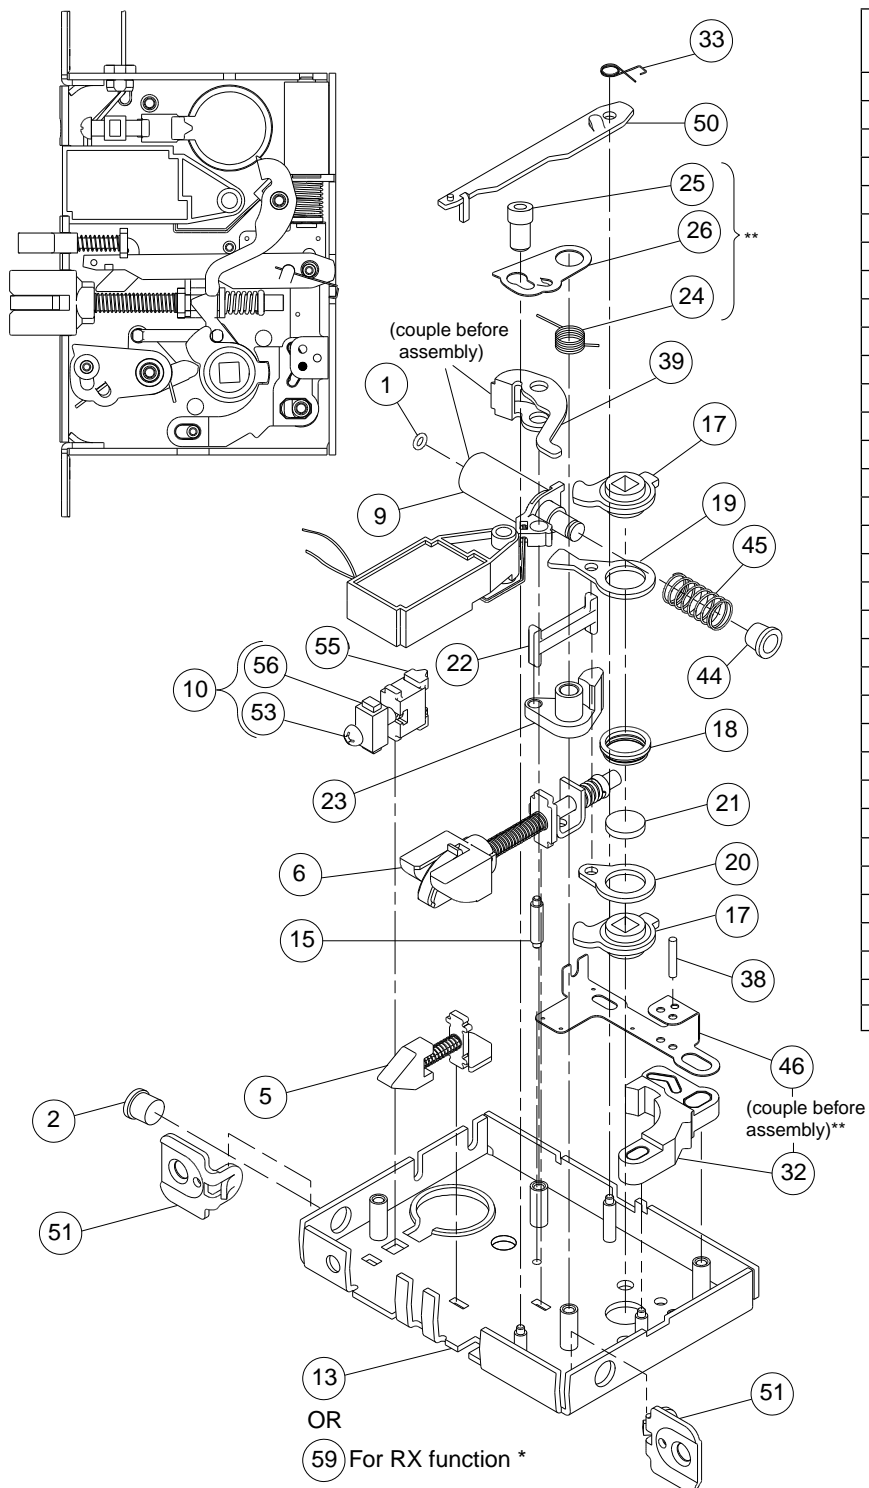

Number	Description	Part Number
1	Lock O-Ring	36-080
2	Lock Bushing	K510-842
5	Auxiliary Latchbolt	L283-006
6	Latchbolt	L283-008
9	Solenoid & Driver	L283-053
10	Cylinder Plate & Screw	L283-055
13	L9000 Lock Case	L283-112
15	Standoff Post	L583-004
17	Retractor Hub	L583-019
18	Hub Spacer	L583-020
19	Retractor Lever	L583-021
20	Retractor Rocker	L583-022
21	Blocking Plate	L583-023
22	Retractor Link	L583-024
23	Retractor Crank	L583-025
24	Hub Spring	L583-026
25	Fire Door Fuse	L583-027
26	Fire Door Catch	L583-028
32	Locking Catch	L583-043
33	Stop Spring	L583-044
38	Link Pin	L583-050
39	Transfer Lever	L583-051
44	Spring Retainer	L583-063
45	Solenoid Spring	L583-064
46	Electrified Link	L583-065
50	Auxiliary Stop	L583-196
51	1 1/4" Faceplate Tab	L583-426
52	Case Cover Screws	L583-454
53	Cylinder Retainer Screw	L583-481
54	Lock Handing Screw	L583-485
55	Cylinder Retainer	L583-490
56	Screw Plate	L583-492
58	Lock Case Cover	L583-496
59	Lock Case with Microswitch*	n/a

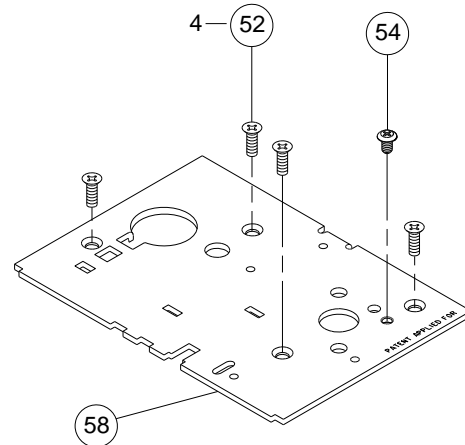


* See "Request to Exit (RX) Feature" 84.

** See "Passage latch trim" on page 23.


NOTE: Latch Monitoring feature available with L9080EL-RX. Specify XL12-245 for L9080PEL. See page 82 for more information.

LV9080EL

Assembled Lock Case L283-174

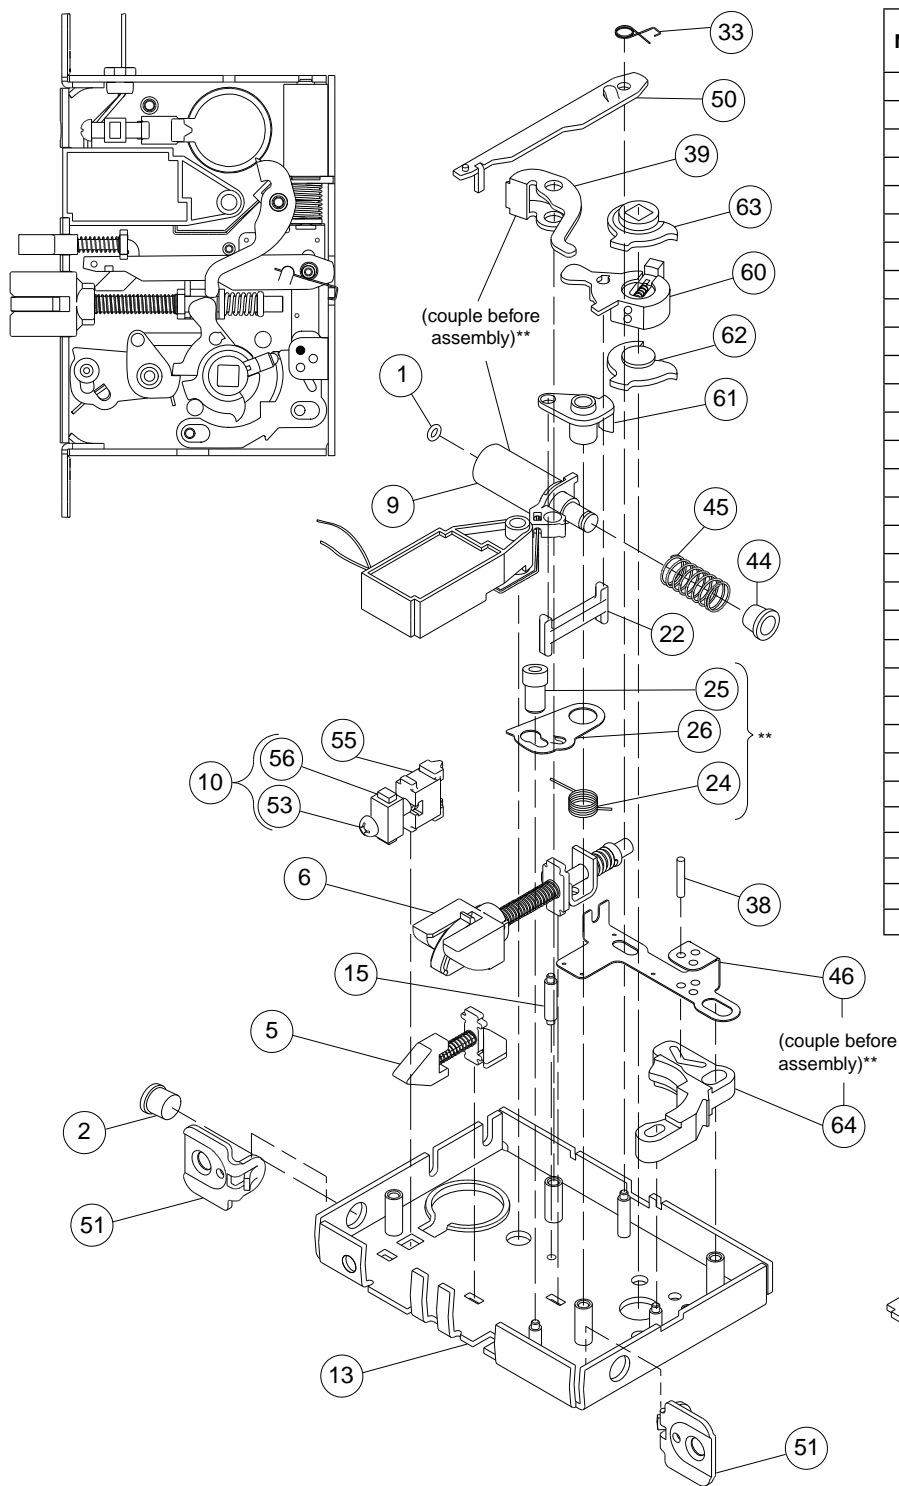


Number	Description	Part Number
1	EL Lock O-Ring	36-080
2	EL Lock Bushing	K510-842
5	Auxiliary Latchbolt	L283-006
6	Latchbolt	L283-008
9	Solenoid & Driver	L283-053
10	Cylinder Plate & Screw	L283-055
13	L9000 Lock Case	L283-112
15	Standoff Post	L583-004
22	Retractor Link	L583-024
24	Hub Spring	L583-026
25	Fire Door Fuse	L583-027
26	Fire Door Catch	L583-028
33	Stop Spring	L583-044
38	Link Pin	L583-050
39	Transfer Lever	L583-051
44	Spring Retainer	L583-063
45	Solenoid Spring	L583-064
46	Electrified Link	L583-065
50	Auxiliary Stop	L583-196
51	1 1/4" Faceplate Tab	L583-426
52	Case Cover Screws	L583-454
53	Cylinder Retainer Screw	L583-481
54	Lock Handing Screw	L583-485
55	Cylinder Retainer	L583-490
56	Screw Plate	L583-492
58	Lock Case Cover	L583-496
60	Retractor Lever Assy	L283-147
61	Crank Retractor	L583-383
62	Bottom Hub	L583-386
63	Top Hub	L583-387
64	Retractor Catch	L583-345

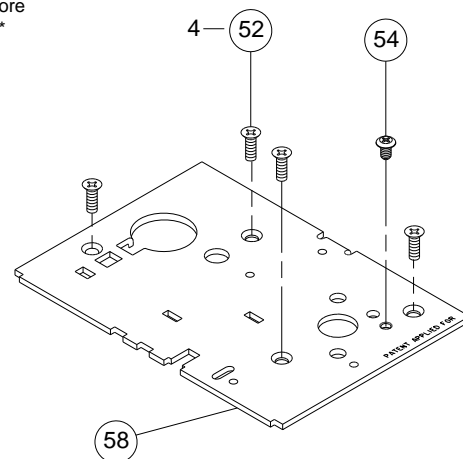


** See "Passage latch trim" on page 23.

L9080EU, L9080EU-RX

Assembled Lock Case L283-143

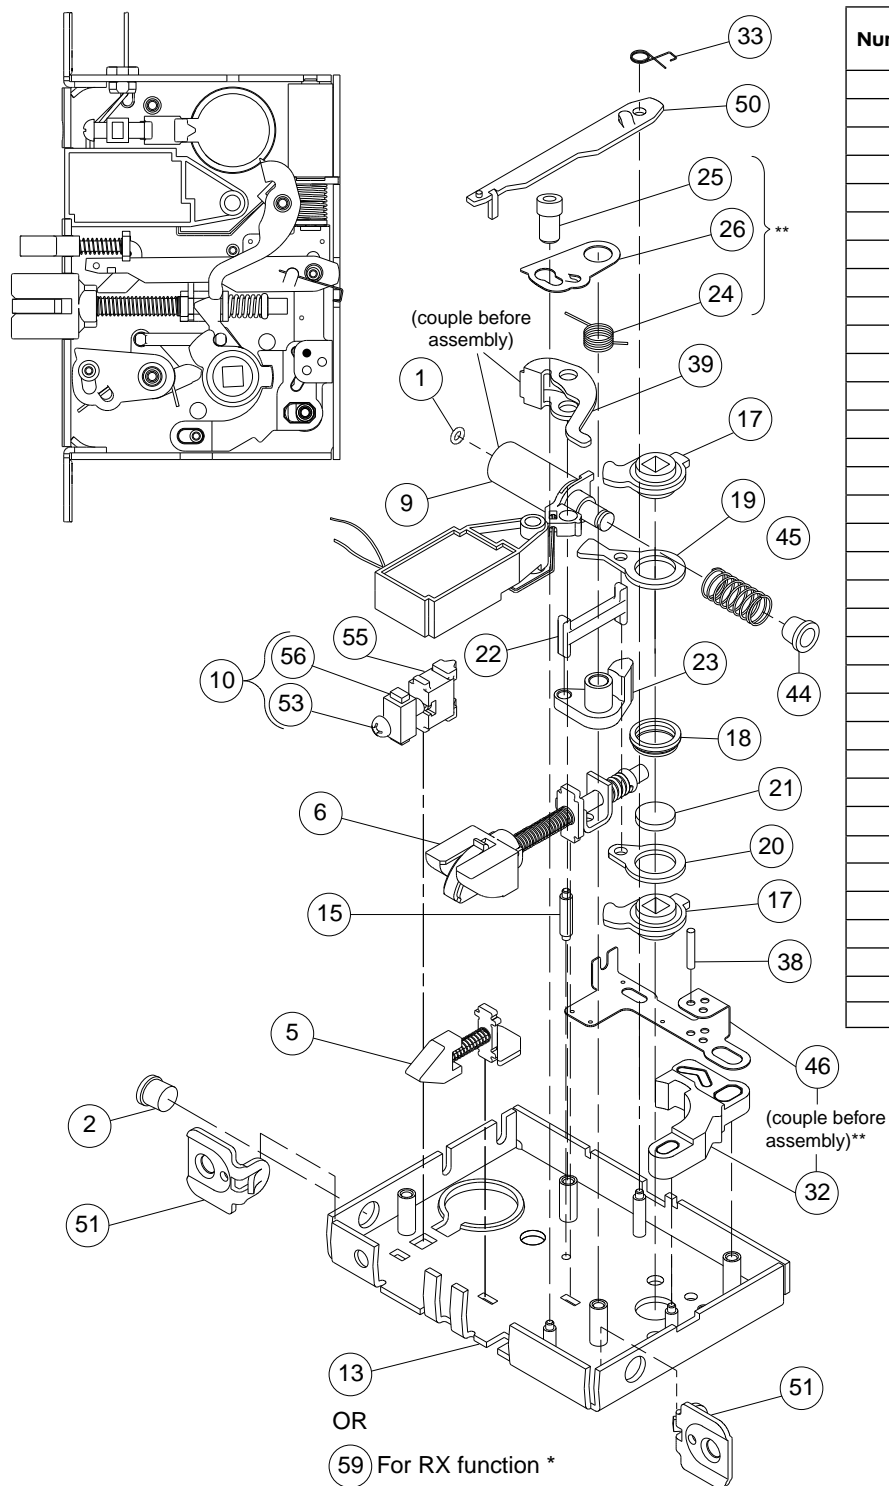

Number	Description	Part Number
1	O-Ring	36-080
2	Bushing	K510-842
5	Auxiliary Latchbolt	L283-006
6	Latchbolt	L283-008
9	Solenoid & Driver	L283-053
10	Cylinder Plate & Screw	L283-055
13	L9000 Lock Case	L283-112
15	Standoff Post	L583-004
17	Retractor Hub	L583-019
18	Hub Spacer	L583-020
19	Retractor Lever	L583-021
20	Retractor Rocker	L583-022
21	Blocking Plate	L583-023
22	Retractor Link	L583-024
23	Retractor Crank	L583-025
24	Hub Spring	L583-026
25	Fire Door Fuse	L583-027
26	Fire Door Catch	L583-028
32	Locking Catch	L583-043
33	Stop Spring	L583-044
38	Link Pin	L583-050
39	Transfer Lever	L583-051
44	Spring Retainer	L583-063
45	Solenoid Spring	L583-064
46	Electrified Link	L583-065
50	Auxiliary Stop	L583-196
51	1 1/4" Faceplate Tab	L583-426
52	Case Cover Screws	L583-454
53	Cylinder Retainer Screw	L583-481
54	Lock Handing Screw	L583-485
55	Cylinder Retainer	L583-490
56	Screw Plate	L583-492
58	Lock Case Cover	L583-496
59	Lock Case with Microswitch*	n/a

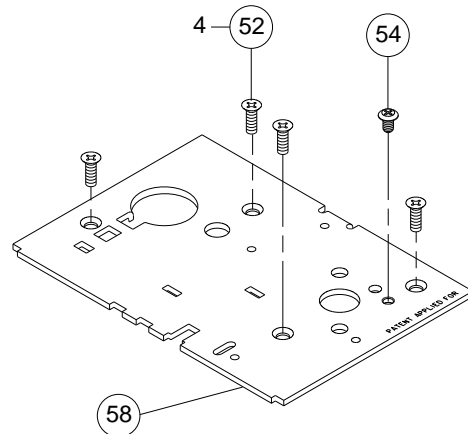


* See "Request to Exit (RX) Feature" 84.

** See "Passage latch trim" on page 23.

NOTE: Latch Monitoring feature available with L9080EU-RX. Specify XL12-246 for L9080PEU. See page 82 for more information.

LV9080EU


Assembled Lock Case L283-175

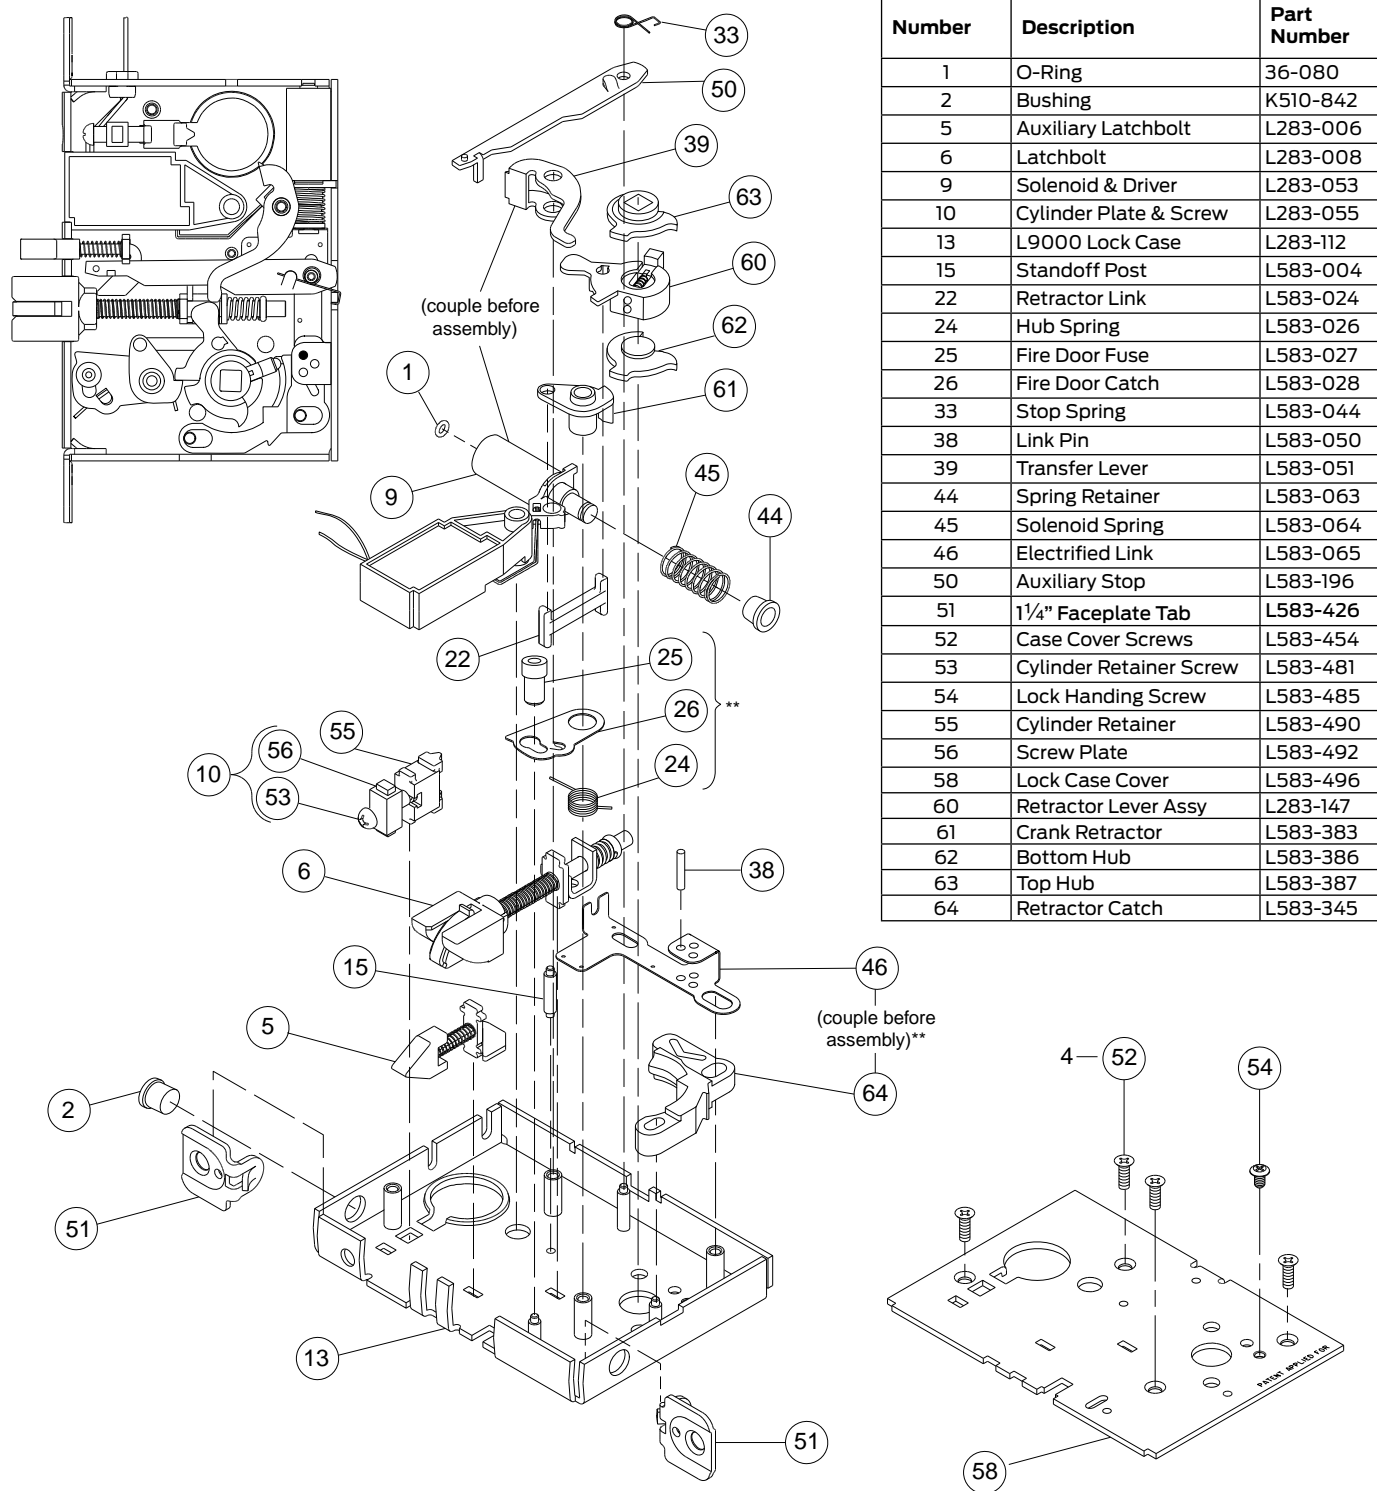


** See "Passage latch trim" on page 23.

L9082

Assembled Lock Case L283-146

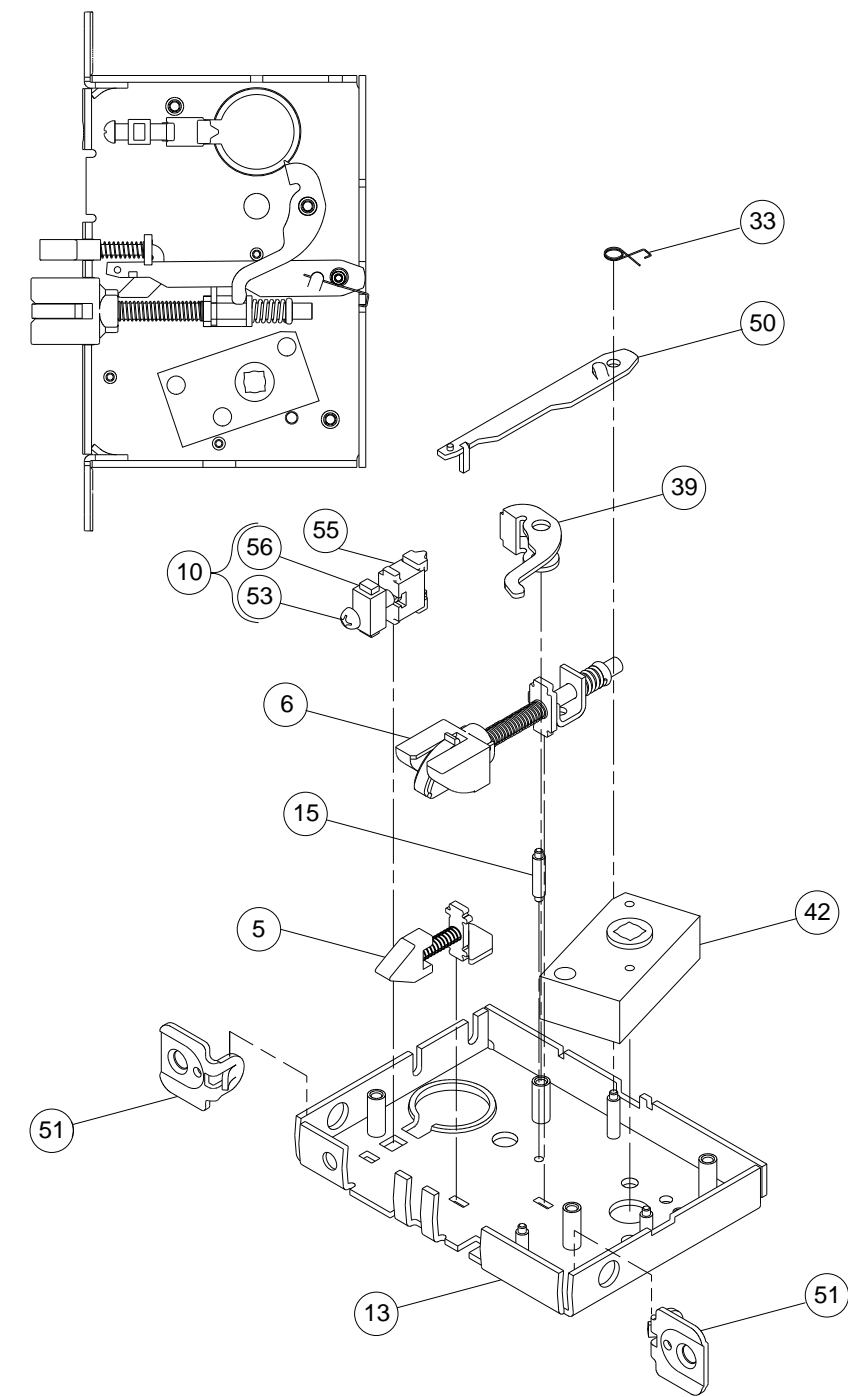


Number	Description	Part Number
5	Auxiliary Latchbolt	L283-006
6	Latchbolt	L283-008
10	Cylinder Plate & Screw	L283-055
13	L9000 Lock Case	L283-112
15	Standoff Post	L583-004
33	Stop Spring	L583-044
39	Transfer Lever	L583-051
42	Spindle Anchor	L583-057
50	Auxiliary Stop	L583-196
51	1 1/4" Faceplate Tab	L583-426
52	Case Cover Screws	L583-454
53	Cylinder Retainer Screw	L583-481
55	Cylinder Retainer	L583-490
56	Screw Plate	L583-492
58	Lock Case Cover	L583-496

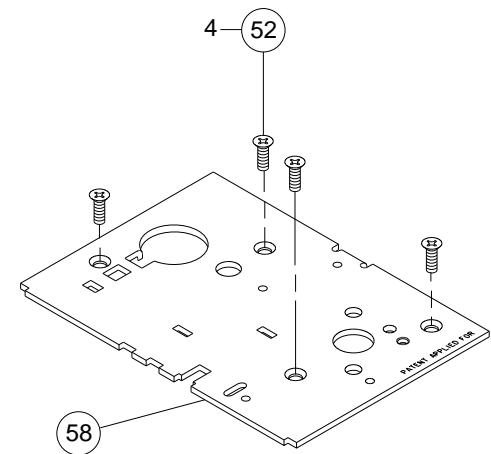


LV9082

Assembled Lock Case L283-182

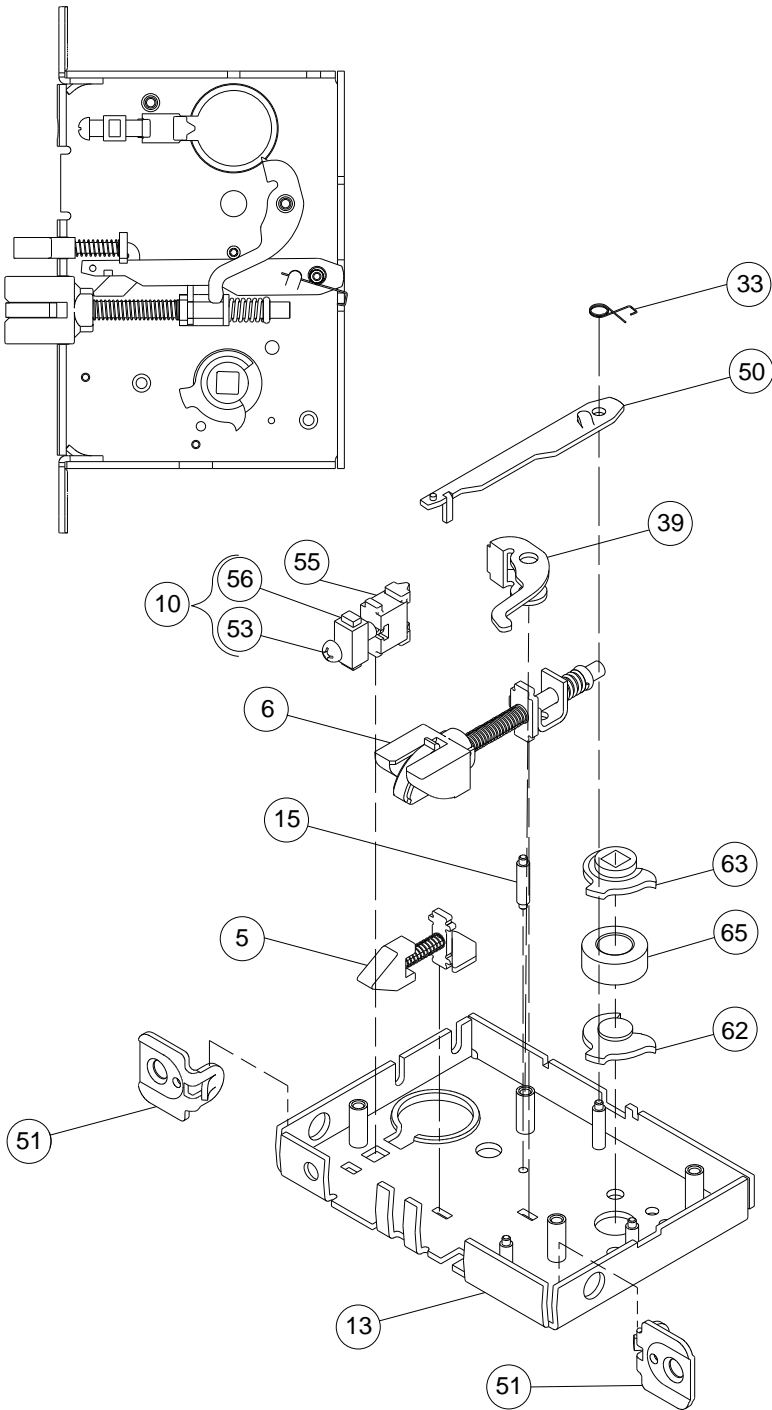


Number	Description	Part Number
5	Auxiliary Latchbolt	L283-006
6	Latchbolt	L283-008
10	Cylinder Plate & Screw	L283-055
13	L9000 Lock Case	L283-112
15	Standoff Post	L583-004
33	Stop Spring	L583-044
39	Transfer Lever	L583-051
50	Auxiliary Stop	L583-196
51	1 1/4" Faceplate Tab	L583-426
52	Case Cover Screws	L583-454
53	Cylinder Retainer Screw	L583-481
55	Cylinder Retainer	L583-490
56	Screw Plate	L583-492
58	Lock Case Cover	L583-496
62	Bottom Hub	L583-386
63	Top Hub	L583-387
65	Spacer	L583-346

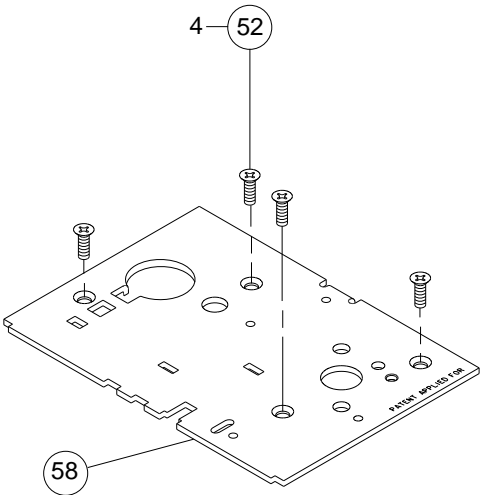


L9082EL

Assembled Lock Case L283-085

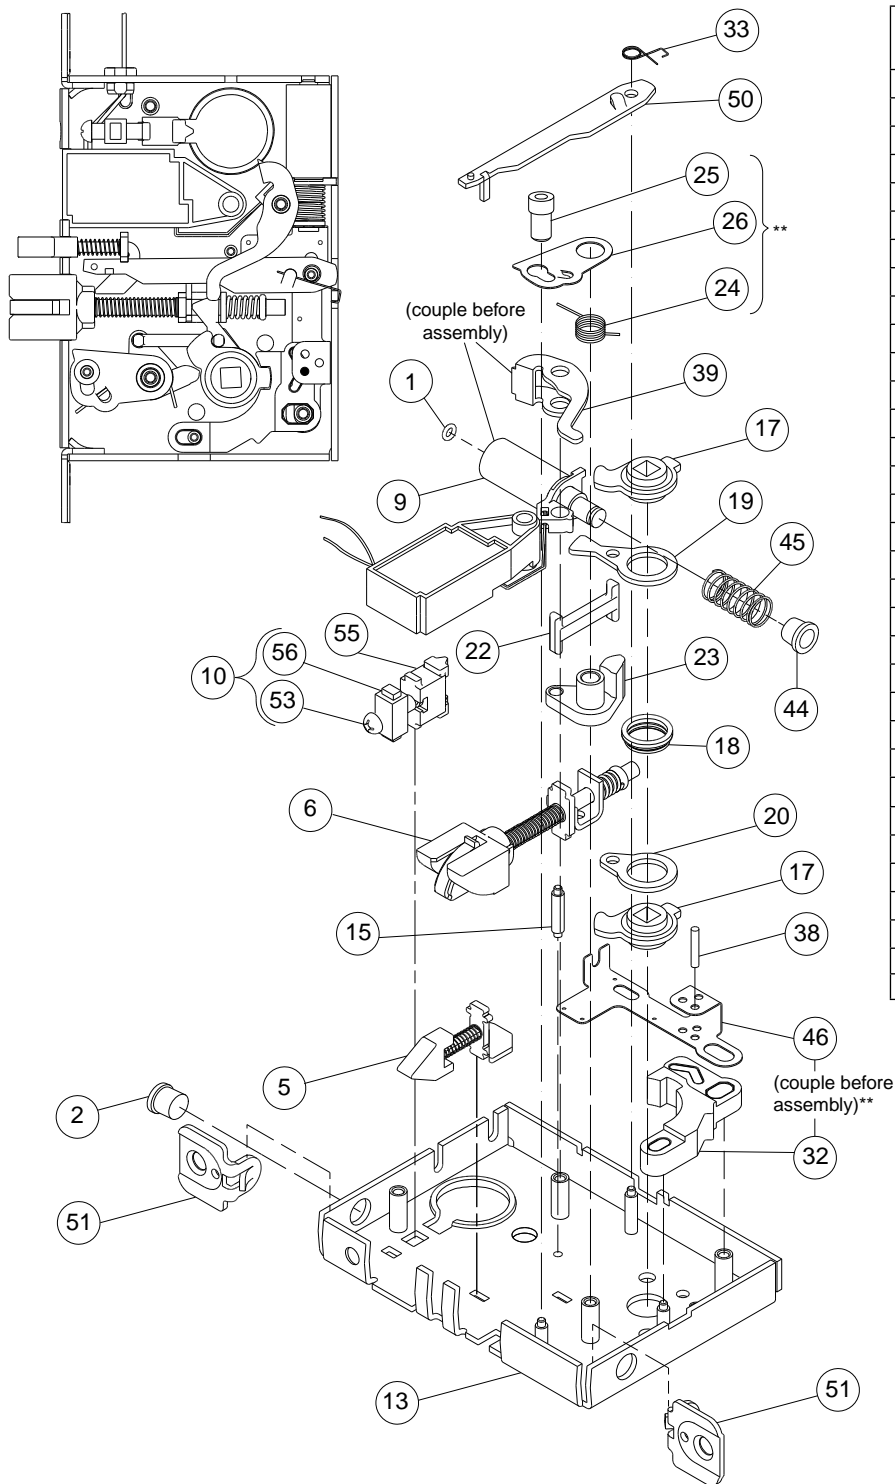

Number	Description	Part Number
1	O-Ring	36-080
2	Bushing	K510-842
5	Auxiliary Latchbolt	L283-006
6	Latchbolt	L283-008
9	Solenoid & Driver	L283-053
10	Cylinder Plate & Screw	L283-055
13	L9000 Lock Case	L283-112
15	Standoff Post	L583-004
17	Retractor Hub	L583-019
18	Hub Spacer	L583-020
19	Retractor Lever	L583-021
20	Retractor Rocker	L583-022
22	Retractor Link	L583-024
23	Retractor Crank	L583-025
24	Hub Spring	L583-026
25	Fire Door Fuse	L583-027
26	Fire Door Catch	L583-028
32	Locking Catch	L583-043
33	Stop Spring	L583-044
38	Link Pin	L583-050
39	Transfer Lever	L583-051
44	Spring Retainer	L583-063
45	Solenoid Spring	L583-064
46	Electrified Link	L583-065
50	Auxiliary Stop	L583-196
51	1 1/4" Faceplate Tab	L583-426
52	Case Cover Screws	L583-454
53	Cylinder Retainer Screw	L583-481
54	Lock Handing Screw	L583-485
55	Cylinder Retainer	L583-490
56	Screw Plate	L583-492
58	Lock Case Cover	L583-496
59	Lock Case w/Microswitch	n/a

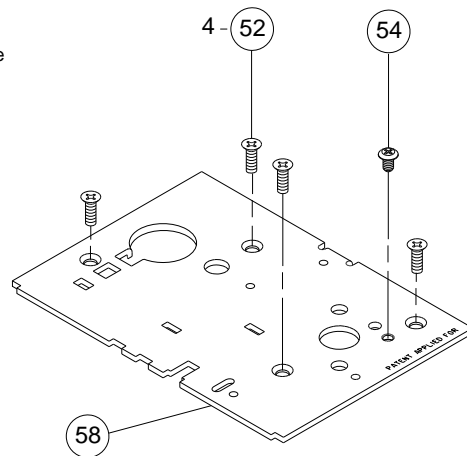


* See "Request to Exit (RX) Feature" on 84.


** See "Passage latch trim" on page 23.

L9082EU

Assembled Lock Case L283-086

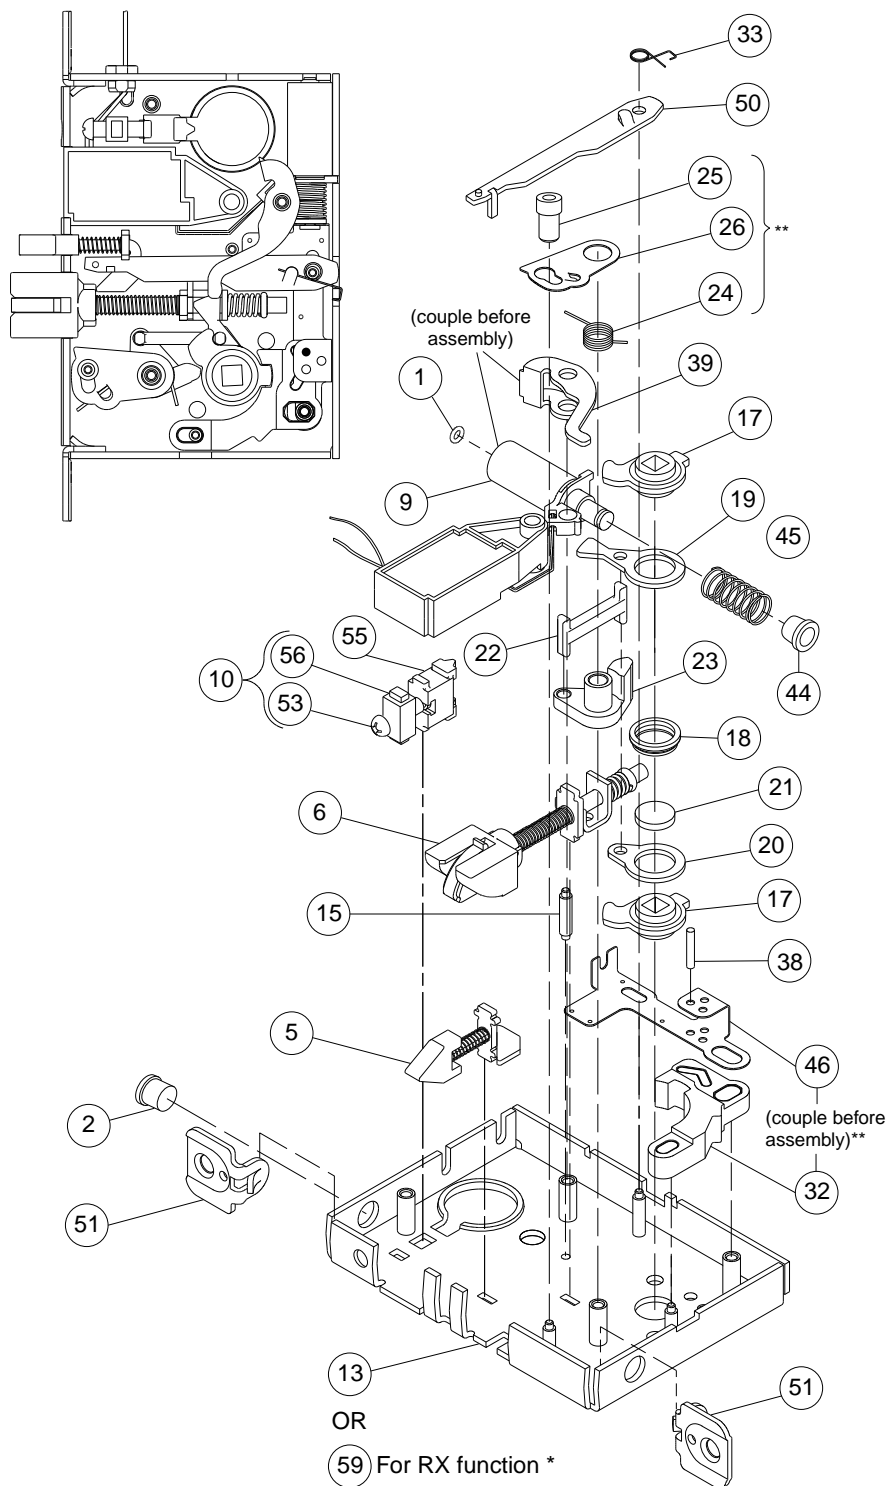

Number	Description	Part Number
1	O-Ring	36-080
2	Bushing	K510-842
5	Auxiliary Latchbolt	L283-006
6	Latchbolt	L283-008
9	Solenoid & Driver	L283-053
10	Cylinder Plate & Screw	L283-055
13	L9000 Lock Case	L283-112
15	Standoff Post	L583-004
17	Retractor Hub	L583-019
18	Hub Spacer	L583-020
19	Retractor Lever	L583-021
20	Retractor Rocker	L583-022
22	Retractor Link	L583-024
23	Retractor Crank	L583-025
24	Hub Spring	L583-026
25	Fire Door Fuse	L583-027
26	Fire Door Catch	L583-028
32	Locking Catch	L583-043
33	Stop Spring	L583-044
38	Link Pin	L583-050
39	Transfer Lever	L583-051
44	Spring Retainer	L583-063
45	Solenoid Spring	L583-064
46	Electrified Link	L583-065
50	Auxiliary Stop	L583-196
51	1 1/4" Faceplate Tab	L583-426
52	Case Cover Screws	L583-454
53	Cylinder Retainer Screw	L583-481
54	Lock Handling Screw	L583-485
55	Cylinder Retainer	L583-490
56	Screw Plate	L583-492
58	Lock Case Cover	L583-496
59	Lock Case w/Microswitch	n/a

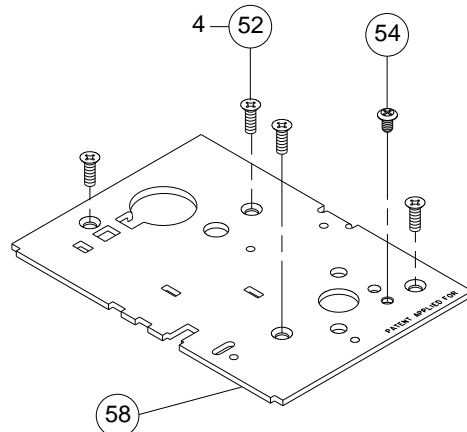


* See "Request to Exit (RX) Feature" on 84.


** See "Passage latch trim" on page 23.

L9110 x XL11-741

Assembled Lock Case XL11-741

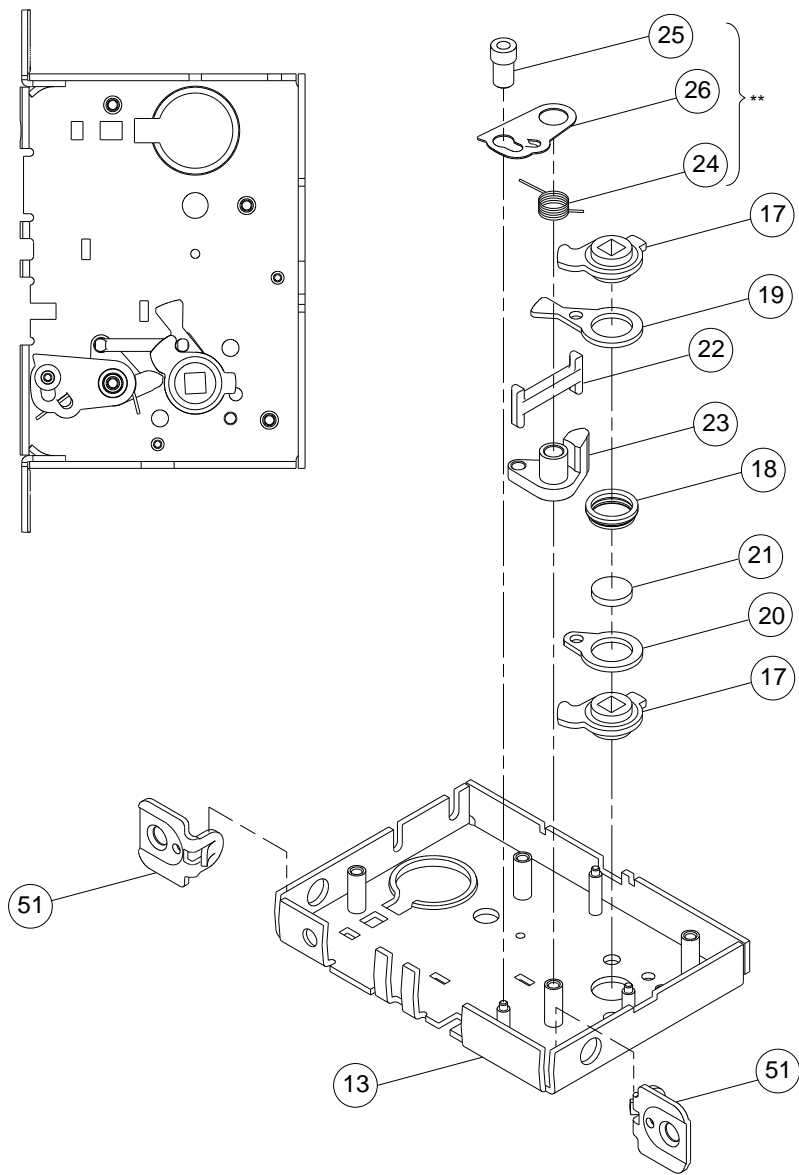


Number	Description	Part Number
13	L9000 Lock Case	L283-112
17	Retractor Hub	L583-019
18	Hub Spacer	L583-020
19	Retractor Lever	L583-021
20	Retractor Rocker	L583-022
21	Blocking Plate	L583-023
22	Retractor Link	L583-024
23	Retractor Crank	L583-025
24	Hub Spring	L583-026
25	Fire Door Fuse	L583-027
26	Fire Door Catch	L583-028
51	1 1/4" Faceplate Tab	L583-426
52	Case Cover Screws	L583-454
58	Lock Case Cover	L583-496

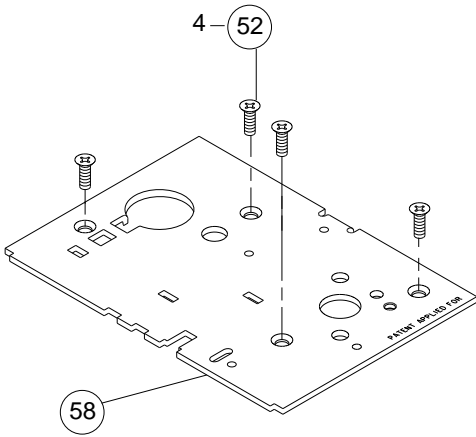


** See "Passage latch trim" on page 23.

L9175

Assembled Lock Case L283-144

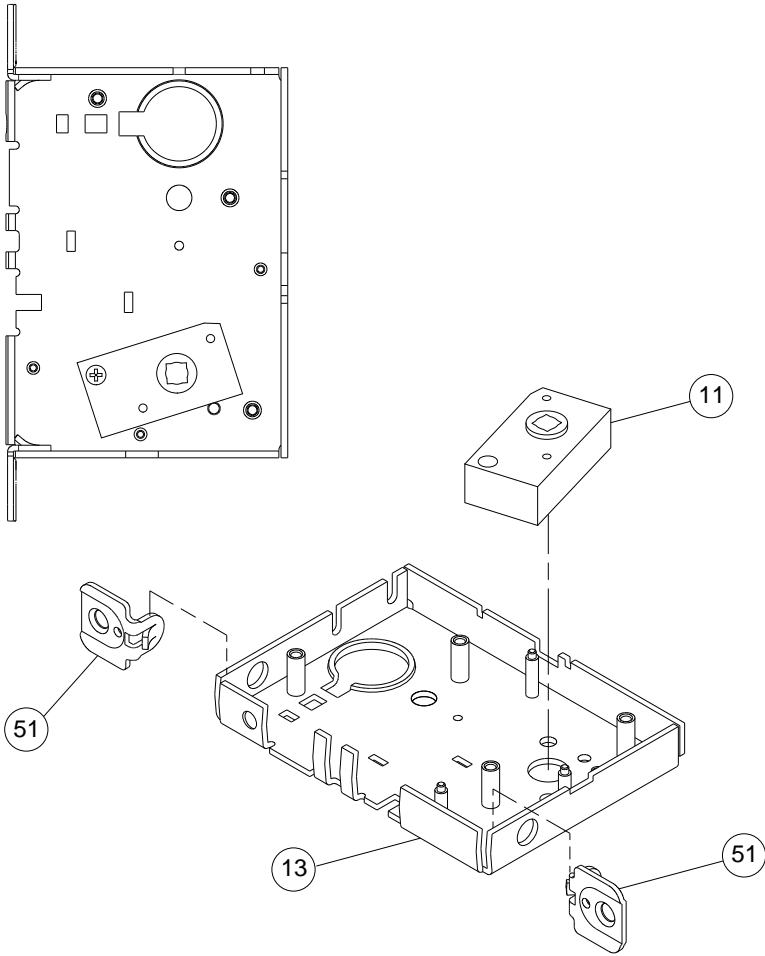


Number	Description	Part Number
11	Spindle Anchor Single	L583-468
13	L9000 Lock Case	L283-112
51	1 1/4" Faceplate Tab	L583-426
52	Case Cover Screws	L583-454
58	Lock Case Cover	L583-496

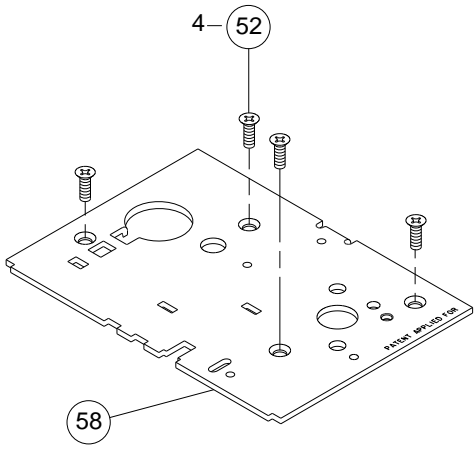

L9176


Assembled Lock Case L283-145

Number	Description	Part Number
13	L9000 Lock Case	L283-112
42	Spindle Anchor	L583-057
51	1¼" Faceplate Tab	L583-426
52	Case Cover Screws	L583-454
58	Lock Case Cover	L583-496

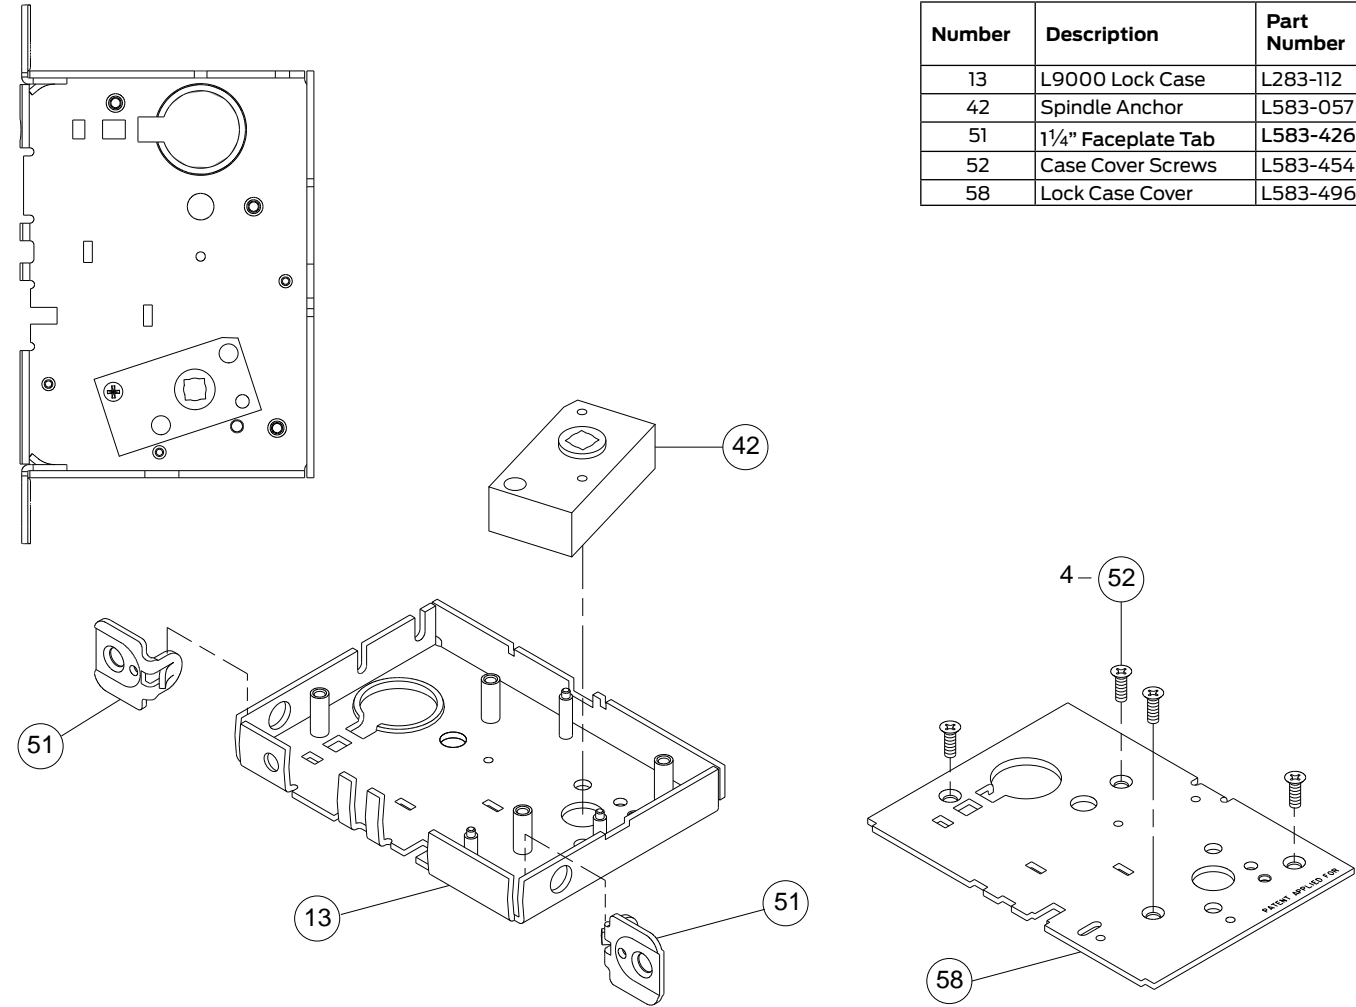


L9440, L9444

Assembled Lock Case L283-062

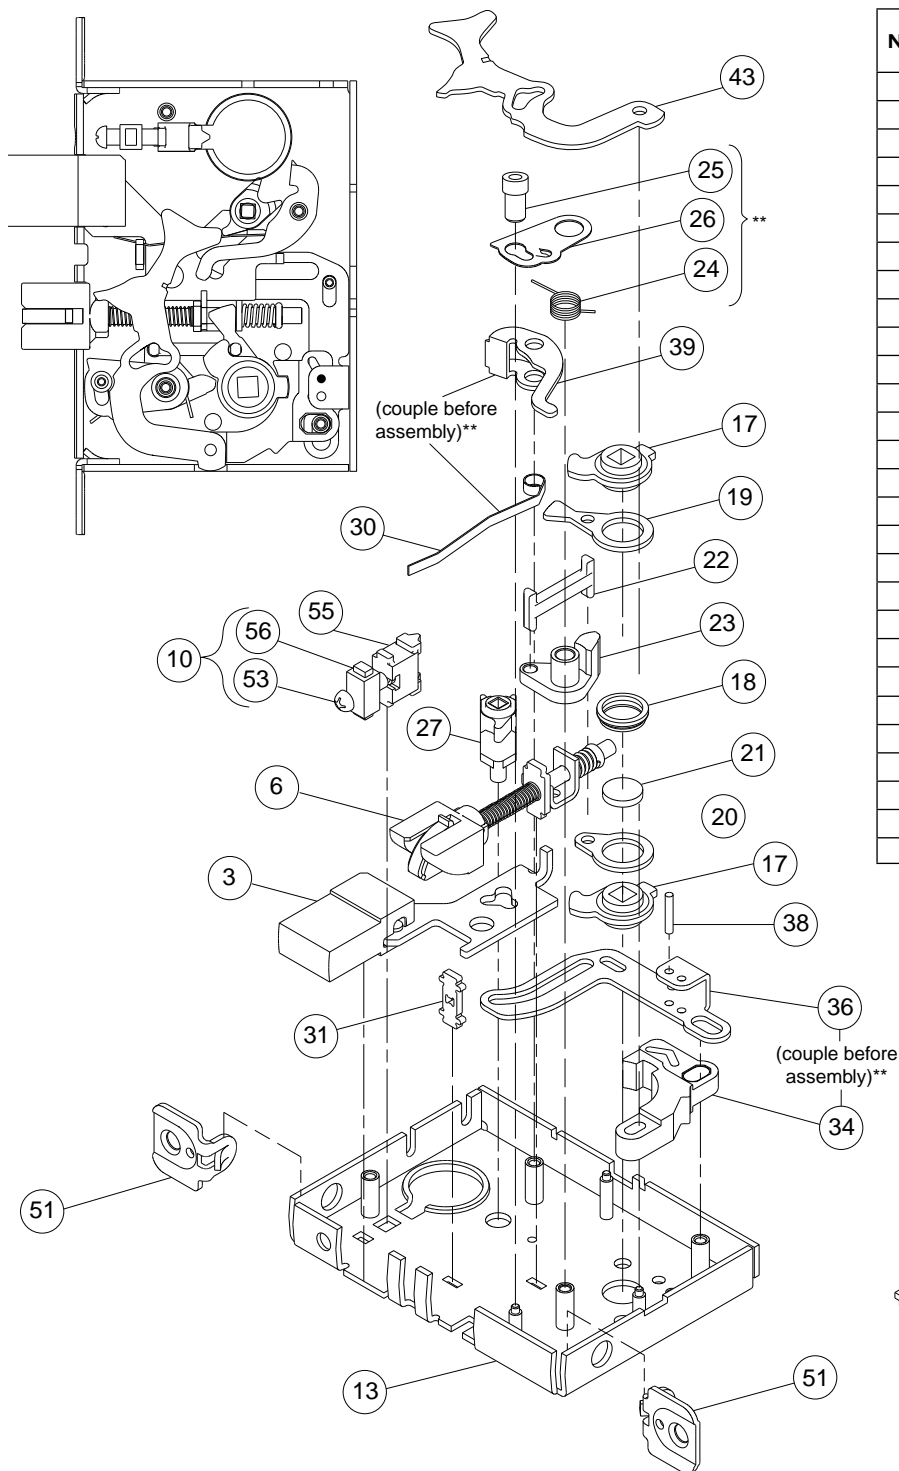


Number	Description	Part Number
3	Deadbolt	L283-003
6	Latchbolt	L283-008
13	L9000 Lock Case	L283-112
17	Retractor Hub	L583-019
18	Hub Spacer	L583-020
19	Retractor Lever	L583-021
20	Retractor Rocker	L583-022
21	Blocking Plate	L583-023
22	Retractor Link	L583-024
23	Retractor Crank	L583-025
24	Hub Spring	L583-026
25	Fire Door Fuse	L583-027
26	Fire Door Catch	L583-028
27	Turn Hub	L583-029
30	Turn Hub Spring	L583-035
31	Auxiliary Bar Guide	L583-038
34	Locking Catch	L583-045
36	Locking Link	L583-048
38	Link Pin	L583-050
39	Transfer Lever	L583-051
43	Simultaneous Retractor	L583-058
51	1 1/4" Faceplate Tab	L583-426
52	Case Cover Screws	L583-454
53	Cylinder Retainer Screw	L583-481
54	Lock Handing Screw	L583-485
55	Cylinder Retainer	L583-490
56	Screw Plate	L583-492
58	Lock Case Cover	L583-496

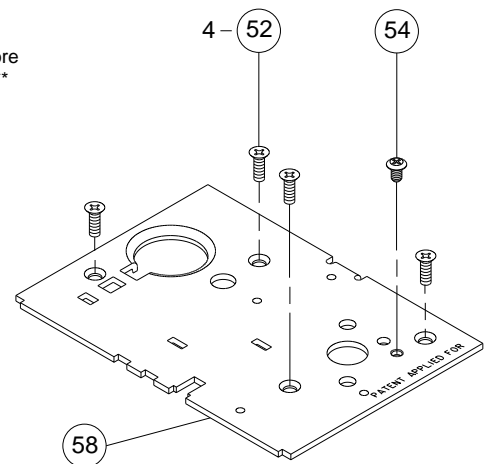


** See "Passage latch trim" on page 23.

LV9440, LV9444

Assembled Lock Case L283-181

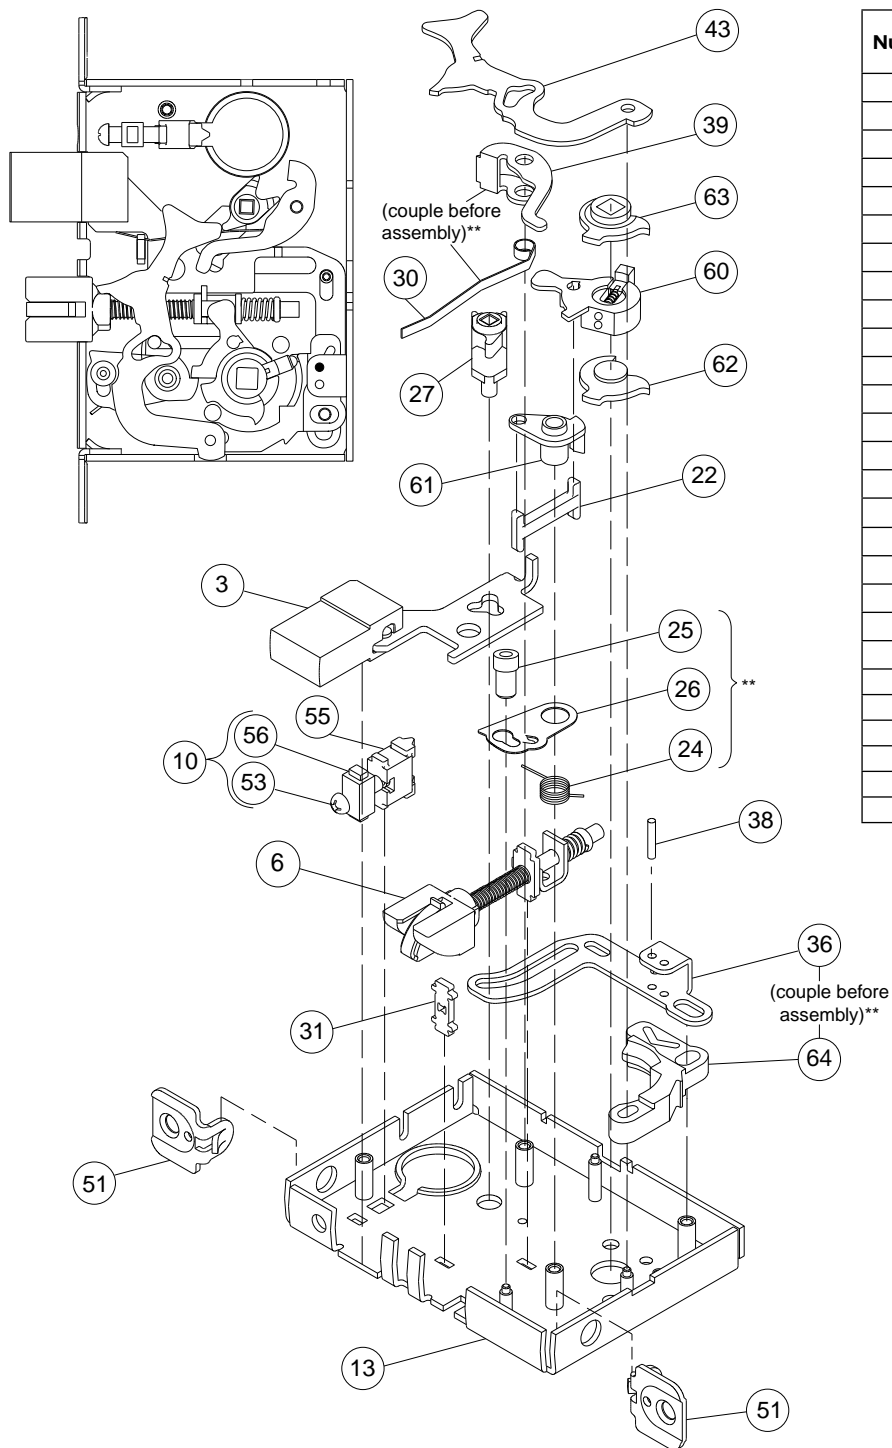


Number	Description	Part Number
3	Deadbolt	L283-003
6	Latchbolt	L283-008
10	Cylinder Plate & Screw	L283-055
13	L9000 Lock Case	L283-112
22	Retractor Link	L583-024
24	Hub Spring	L583-026
25	Fire Door Fuse	L583-027
26	Fire Door Catch	L583-028
27	Turn Hub	L583-029
30	Turn Hub Spring	L583-035
31	Auxiliary Bar Guide	L583-038
36	Locking Link	L583-048
38	Link Pin	L583-050
39	Transfer Lever	L583-051
43	Simultaneous Retractor	L583-058
51	1 1/4" Faceplate Tab	L583-426
52	Case Cover Screws	L583-454
53	Cylinder Retainer Screw	L583-481
54	Lock Handing Screw	L583-485
55	Cylinder Retainer	L583-490
56	Screw Plate	L583-492
58	Lock Case Cover	L583-496
60	Retractor Lever Assy	L283-147
61	Crank Retractor	L583-383
62	Bottom Hub	L583-386
63	Top Hub	L583-387
64	Retractor Catch	24061897

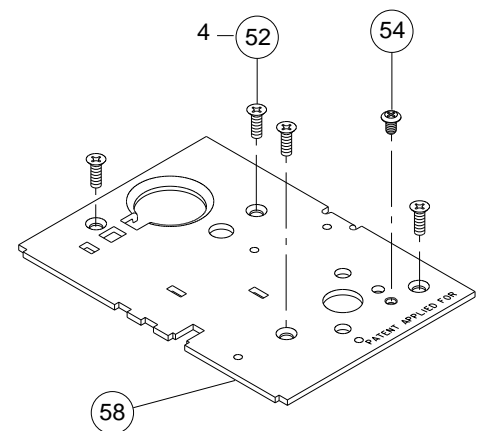


** See "Passage latch trim" on page 23.

L9453

Assembled Lock Case L283-137

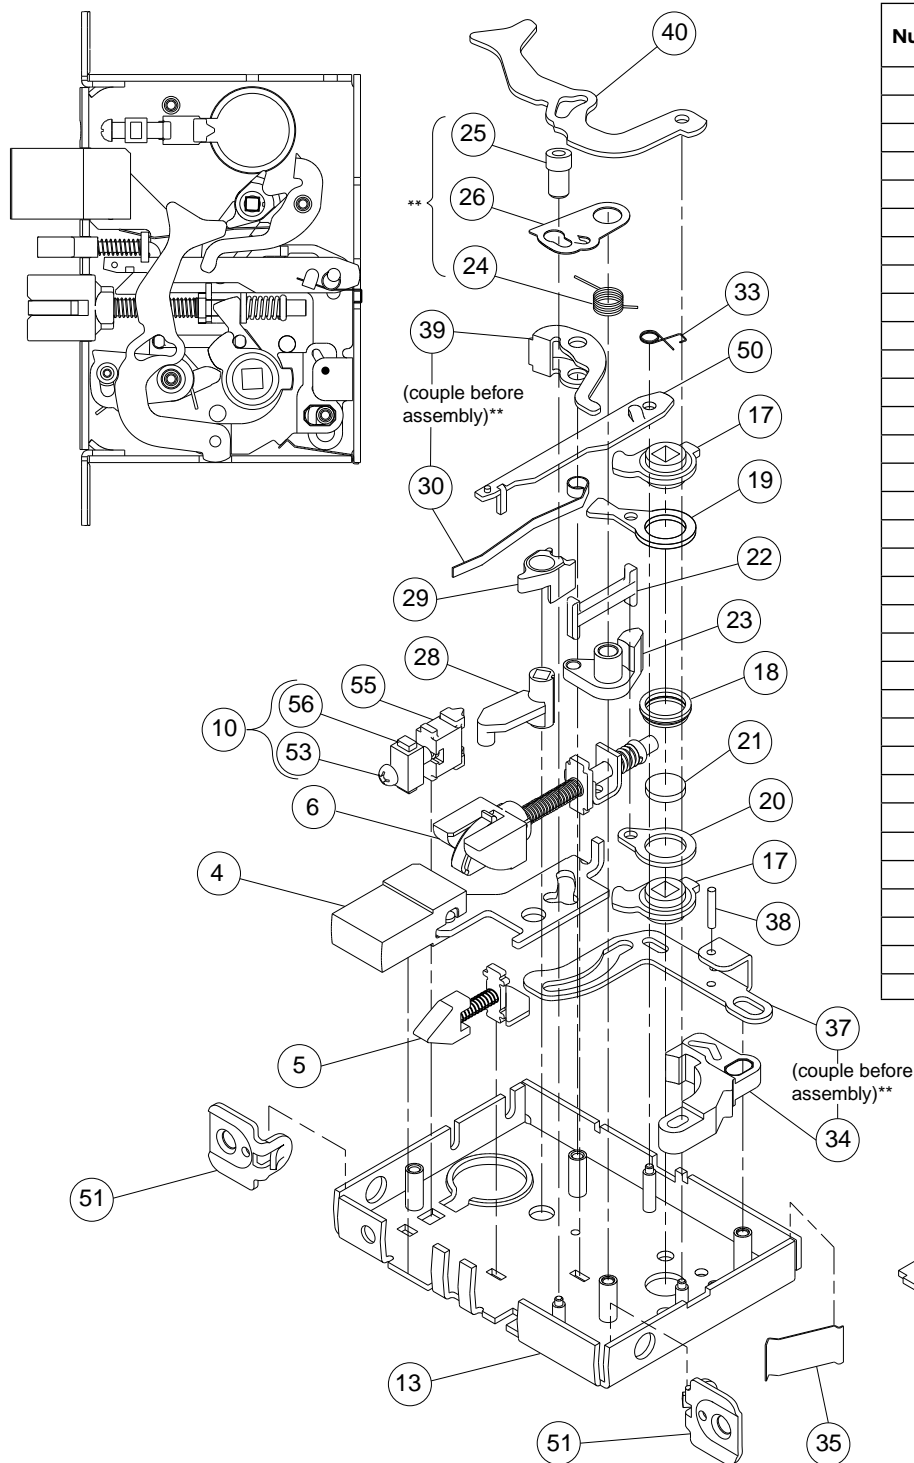


Number	Description	Part Number
4	Entrance Deadbolt	L283-004
5	Auxiliary Latchbolt	L283-006
6	Latchbolt	L283-008
10	Cylinder Plate & Screw	L283-055
13	L9000 Lock Case	L283-112
17	Retractor Hub	L583-019
18	Hub Spacer	L583-020
19	Retractor Lever	L583-021
20	Retractor Rocker	L583-022
21	Blocking Plate	L583-023
22	Retractor Link	L583-024
23	Retractor Crank	L583-025
24	Hub Spring	L583-026
25	Fire Door Fuse	L583-027
26	Fire Door Catch	L583-028
28	Entrance Hub	L583-030
29	Cam Follower	L583-031
30	Turn Hub Spring	L583-035
33	Stop Spring	L583-044
34	Locking Catch	L583-045
35	Catch Spring	L583-047
37	Entrance Link	L583-049
38	Link Pin	L583-050
39	Transfer Lever	L583-051
40	Simultaneous Retractor	L583-053
50	Auxiliary Stop	L583-196
51	1 1/4" Faceplate Tab	L583-426
52	Case Cover Screws	L583-454
53	Cylinder Retainer Screw	L583-481
54	Lock Handing Screw	L583-485
55	Cylinder Retainer	L583-490
56	Screw Plate	L583-492
58	Lock Case Cover	L583-496

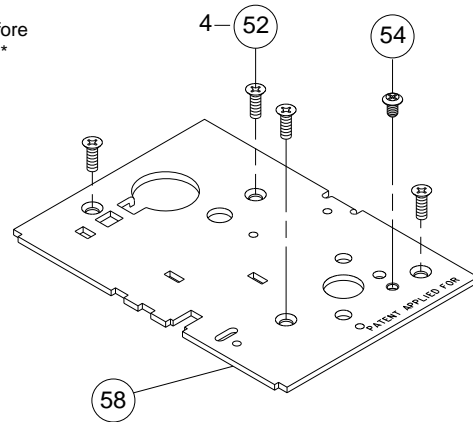


** See "Passage latch trim" on page 23.

LV9453

Assembled Lock Case L283-176

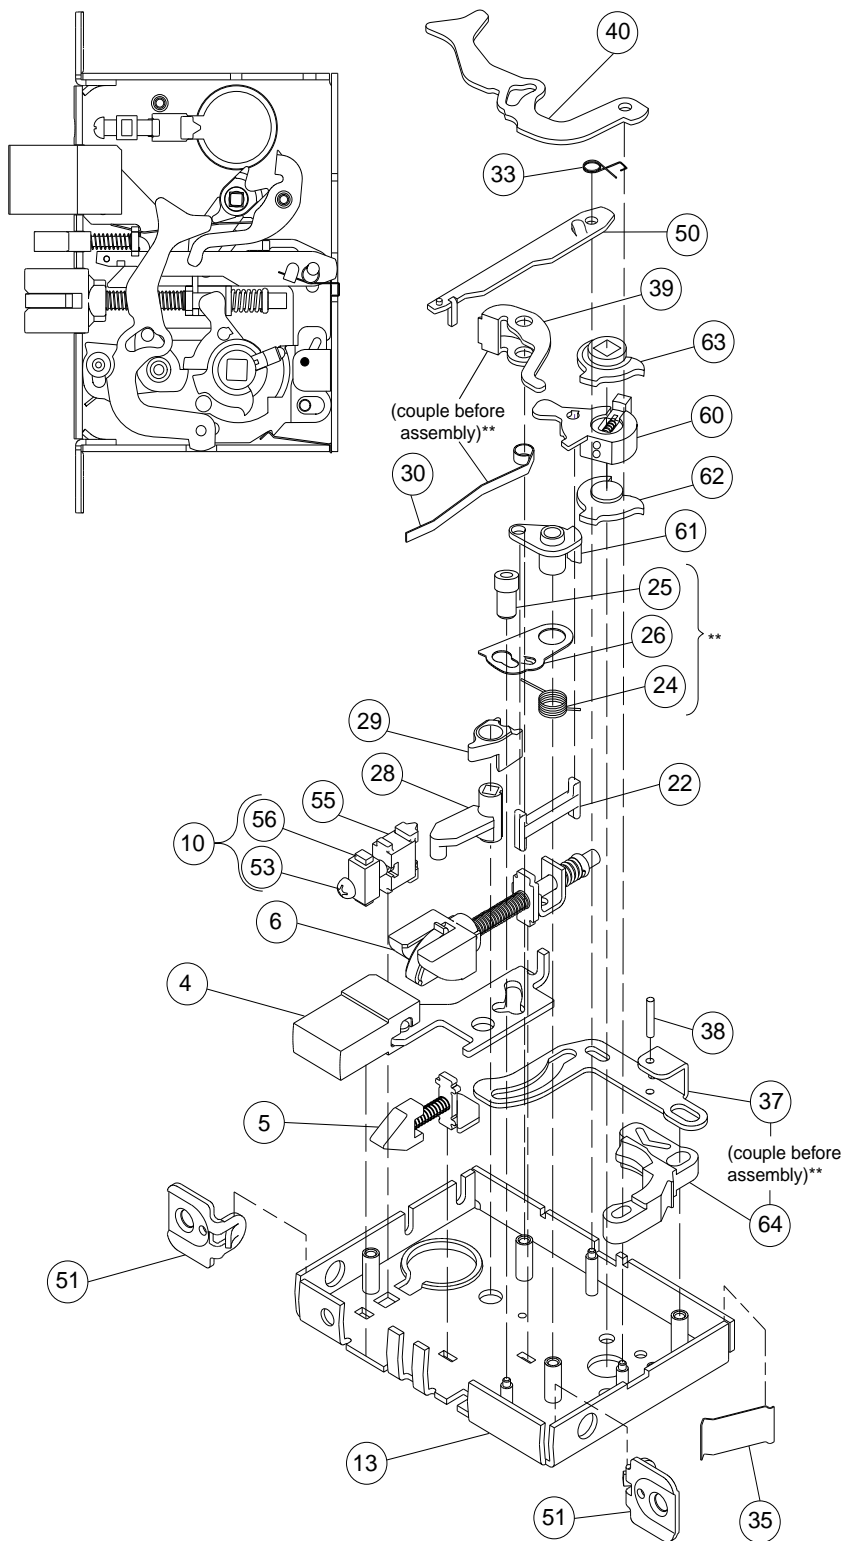


Number	Description	Part Number
4	Entrance Deadbolt	L283-004
5	Auxiliary Latchbolt	L283-006
6	Latchbolt	L283-008
10	Cylinder Plate & Screw	L283-055
13	L9000 Lock Case	L283-112
22	Retractor Link	L583-024
24	Hub Spring	L583-026
25	Fire Door Fuse	L583-027
26	Fire Door Catch	L583-028
28	Entrance Hub	L583-030
29	Cam Follower	L583-031
30	Turn Hub Spring	L583-035
33	Stop Spring	L583-044
35	Catch Spring	L583-047
37	Entrance Link	L583-049
38	Link Pin	L583-050
39	Transfer Lever	L583-051
40	Simultaneous Retractor	L583-053
50	Auxiliary Stop	L583-196
51	1 1/4" Faceplate Tab	L583-426
52	Case Cover Screws	L583-454
53	Cylinder Retainer Screw	L583-481
54	Lock Handing Screw	L583-485
55	Cylinder Retainer	L583-490
56	Screw Plate	L583-492
58	Lock Case Cover	L583-496
60	Retractor Lever Assy	L283-147
61	Crank Retractor	L583-383
62	Bottom Hub	L583-386
63	Top Hub	L583-387
64	Retractor Catch	L583-345

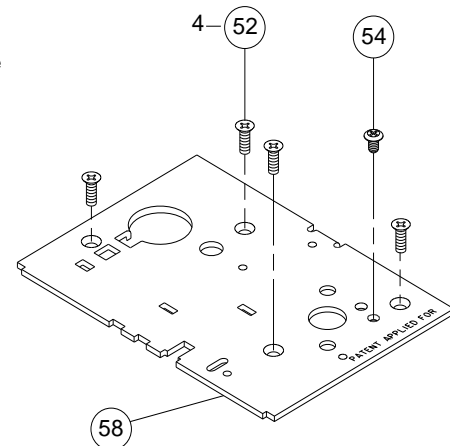


** See "Passage latch trim" on page 23.

L9456, L9457, L9496

Assembled Lock Case L283-138

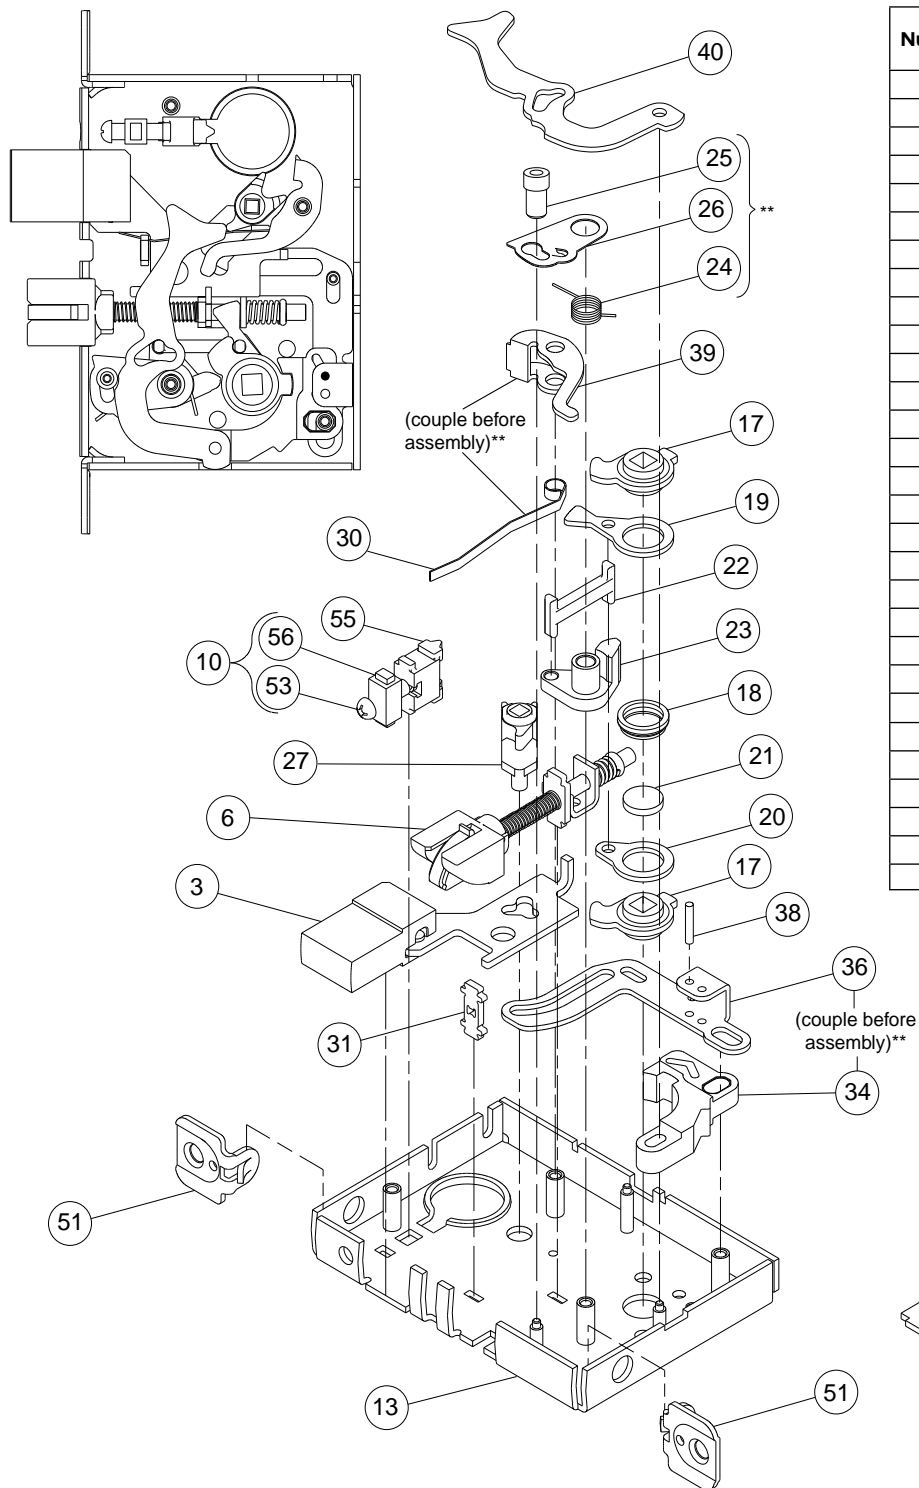


Number	Description	Part Number
3	Deadbolt	L283-003
6	Latchbolt	L283-008
10	Cylinder Plate & Screw	L283-055
13	L9000 Lock Case	L283-112
17	Retractor Hub	L583-019
18	Hub Spacer	L583-020
19	Retractor Lever	L583-021
20	Retractor Rocker	L583-022
21	Blocking Plate	L583-023
22	Retractor Link	L583-024
23	Retractor Crank	L583-025
24	Hub Spring	L583-026
25	Fire Door Fuse	L583-027
26	Fire Door Catch	L583-028
27	Turn Hub	L583-029
30	Turn Hub Spring	L583-035
31	Auxiliary Bar Guide	L583-038
34	Locking Catch	L583-045
36	Locking Link	L583-048
38	Link Pin	L583-050
39	Transfer Lever	L583-051
40	Simultaneous Retractor	L583-053
51	1 1/4" Faceplate Tab	L583-426
52	Case Cover Screws	L583-454
53	Cylinder Retainer Screw	L583-481
54	Lock Handing Screw	L583-485
55	Cylinder Retainer	L583-490
56	Screw Plate	L583-492
58	Lock Case Cover	L583-496

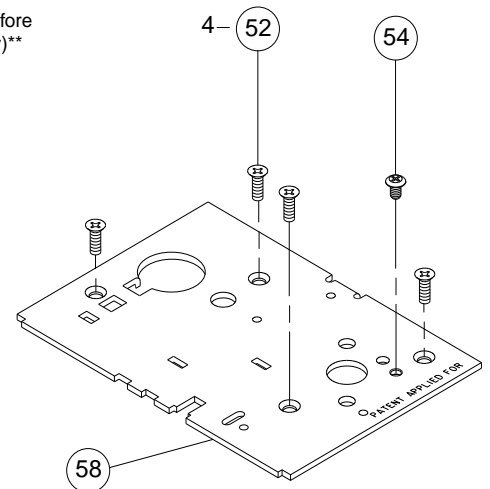


** See "Passage latch trim" on page 23.

LV9456, LV9457, LV9496

Assembled Lock Case L283-177

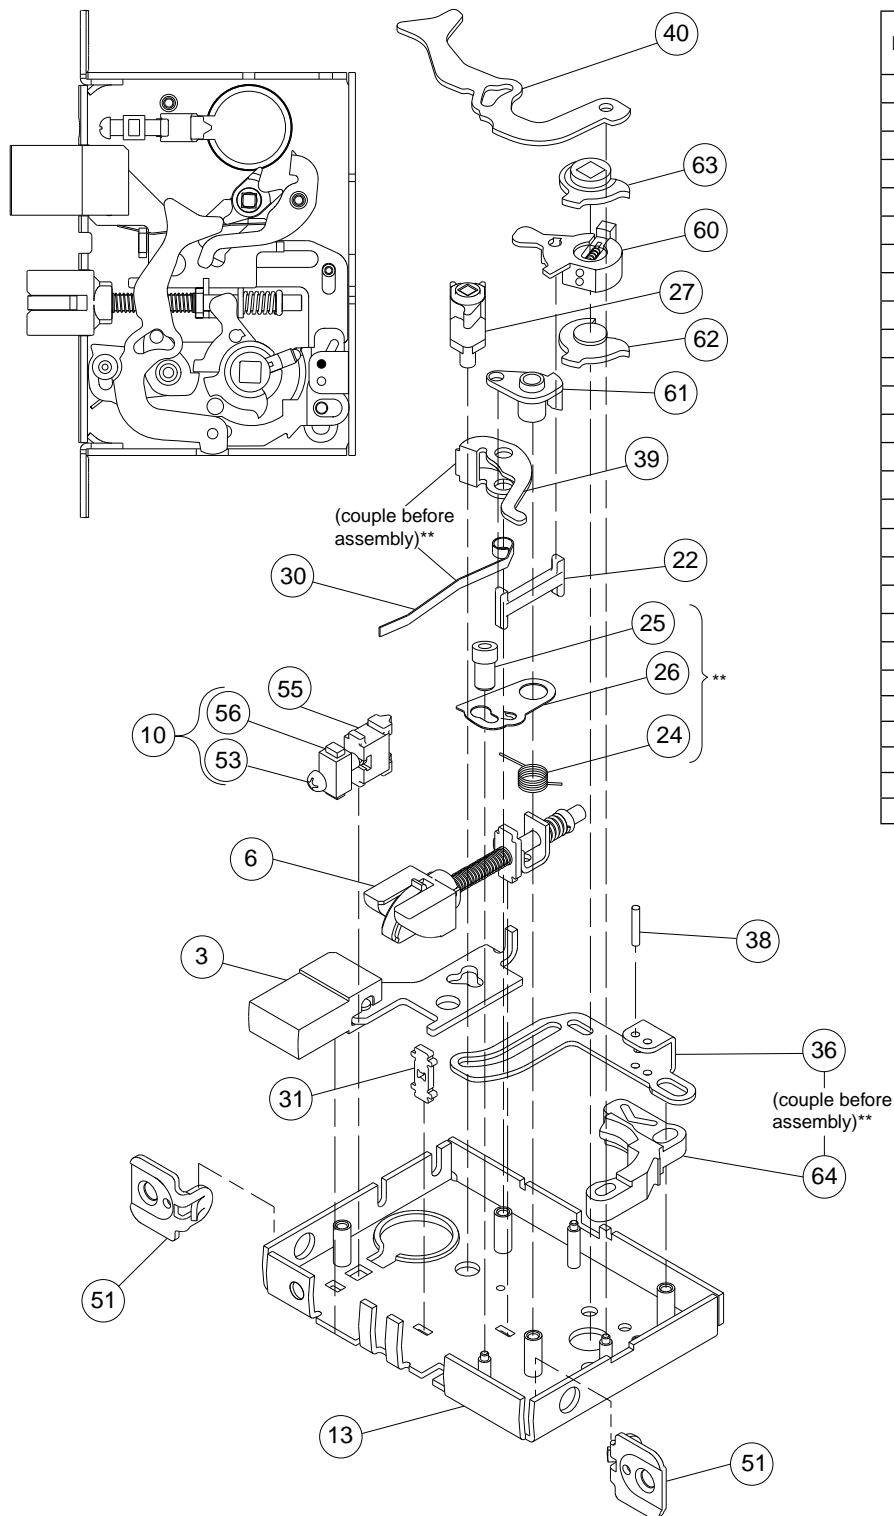


Number	Description	Part Number
3	Deadbolt	L283-003
6	Latchbolt	L283-008
10	Cylinder Plate & Screw	L283-055
13	L9000 Lock Case	L283-112
22	Retractor Link	L583-024
24	Hub Spring	L583-026
25	Fire Door Fuse	L583-027
26	Fire Door Catch	L583-028
27	Turn Hub	L583-029
30	Turn Hub Spring	L583-035
31	Auxiliary Bar Guide	L583-038
36	Locking Link	L583-048
38	Link Pin	L583-050
39	Transfer Lever	L583-051
40	Simultaneous Retractor	L583-053
51	1 1/4" Faceplate Tab	L583-426
52	Case Cover Screws	L583-454
53	Cylinder Retainer Screw	L583-481
54	Lock Handling Screw	L583-485
55	Cylinder Retainer	L583-490
56	Screw Plate	L583-492
58	Lock Case Cover	L583-496
60	Retractor Lever Assy	L283-147
61	Crank Retractor	L583-383
62	Bottom Hub	L583-386
63	Top Hub	L583-387
64	Retractor Catch	24061897

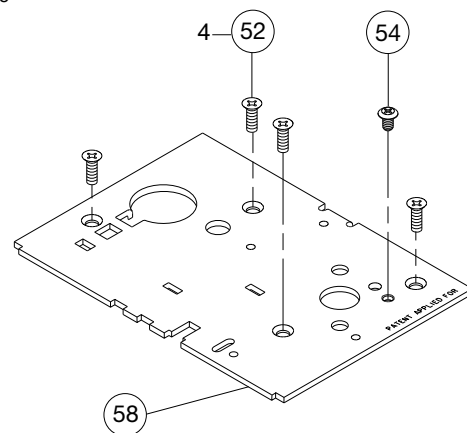


** See "Passage latch trim" on page 23.

L9458

Assembled Lock Case L283-310

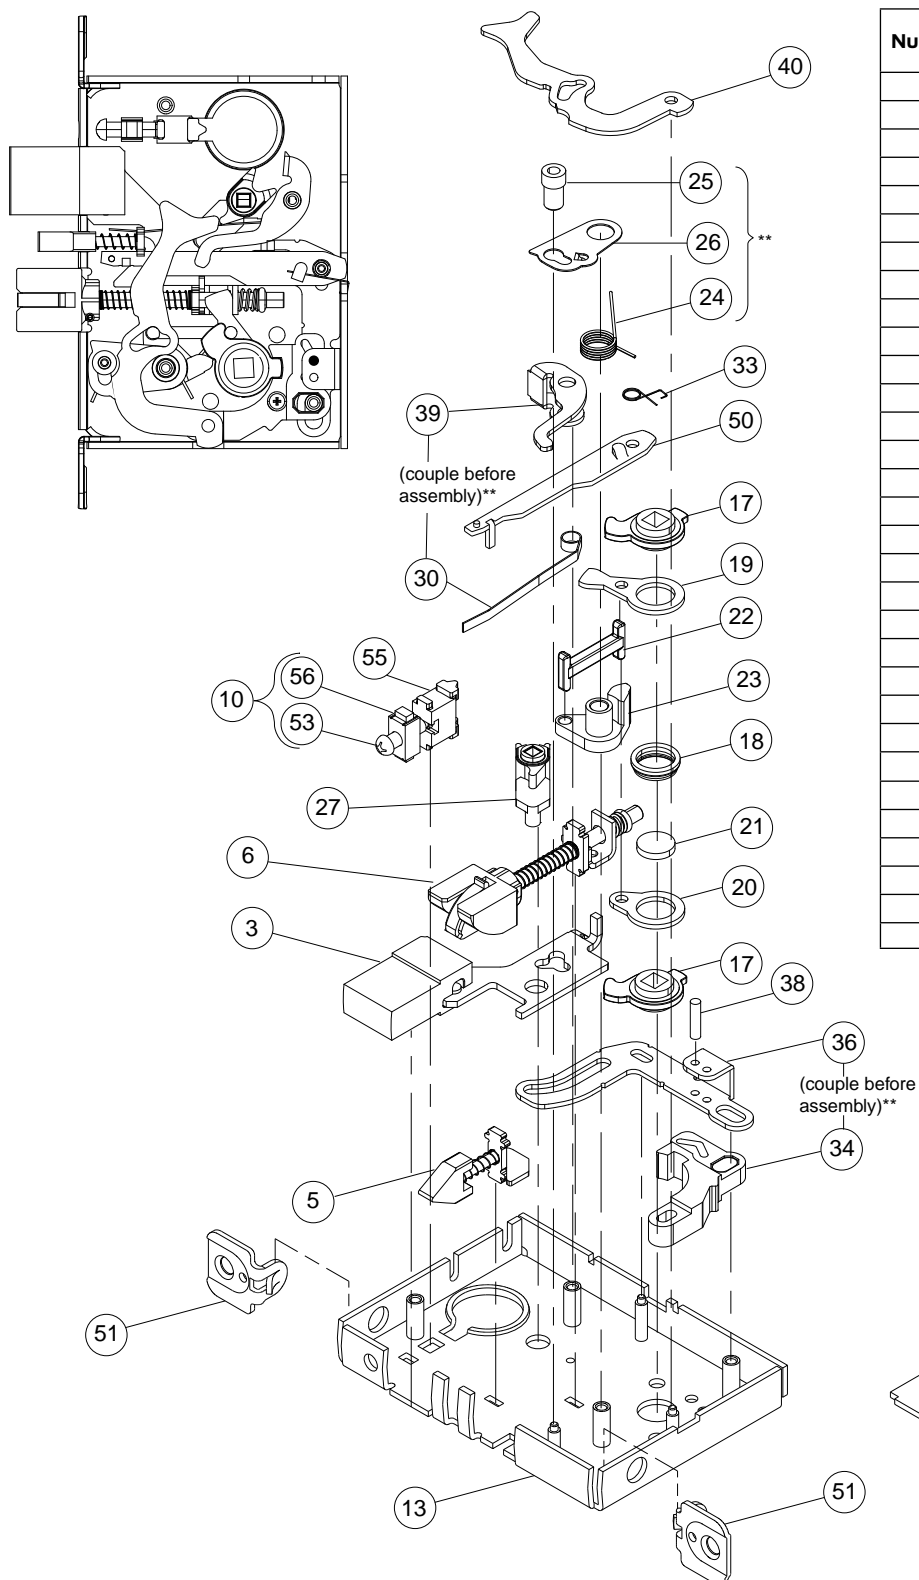


Number	Description	Part Number
3	Deadbolt	L283-003
5	Auxiliary Latchbolt	L283-006
6	Latchbolt	L283-008
10	Cylinder Plate & Screw	L283-055
13	L9000 Lock Case	L283-112
17	Retractor Hub	L583-019
18	Hub Spacer	L583-020
19	Retractor Lever	L583-021
20	Retractor Rocker	L583-022
21	Blocking Plate	L583-023
22	Retractor Link	L583-024
23	Retractor Crank	L583-025
24	Hub Spring	L583-026
25	Fire Door Fuse	L583-027
26	Fire Door Catch	L583-028
27	Turn Hub	L583-029
30	Turn Hub Spring	L583-035
33	Stop Spring	L583-044
34	Locking Catch	L583-045
36	Locking Link	L583-048
38	Link Pin	L583-050
39	Transfer Lever	L583-051
40	Simultaneous Retractor	L583-053
50	Auxiliary Stop	L583-196
51	1 1/4" Faceplate Tab	L583-426
52	Case Cover Screws	L583-454
53	Cylinder Retainer Screw	L583-481
54	Lock Handing Screw	L583-485
55	Cylinder Retainer	L583-490
56	Screw Plate	L583-492
58	Lock Case Cover	L583-496

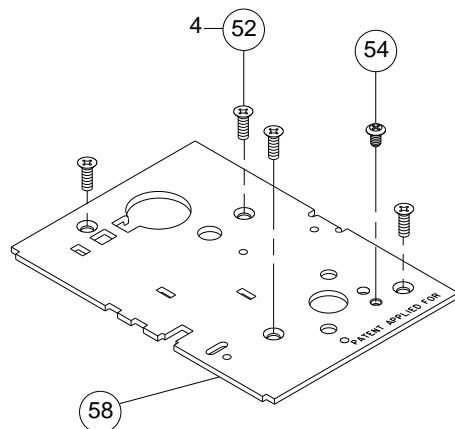

** See "Passage latch trim" on page 23.

LV9458

Assembled Lock Case L283-311

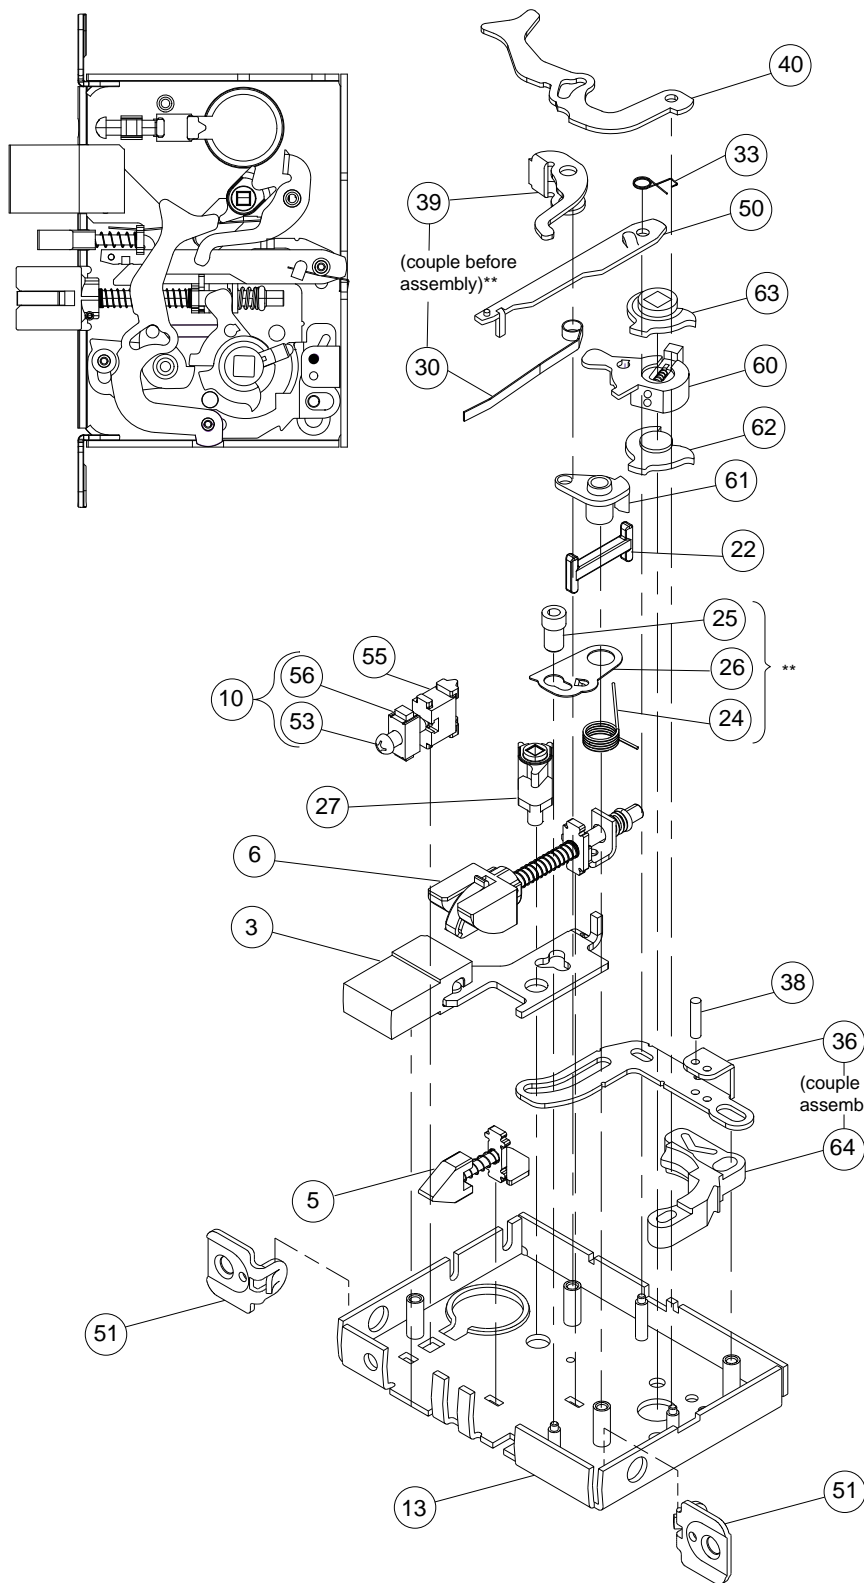


Number	Description	Part Number
3	Deadbolt	L283-003
5	Auxiliary Latchbolt	L283-006
6	Latchbolt	L283-008
10	Cylinder Plate & Screw	L283-055
13	L9000 Lock Case	L283-112
22	Retractor Link	L583-024
24	Hub Spring	L583-026
25	Fire Door Fuse	L583-027
26	Fire Door Catch	L583-028
27	Turn Hub	L583-029
30	Turn Hub Spring	L583-035
33	Stop Spring	L583-044
36	Locking Link	L583-048
38	Link Pin	L583-050
39	Transfer Lever	L583-051
40	Simultaneous Retractor	L583-053
50	Auxiliary Stop	L583-196
51	1 1/4" Faceplate Tab	L583-426
52	Case Cover Screws	L583-454
53	Cylinder Retainer Screw	L583-481
54	Lock Handing Screw	L583-485
55	Cylinder Retainer	L583-490
56	Screw Plate	L583-492
58	Lock Case Cover	L583-496
60	Retractor Lever Assy	L283-147
61	Crank Retractor	L583-383
62	Bottom Hub	L583-386
63	Top Hub	L583-387
64	Retractor Catch	L583-345

** See "Passage latch trim" on page 23.


L9460, L9462, L9463, L9464

Assembled Lock Case L283-139

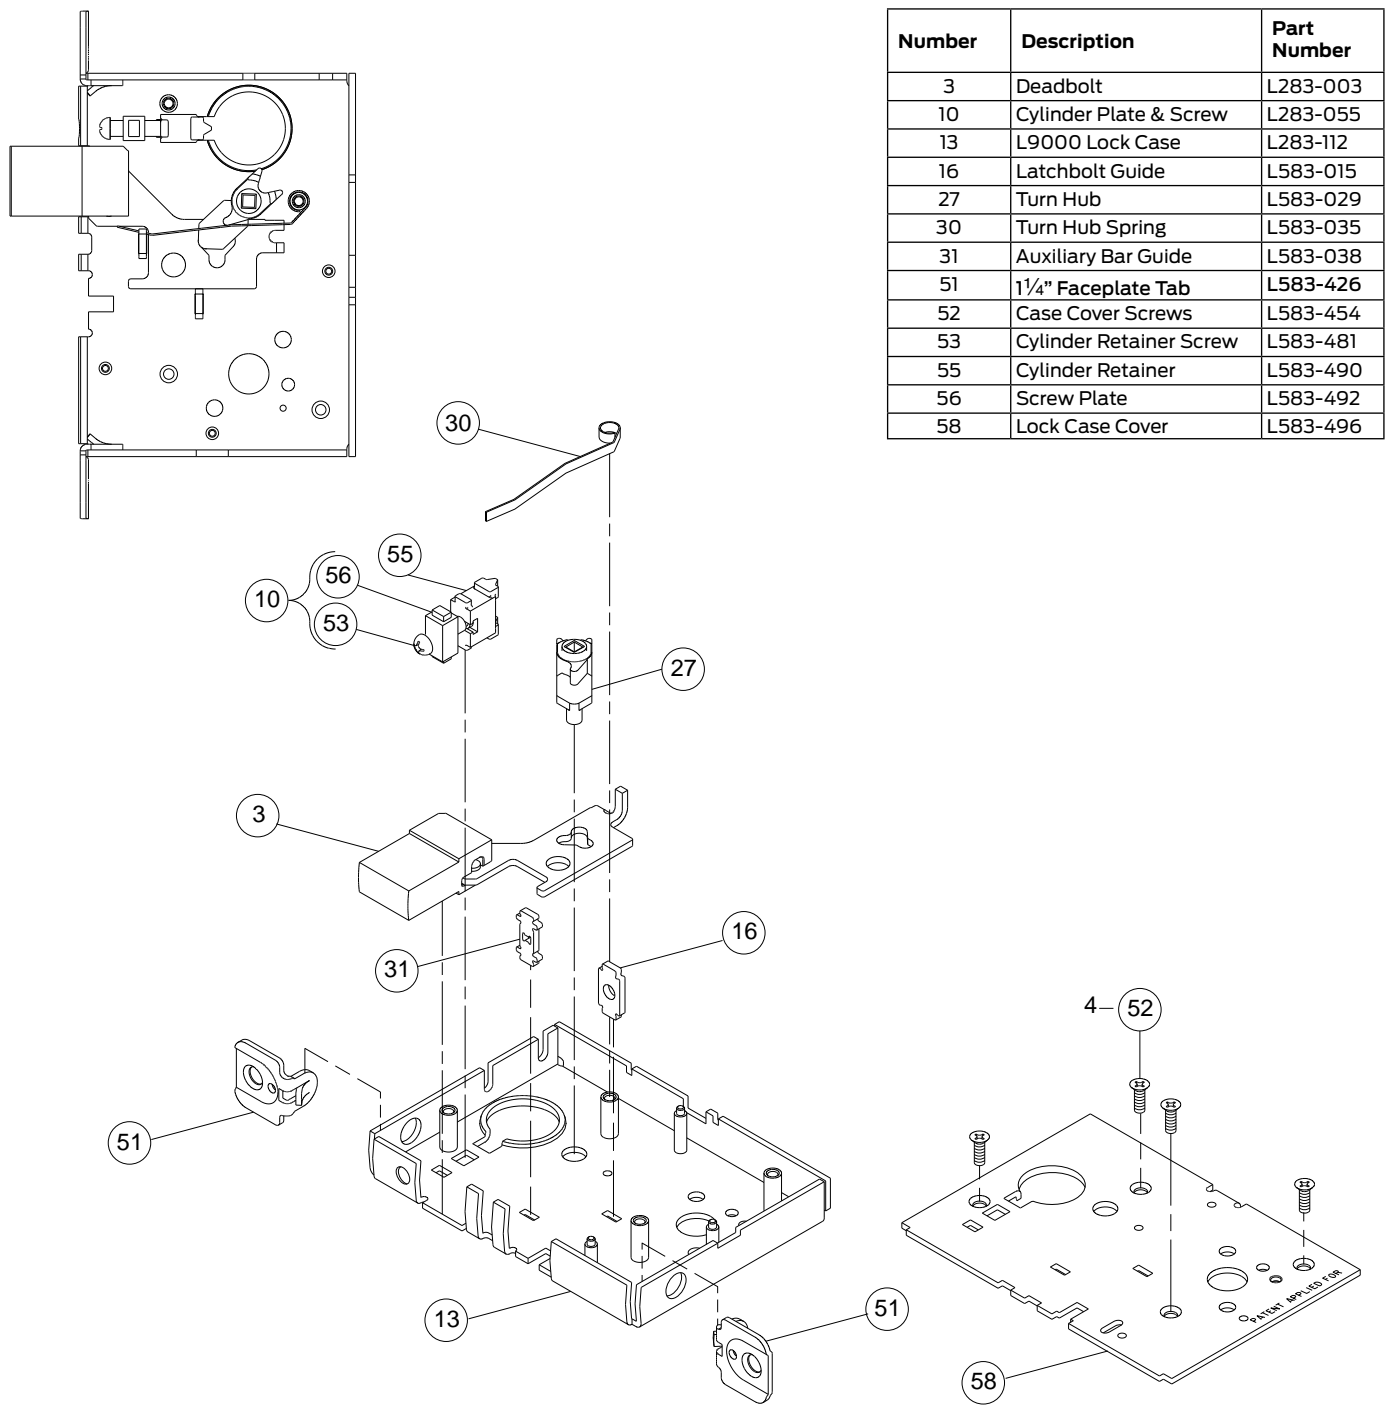


L9460 x XL11-635

Assembled Lock Case XL11-661

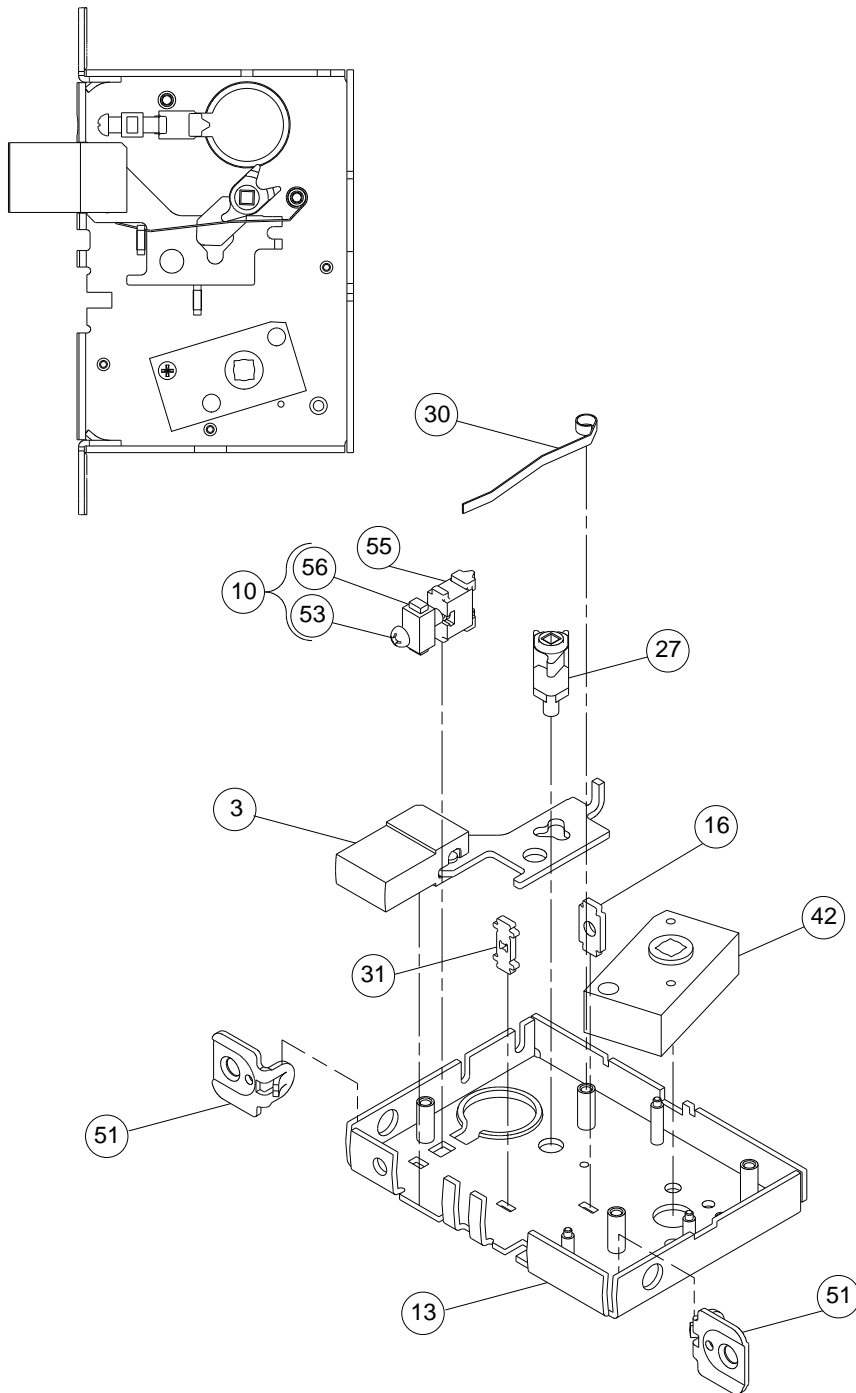


Number	Description	Part Number
3	Deadbolt	L283-003
10	Cylinder Plate & Screw	L283-055
13	L9000 Lock Case	L283-112
16	Latchbolt Guide	L583-015
27	Turn Hub	L583-029
30	Turn Hub Spring	L583-035
31	Auxiliary Bar Guide	L583-038
42	Spindle Anchor	L583-057
51	1 1/4" Faceplate Tab	L583-426
52	Case Cover Screws	L583-454
53	Cylinder Retainer Screw	L583-481
55	Cylinder Retainer	L583-490
56	Screw Plate	L583-492
58	Lock Case Cover	L583-496

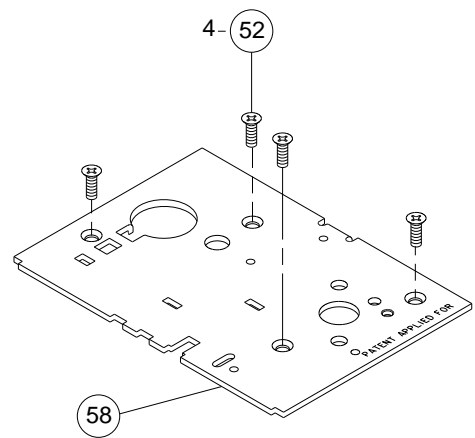

L9460 x XL11-886, L9462 x XL11-886, L9464 x XL11-886


Assembled Lock Case XL11-886

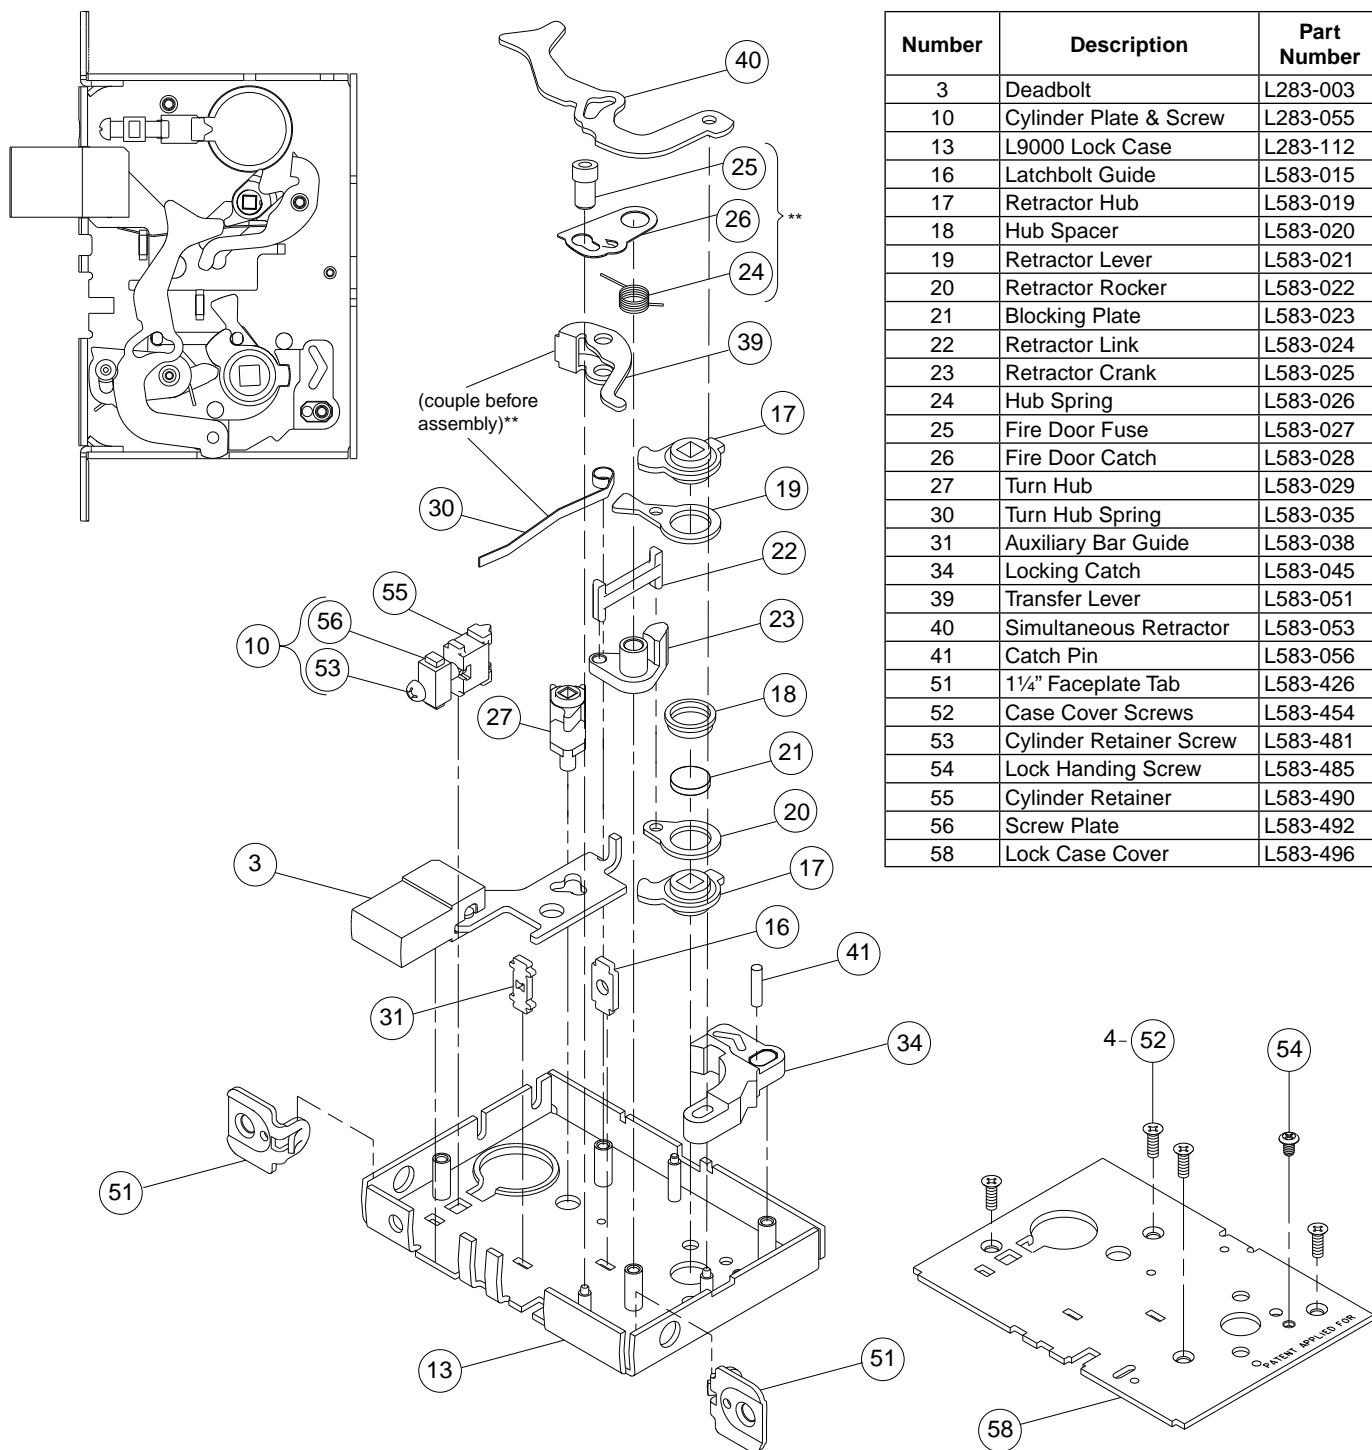


** See "Passage latch trim" on page 23.

L9465, L9466, L9473

Assembled Lock Case L283-140

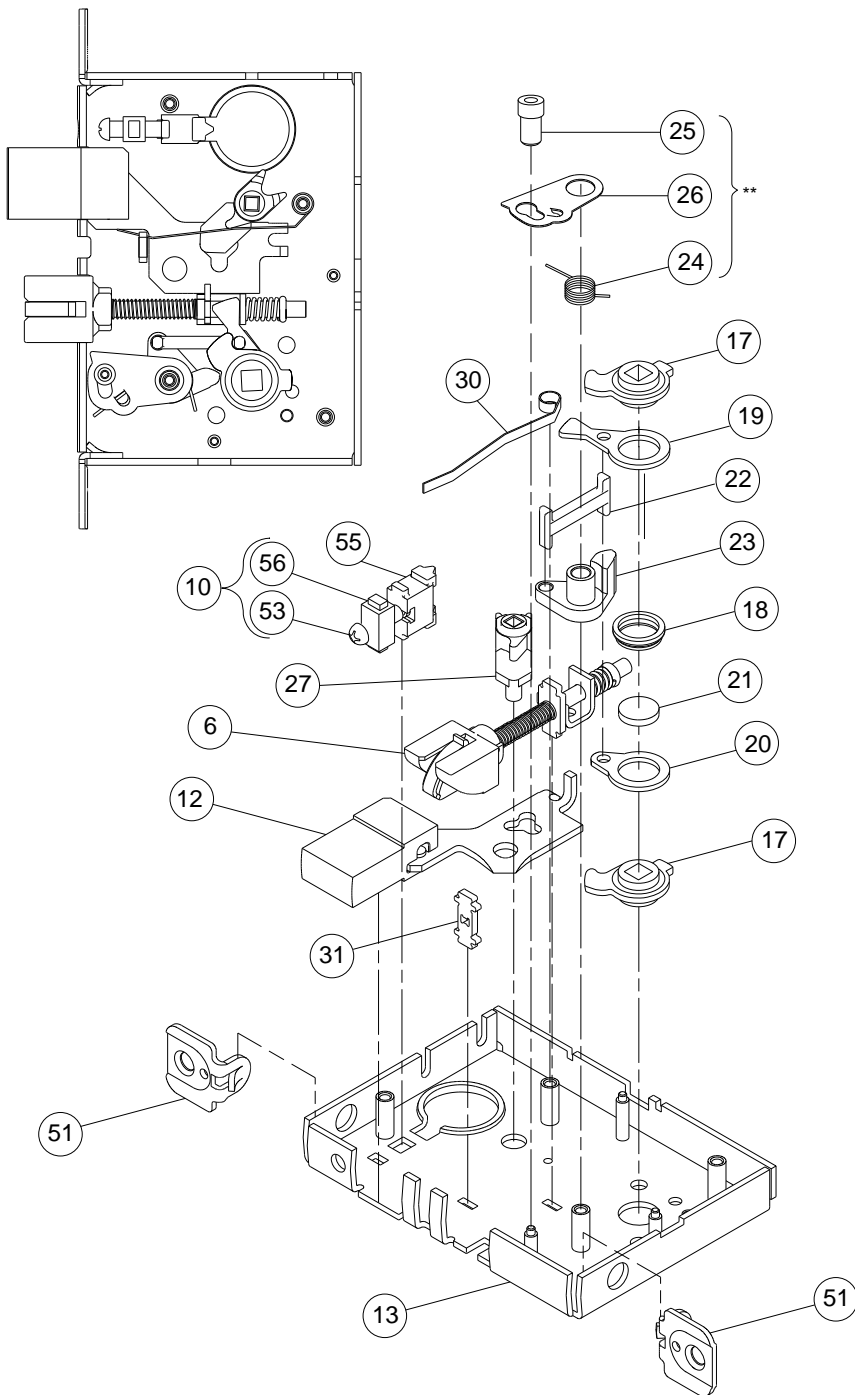


Number	Description	Part Number
6	Latchbolt	L283-008
10	Cylinder Plate & Screw	L283-055
12	Deadbolt	L583-075
13	L9000 Lock Case	L283-112
17	Retractor Hub	L583-019
18	Hub Spacer	L583-020
19	Retractor Lever	L583-021
20	Retractor Rocker	L583-022
21	Blocking Plate	L583-023
22	Retractor Link	L583-024
23	Retractor Crank	L583-025
24	Hub Spring	L583-026
25	Fire Door Fuse	L583-027
26	Fire Door Catch	L583-028
27	Turn Hub	L583-029
30	Turn Hub Spring	L583-035
31	Auxiliary Bar Guide	L583-038
51	1 1/4" Faceplate Tab	L583-426
52	Case Cover Screws	L583-454
53	Cylinder Retainer Screw	L583-481
55	Cylinder Retainer	L583-490
56	Screw Plate	L583-492
58	Lock Case Cover	L583-496

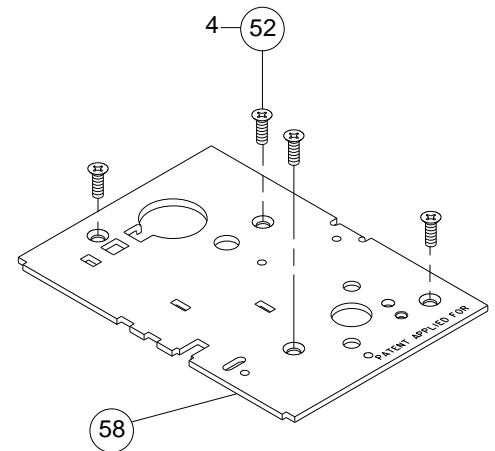


** See "Passage latch trim" on page 23.

L9480, L9485, L9486, L9486 x L583-375

Assembled Lock Case L283-141

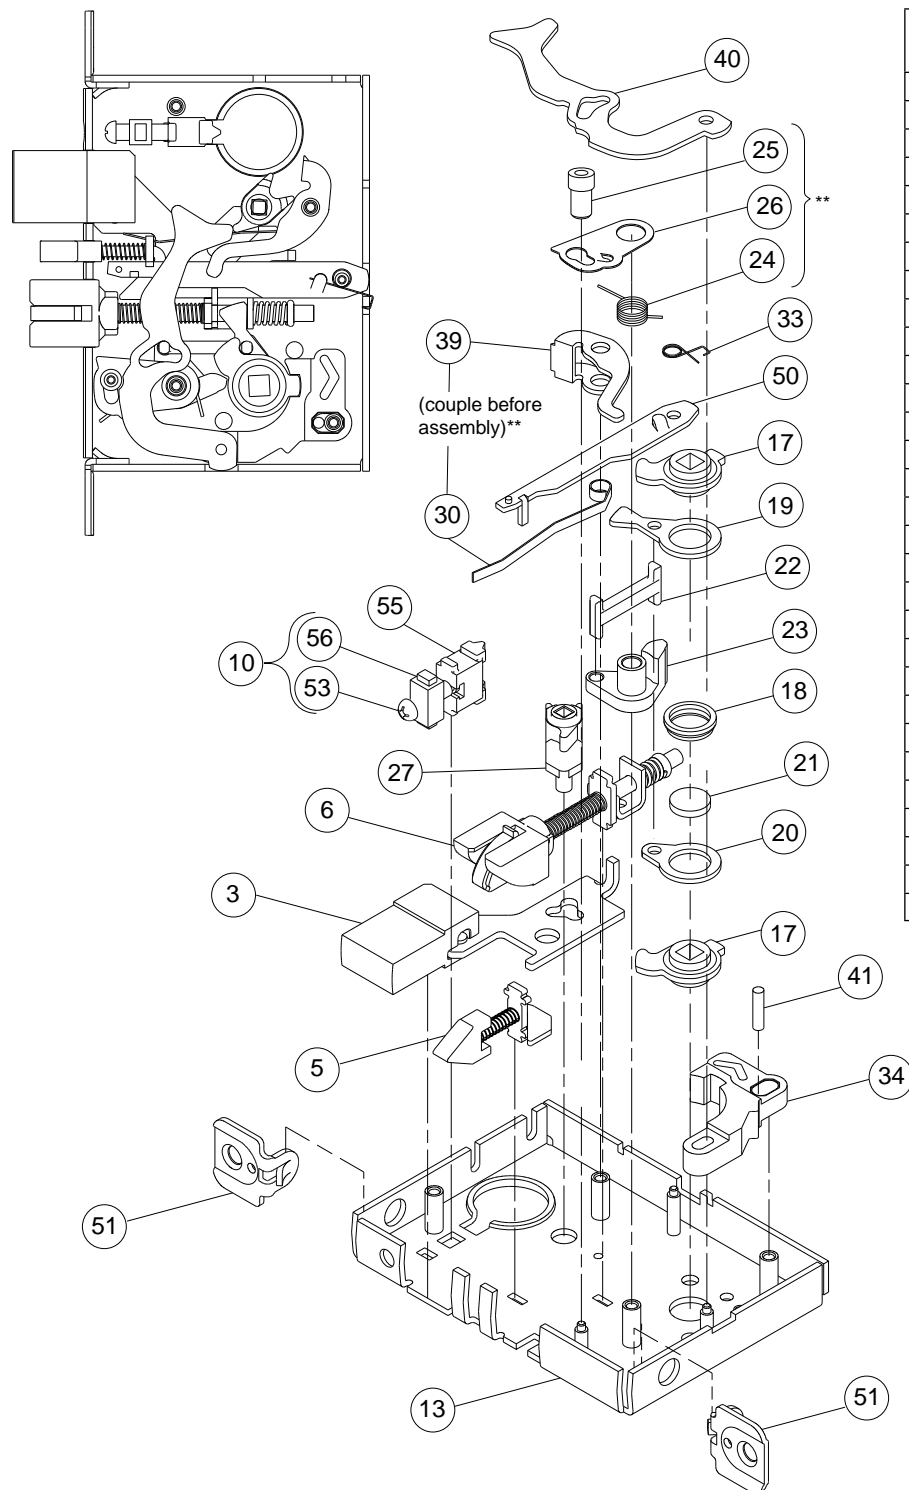


Number	Description	Part Number
3	Deadbolt	L283-003
5	Auxiliary Latchbolt	L283-006
6	Latchbolt	L283-008
10	Cylinder Plate & Screw	L283-055
13	L9000 Lock Case	L283-112
17	Retractor Hub	L583-019
18	Hub Spacer	L583-020
19	Retractor Lever	L583-021
20	Retractor Rocker	L583-022
21	Blocking Plate	L583-023
22	Retractor Link	L583-024
23	Retractor Crank	L583-025
24	Hub Spring	L583-026
25	Fire Door Fuse	L583-027
26	Fire Door Catch	L583-028
27	Turn Hub	L583-029
30	Turn Hub Spring	L583-035
33	Stop Spring	L583-044
34	Locking Catch	L583-045
39	Transfer Lever	L583-051
40	Simultaneous Retractor	L583-053
41	Catch Pin	L583-056
50	Auxiliary Stop	L583-196
51	1 1/4" Faceplate Tab	L583-426
52	Case Cover Screws	L583-454
53	Cylinder Retainer Screw	L583-481
54	Lock Handing Screw	L583-485
55	Cylinder Retainer	L583-490
56	Screw Plate	L583-492
58	Lock Case Cover	L583-496

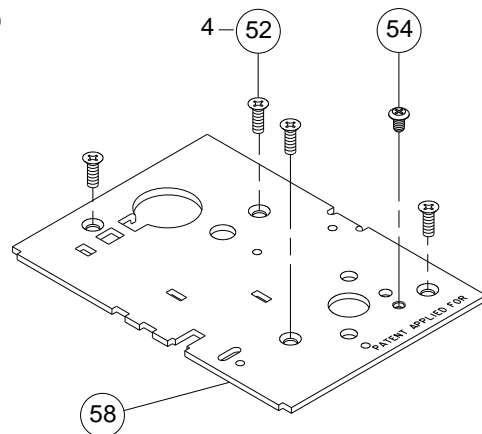


** See "Passage latch trim" on page 23.

LV9480, LV9485, LV9486, LV9486 x L583-375

Assembled Lock Case L283-178

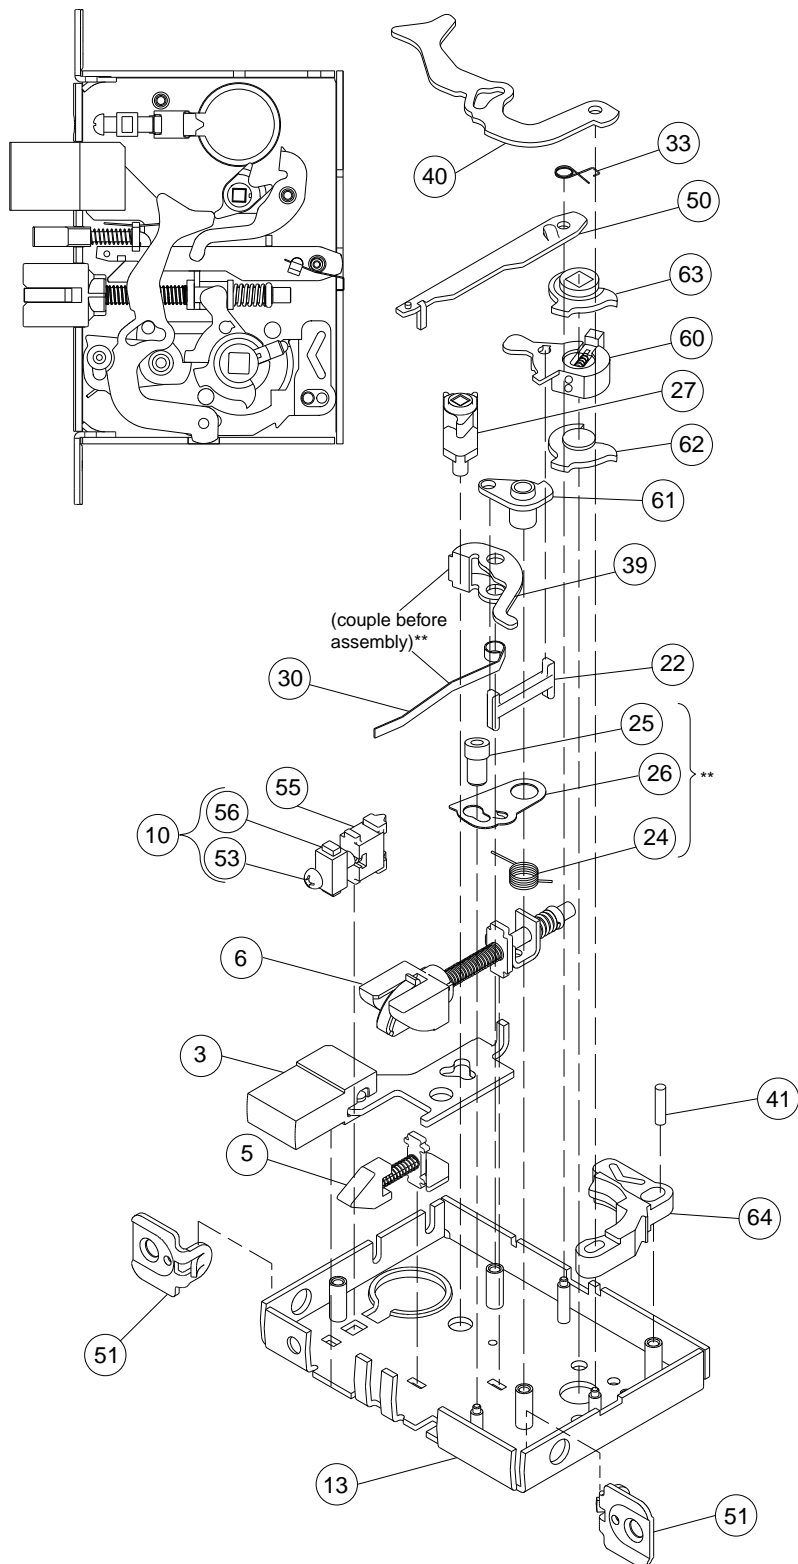


Number	Description	Part Number
3	Deadbolt	L283-003
5	Auxiliary Latchbolt	L283-006
6	Latchbolt	L283-008
10	Cylinder Plate & Screw	L283-055
13	L9000 Lock Case	L283-112
22	Retractor Link	L583-024
24	Hub Spring	L583-026
25	Fire Door Fuse	L583-027
26	Fire Door Catch	L583-028
27	Turn Hub	L583-029
30	Turn Hub Spring	L583-035
33	Stop Spring	L583-044
39	Transfer Lever	L583-051
40	Simultaneous Retractor	L583-053
41	Catch Pin	L583-056
50	Auxiliary Stop	L583-196
51	1 1/4 " Faceplate Tab	L583-426
52	Case Cover Screws	L583-454
53	Cylinder Retainer Screw	L583-481
54	Lock Handing Screw	L583-485
55	Cylinder Retainer	L583-490
56	Screw Plate	L583-492
58	Lock Case Cover	L583-496
60	Retractor Lever Assy	L283-147
61	Crank Retractor	L583-383
62	Bottom Hub	L583-386
63	Top Hub	L583-387
64	Retractor Catch	L583-345

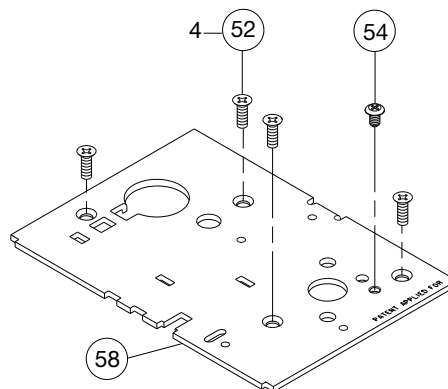


** See "Passage latch trim" on page 23.

L9482 x XL11-543

Assembled Lock Case L283-146 x XL11-543

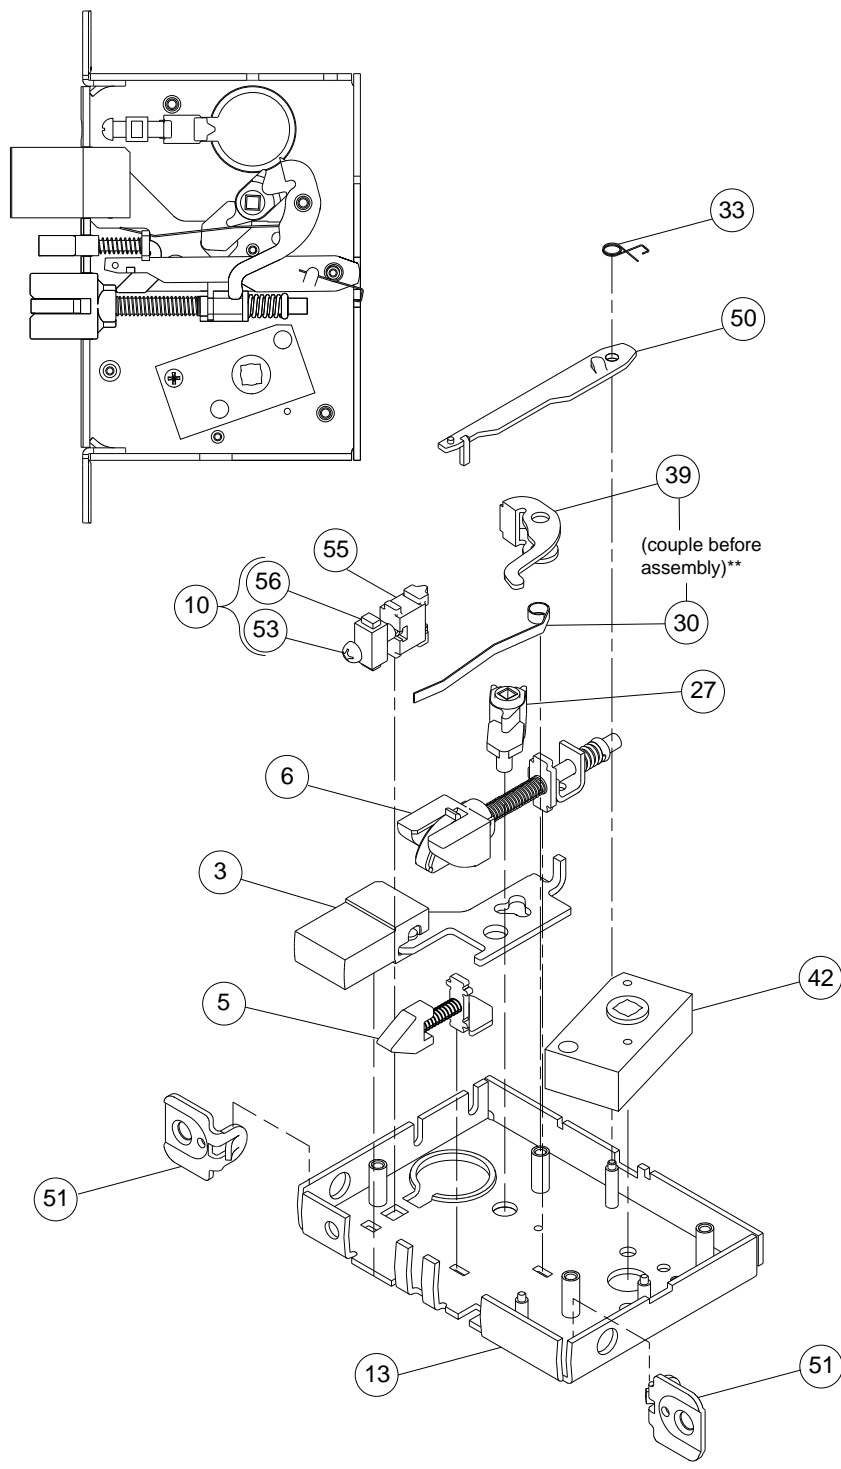


Number	Description	Part Number
3	Deadbolt	L283-003
5	Auxiliary Latchbolt	L283-006
6	Latchbolt	L283-008
10	Cylinder Plate & Screw	L283-055
13	L9000 Lock Case	L283-112
27	Turn Hub	L583-029
30	Turn Hub Spring	L583-035
33	Stop Spring	L583-044
39	Transfer Lever	L583-051
42	Spindle Anchor	L583-057
50	Auxiliary Stop	L583-196
51	1 1/4" Faceplate Tab	L583-426
52	Case Cover Screws	L583-454
53	Cylinder Retainer Screw	L583-481
55	Cylinder Retainer	L583-490
56	Screw Plate	L583-492
58	Lock Case Cover	L583-496

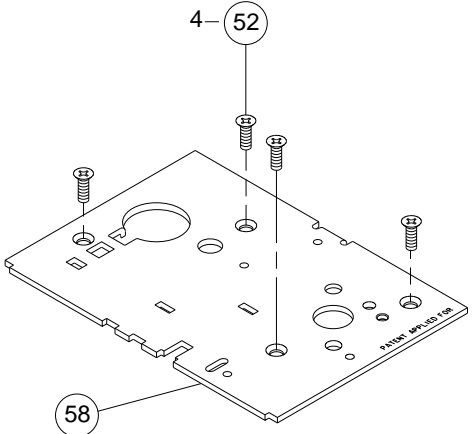


** See "Passage latch trim" on page 23.

LV9482 x XL11-543

Assembled Lock Case L283-183

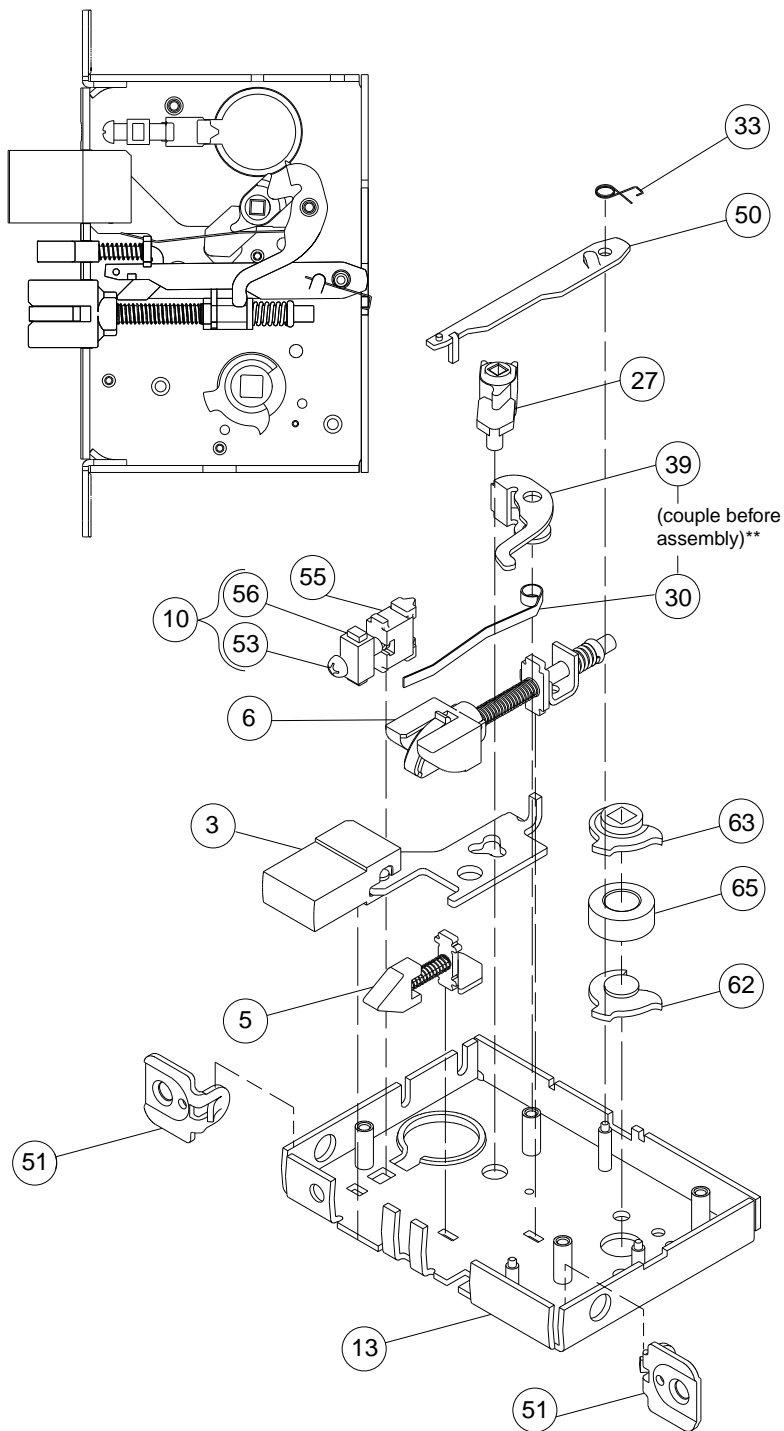


Number	Description	Part Number
3	Deadbolt	L283-003
5	Auxiliary Latchbolt	L283-006
6	Latchbolt	L283-008
10	Cylinder Plate & Screw	L283-055
13	L9000 Lock Case	L283-112
27	Turn Hub	L583-029
30	Turn Hub Spring	L583-035
33	Stop Spring	L583-044
39	Transfer Lever	L583-051
50	Auxiliary Stop	L583-196
51	1 1/4" Faceplate Tab	L583-426
52	Case Cover Screws	L583-454
53	Cylinder Retainer Screw	L583-481
55	Cylinder Retainer	L583-490
56	Screw Plate	L583-492
58	Lock Case Cover	L583-496
62	Bottom Hub	L583-386
63	Top Hub	L583-387
65	Spacer	L583-346

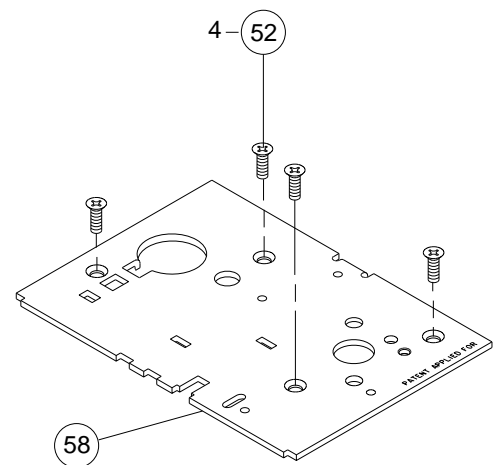


** See "Passage latch trim" on page 23.

L9485 x XL11-557

Assembled Lock Case XL11-557

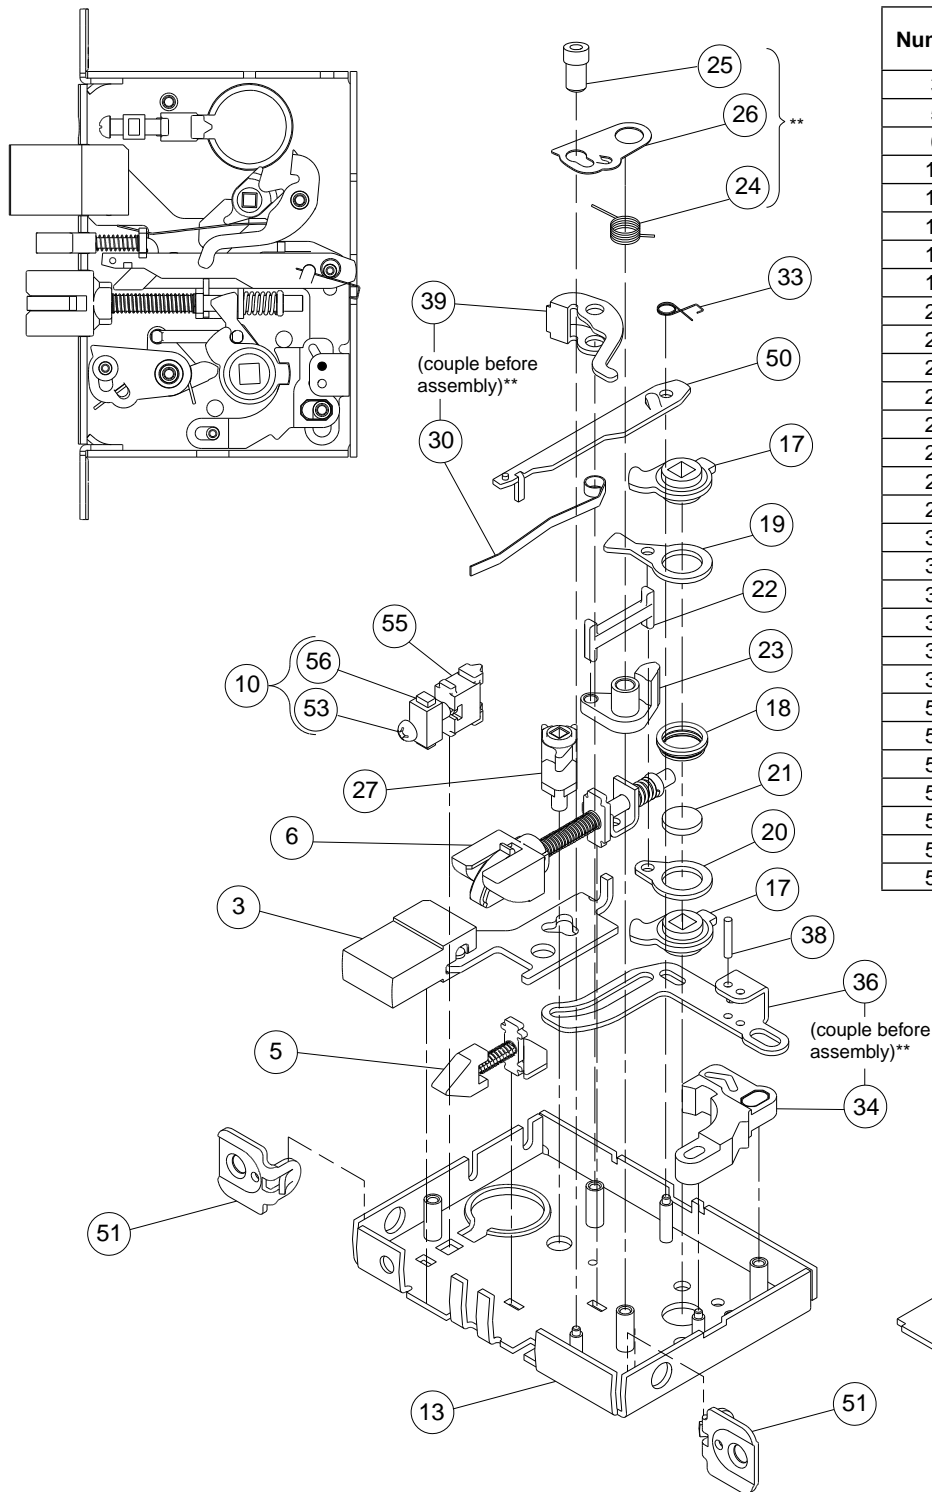

Number	Description	Part Number
3	Deadbolt	L283-003
5	Auxiliary Latchbolt	L283-006
6	Latchbolt	L283-008
10	Cylinder Plate & Screw	L283-055
13	L9000 Lock Case	L283-112
17	Retractor Hub	L583-019
18	Hub Spacer	L583-020
19	Retractor Lever	L583-021
20	Retractor Rocker	L583-022
21	Blocking Plate	L583-023
22	Retractor Link	L583-024
23	Retractor Crank	L583-025
24	Hub Spring	L583-026
25	Fire Door Fuse	L583-027
26	Fire Door Catch	L583-028
27	Turn Hub	L583-029
30	Turn Hub Spring	L583-035
33	Stop Spring	L583-044
34	Locking Catch	L583-045
36	Locking Link	L583-048
38	Link Pin	L583-050
39	Transfer Lever	L583-051
51	1 1/4" Faceplate Tab	L583-426
52	Case Cover Screws	L583-454
53	Cylinder Retainer Screw	L583-481
54	Lock Handing Screw	L583-485
55	Cylinder Retainer	L583-490
56	Screw Plate	L583-492
58	Lock Case Cover	L583-496

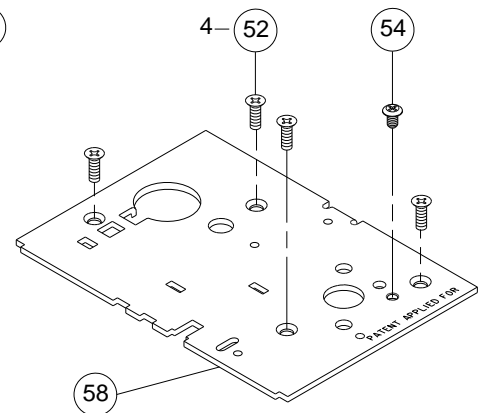

** See "Passage latch trim" on page 23.


Lock case assembly compatibility

Use this table to determine compatibility between parts for lock manufactured in 1994.


	L283-005 Cylinder Anchor Assembly	L583-046 Lock Handing Screw	L583-046 Faceplate Tab Screw	L583-006, L583-007 Faceplate Tab	L583-452 Lock Case Cover	L283-080 Lock Case	L583-480/481/482 Cylinder Retainer Assembly	L583-485 Lock Handing Screw	L583-426, L583-427 Faceplate Tab	L583-484 Lock Case Cover	L283-130 Lock Case (April 1, 1994)	L283-130 Lock Case (July 15, 1994)
L283-005 Cylinder Anchor Assembly					.	.						
L583-046 Lock Handing Screw					.	.						
L583-046 Faceplate Tab Screw			.			.					.	
L583-006 L583-007 Faceplate Tab			.			.					.	
L583-452 Lock Case Cover	.	.				.						
L283-080 Lock Case							
L583-480/481/482 Cylinder Retainer Assembly										.	.	.
L583-485 Lock Handing Screw										.	.	.
L583-426 L583-427 Faceplate Tab												.
L583-484 Lock Case Cover						
L283-130 Lock Case (4-1-94)				
L283-130 Lock Case (7-15-94)								

Assembly of lock case parts

Turn hub spring and transfer lever

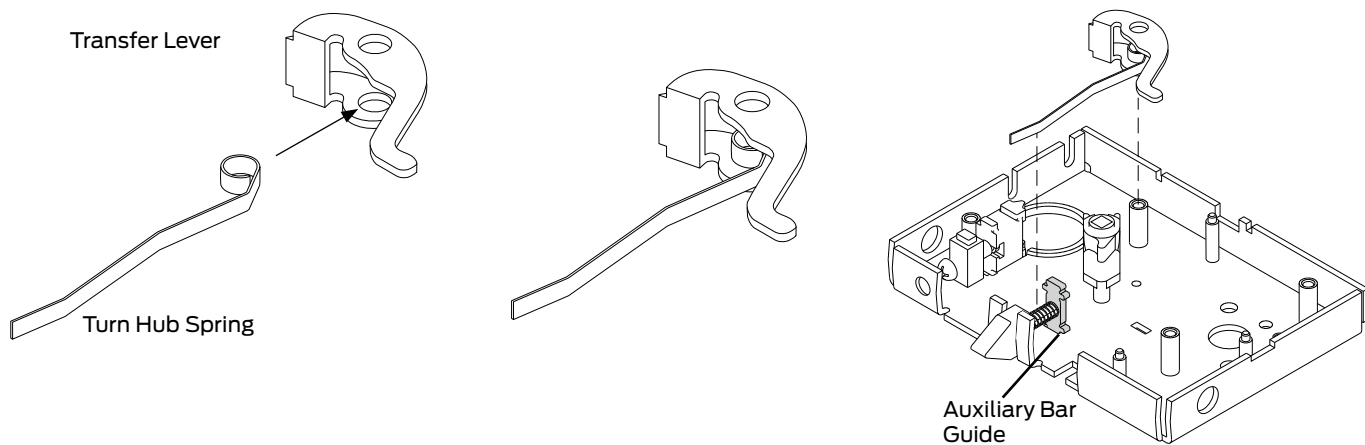


Locking catch/retractor catch and locking link

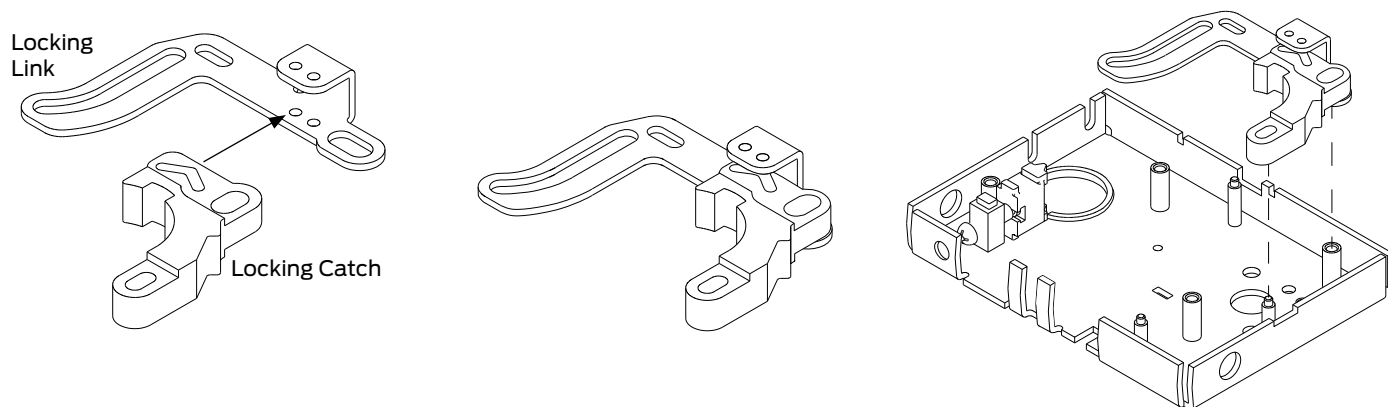


Assembly of lock case parts

L functions only: fire door fuse, fire door catch and hub spring

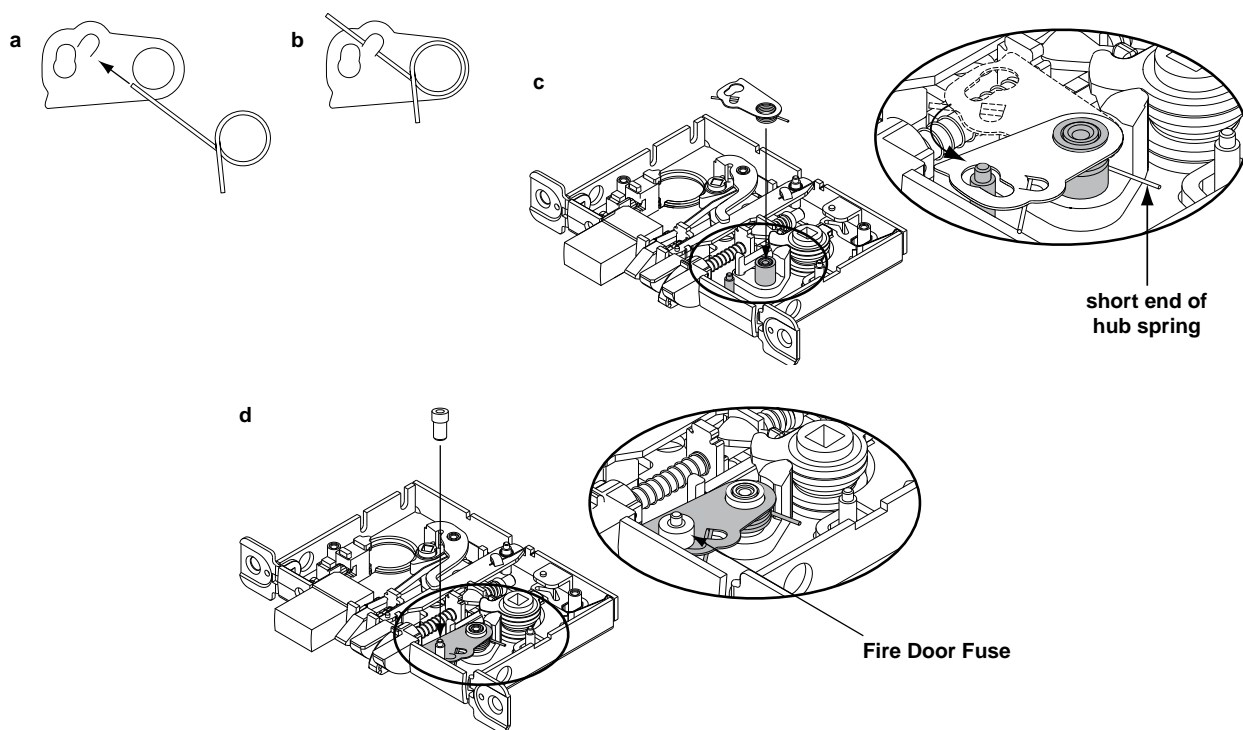


LV functions only: fire door fuse, fire door catch and hub spring

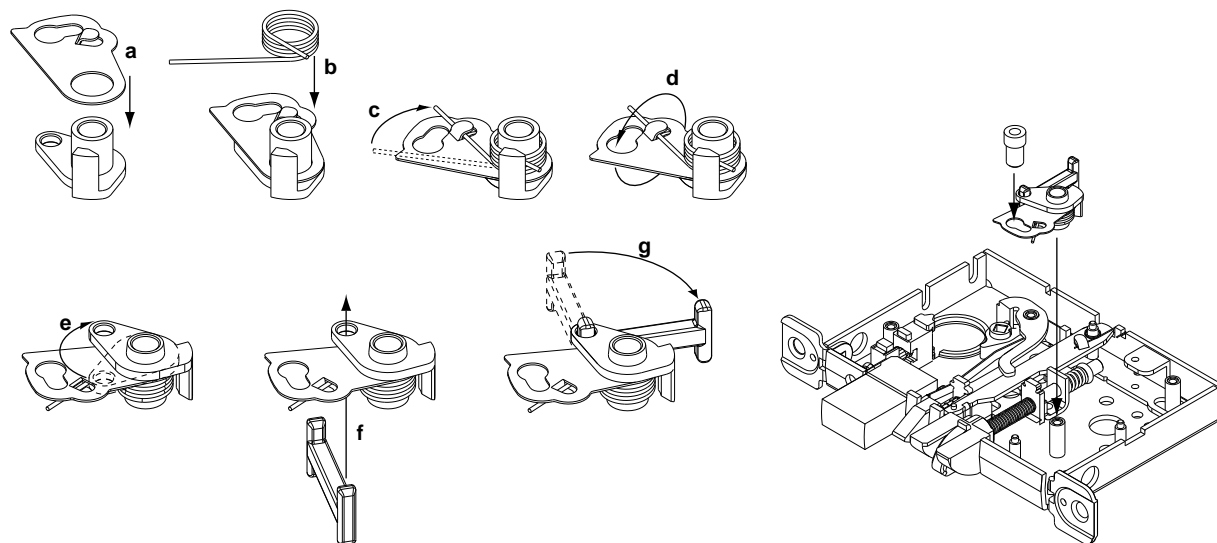

Trim options

Cast or forged levers, standard lever designs


Standard levers are available in forged brass or bronze, and cast stainless steel. Levers are shown with rose trim A or B. Also available with L or N escutcheon. See escutcheon options on pages 107-108.

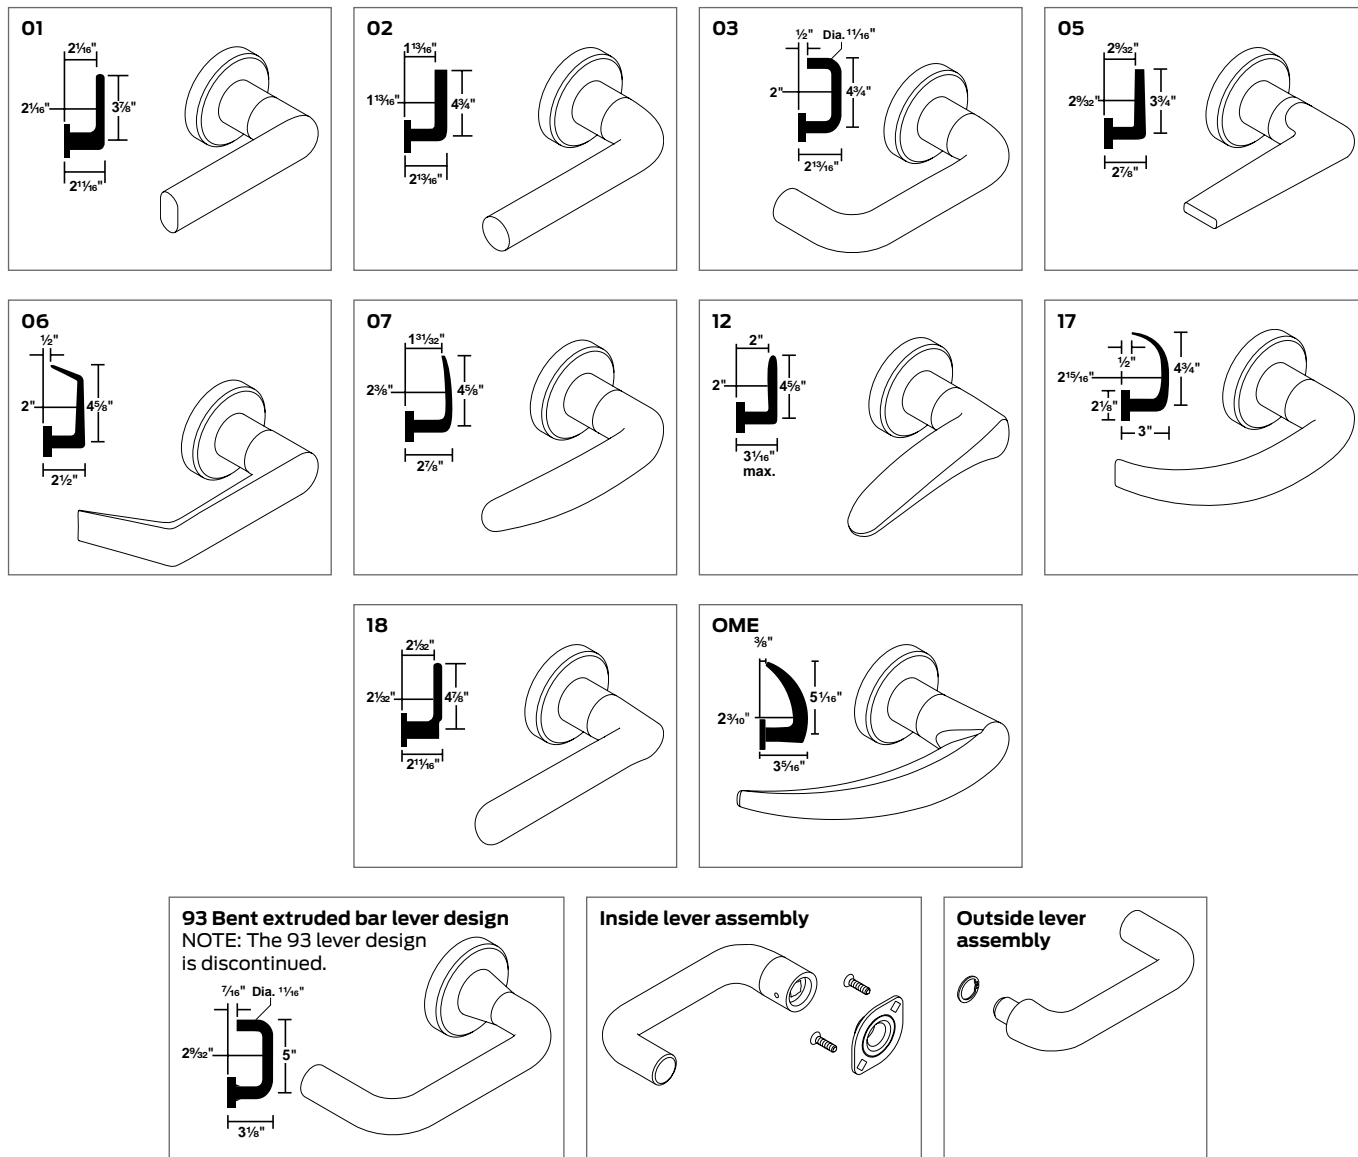



NOTE: See Schlage Commercial Price Book for available finishes.

Decorative trim

Decorative levers

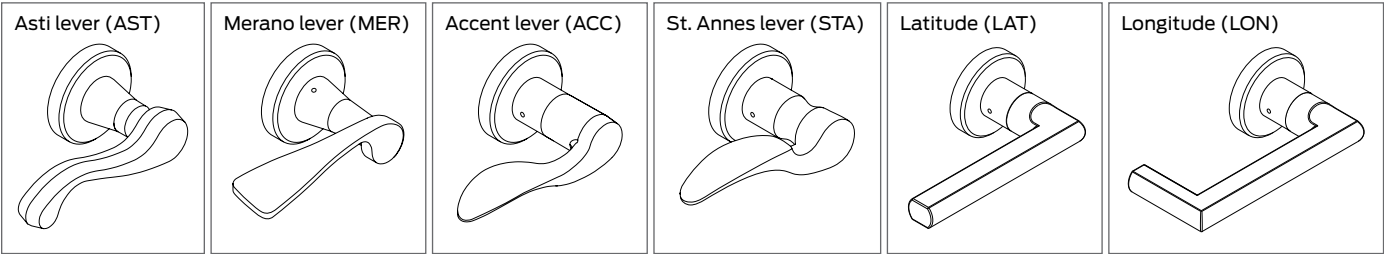


Decorative roses

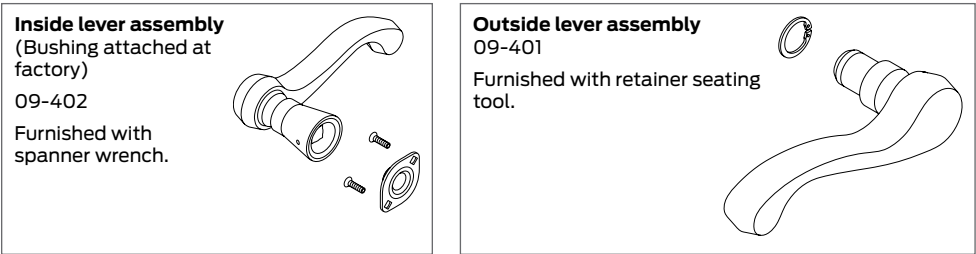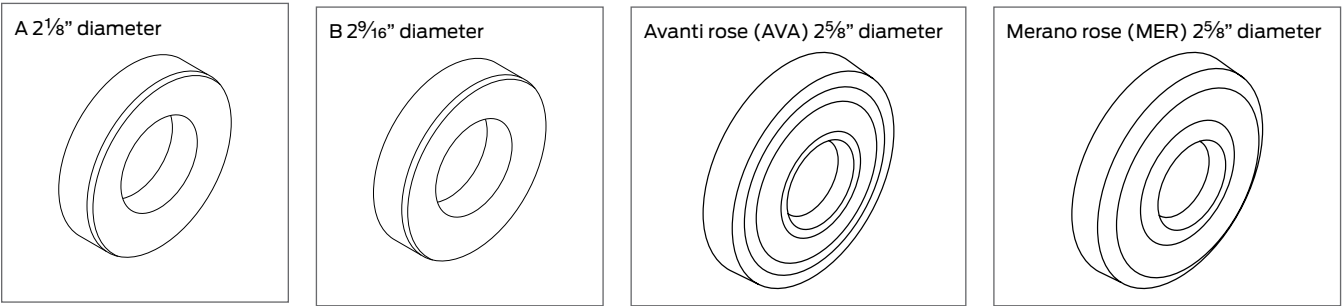

M collection levers


Standard levers are available in solid brass and solid stainless steel. Levers are shown with rose trim A or B. Also available with L or N escutcheon. See escutcheon options on pages 107-108.

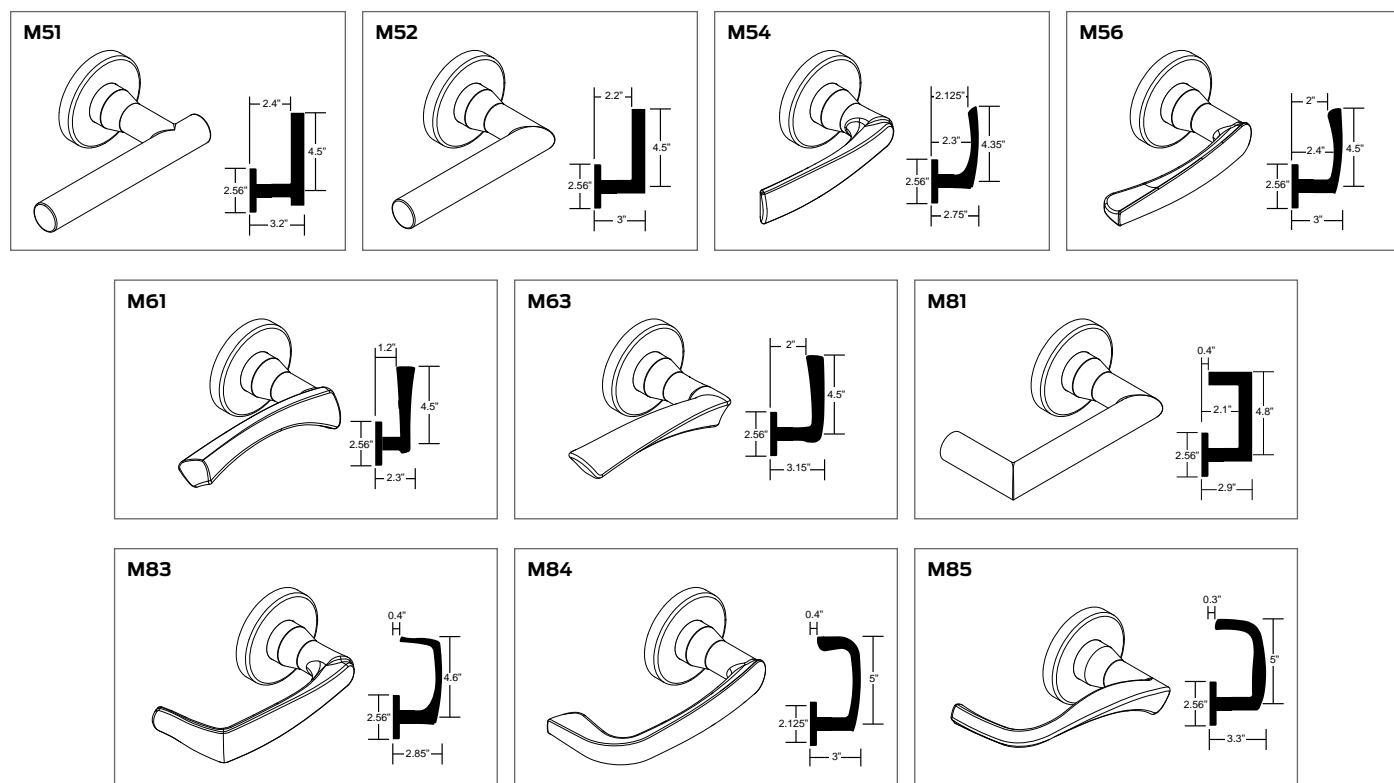

NOTE: See Schlage Commercial Price Book for available finishes.

Danmark stainless steel levers


630 Satin stainless steel finish

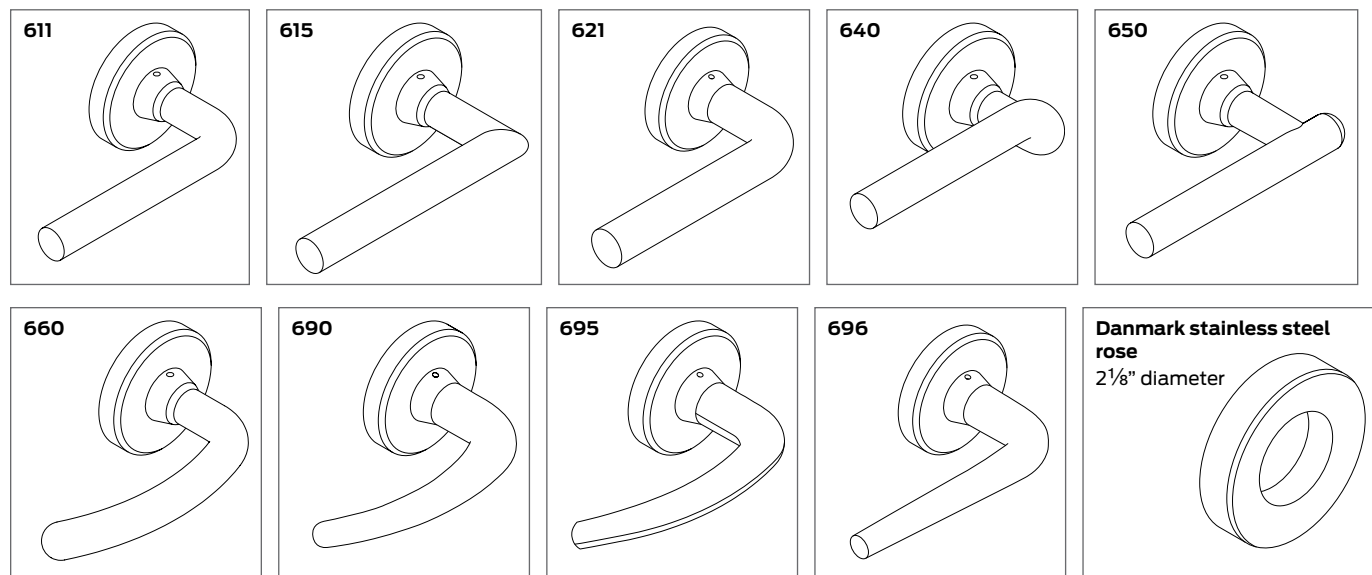

Wrought knob designs


Knobs shown with rose trim A or B. Also available with L or N escutcheons.

See escutcheon options on pages 107-108.

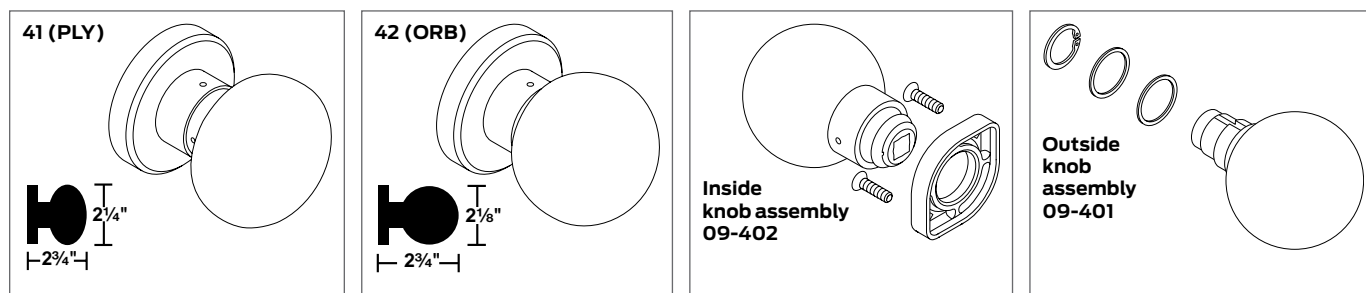


NOTE: See Schlage Commercial Price Book for available finishes.

Rose trim A or B

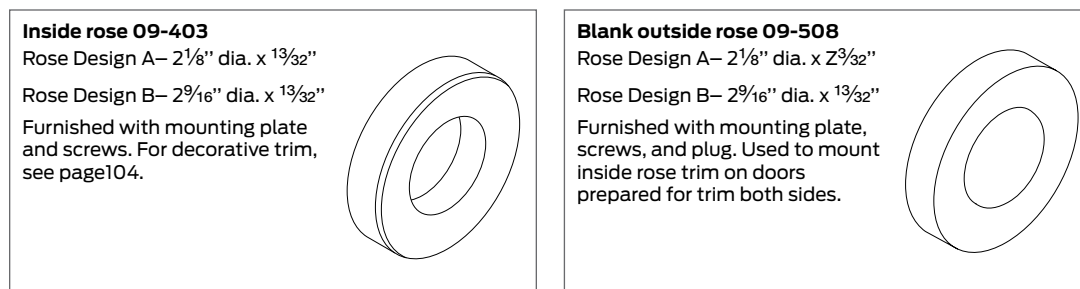

Outside rose dimensions


09-404 (bushing attached at factory) or 09-506 with knob or lever.

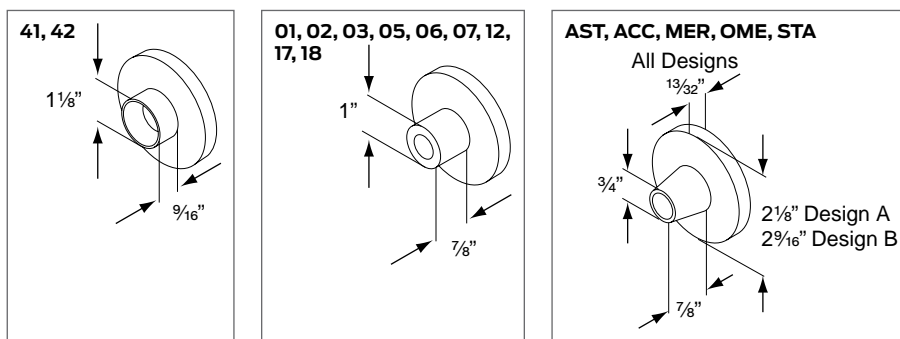









L escutcheon trim

Outside escutcheon dimensions




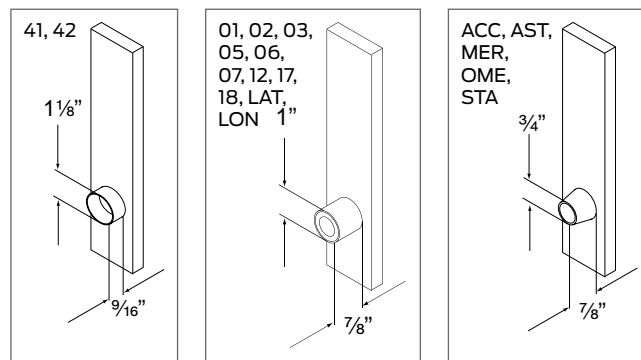


Knob/Lever Design: 7¹⁵/₁₆" x 1³/₄" x 7¹/₁₆" Cold forged brass, bronze, or stainless steel base material. Bushing is attached at factory.

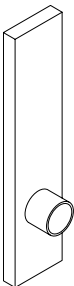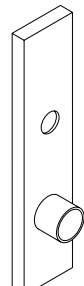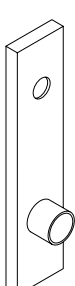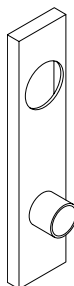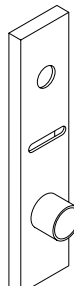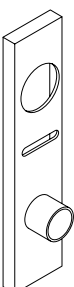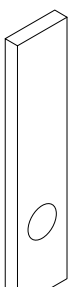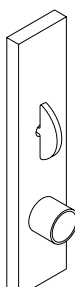

Outside escutcheons

09-636 Outside blank x knob/lever Specify 09-636 or 09-550 with knob/lever. 	09-637 Emergency turn x knob/lever Specify 09-637 or 09-551 with knob/lever. 	09-638 Concealed cylinder x knob/lever Specify 09-638 or 09-552 with knob/lever. 	09-639 Full face cylinder x knob/lever Specify 09-639 or 09-553 with knob/lever. 	09-640 Concealed cylinder with indicator x knob/lever Specify 09-636 or 09-550 with knob/lever. Specify L583-375 for "occupied". 
09-641 Full face cylinder with indicator x knob/lever Specify 09-636 or 09-550 with knob/lever. Specify L583-375 for "occupied". 	XL11-636 Blank outside Specify XL11-636 OOL. 	09-639 x XL11-446 outside with thumbturn x knob/lever For L9040 x XL11-446 function. Not sold separately. 	NOTES: When ordering trim parts, specify the complete design and finish (e.g. 09-402 01A 605). See Schlage Commercial Price Book for available finishes.	

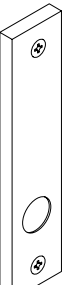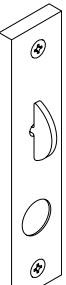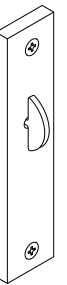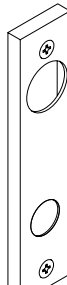Inside Escutcheons


09-632 Blank x knob/Lever 	09-633 Thumbturn x Knob/Lever Specify door thickness: 1 ³ / ₈ " or 1 ¹ / ₄ " Available with EZ Turn (ADA). See "Additional trim options" on page 109. 	09-634 Thumbturn x Blank Specify door thickness: 1 ³ / ₈ " or 1 ¹ / ₄ " Available with EZ Turn (ADA). See "Additional trim options" on page 109. 	09-635 Full Face Cylinder x Knob/Lever 	L583-187 Concealed Cylinder x Knob/Lever 	XL11-634 Blank Inside 
---	--	---	---	--	---

NOTES: When ordering trim parts, specify the complete design and finish (e.g. 09-632 01L 605). See Schlage Commercial Price Book for available finishes.


N escutcheon trim

Outside escutcheon dimensions

Knob/lever design: $7\frac{7}{8}" \times 2\frac{1}{2}" \times \frac{7}{16}"$ Heavy wrought reinforced brass, bronze, or stainless steel base material. Bushing is attached at factory.

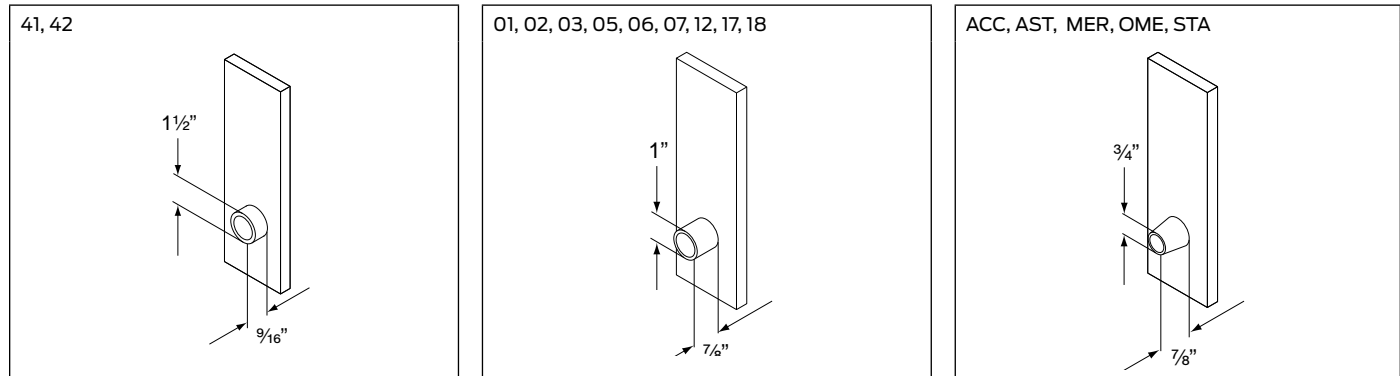


Outside escutcheons

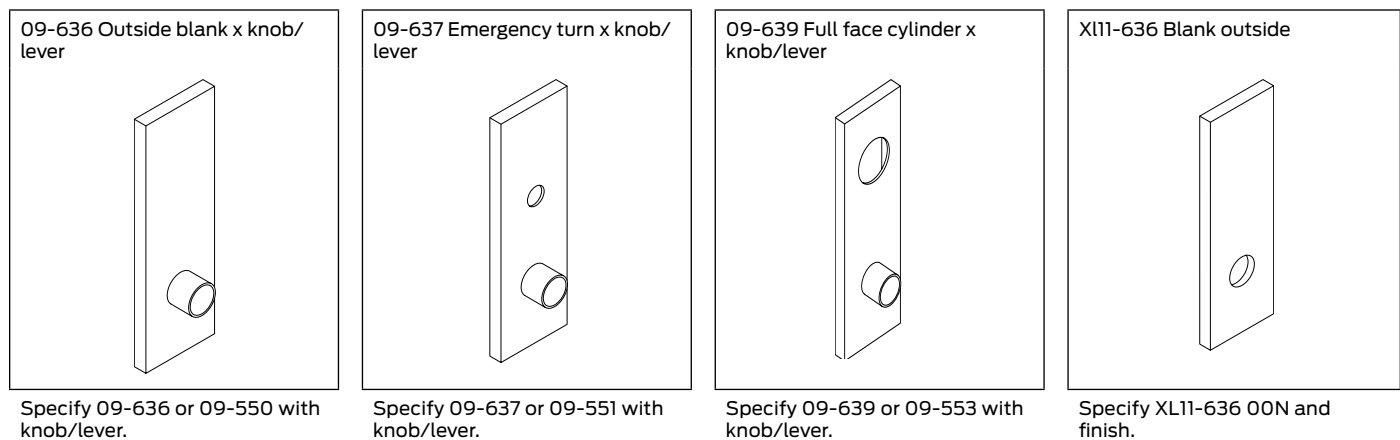

Inside escutcheons

(Includes two (2) screws and mounting plate)

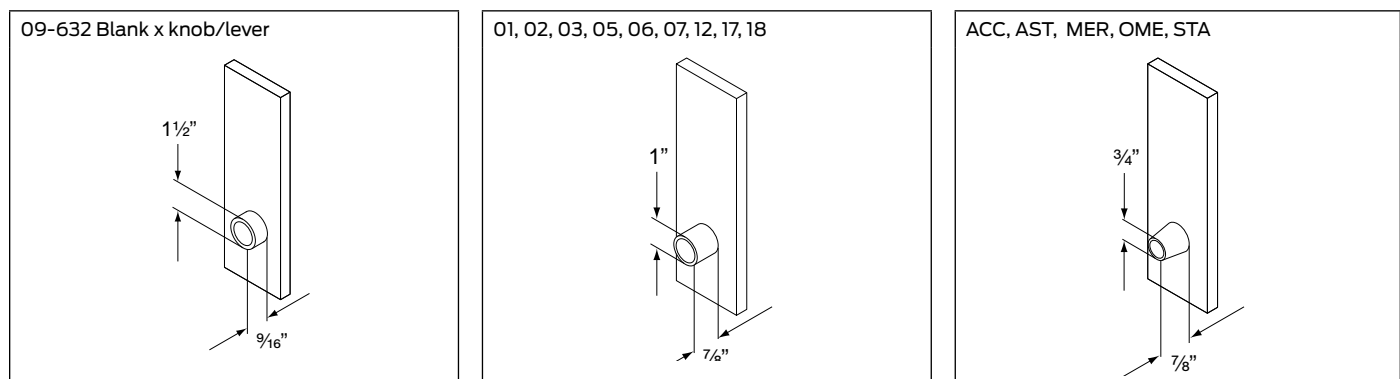


NOTES: When ordering trim parts, specify the complete design and finish (e.g. 09-402 03N 605). See Schlage Commercial Price Book for available finishes.

Additional trim options

Coin turn


L283-124

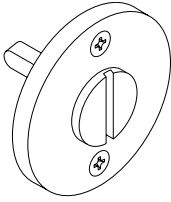

Coin turn for rose trim. Specify finish and door thickness. Available with Torx® screws, specify L283-065.

Coin turn and plug


09-900 x XL12-196

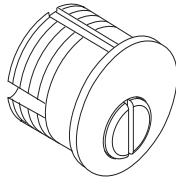

Specify dimension, finish and door hand. If handing is not required, specify NH (non-handed).

Occupancy indicators

 09-611




Do not disturb

09-611xL583-375



Occupied

 
09-611xXL11-986



Locked

Thumbturn


09-509

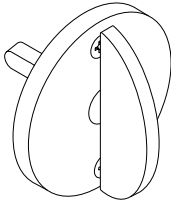

Thumbturn for deadbolt functions and privacy locks with rose trim. Specify finish and door thickness.

ADA cylinder turn


XB11-720

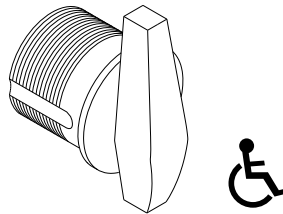

Available with L463 and L9463 locks. Specify per XB11-720, dimension, finish and door hand. If handing is not required, specify NH (non-handed). When ordered alone, specify either 09-900, 09-904, 09-905 or 09-907 per XB11-720.

Cylinder classroom turn


09-900

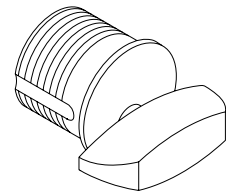

09-900 through 09-907 Cylinder Classroom turns are furnished with L463 and L9463 locks. Specify dimension, finish and door hand. If handing is not required, specify NH (non-handed). For handing instructions, see page 123.

"EZ" thumbturn (ADA) for rose trim


09-509 per L583-363

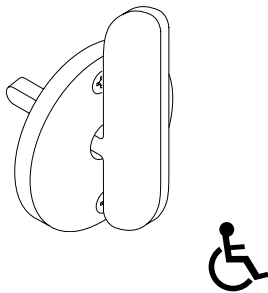

Not available for L463 or L9463 functions.

"EZ" thumbturn (ADA) x knob/lever with L or N escutcheon


09-633 per L583-363

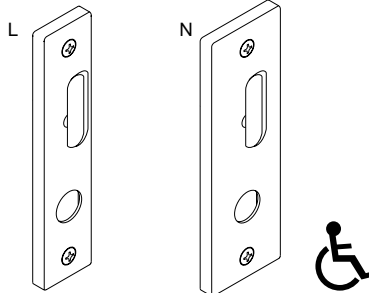

Not available for L9463 functions.

"EZ" thumbturn (ADA) x blank with L escutcheon

09-634 per L583-363

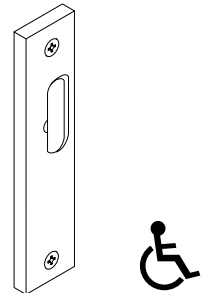


Not available for L9463 functions.

*NOTES: "EZ" thumbturn is not available on doors less than 1 3/8" thick. When ordering trim parts, specify the complete design and finish (e.g. 09-633-03L 605). See Schlage Commercial Price Book for available finishes.


Additional trim options

Emergency turn

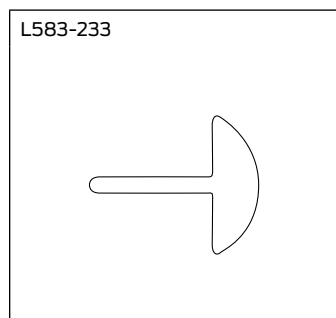


Furnished with L9040 and L9440.

Emergency button

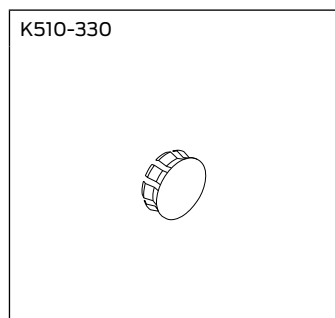


Furnished with L9040 and L9440. Specify finish.

Modified inside and outside O3 lever for Folger Adam Co.® Lever Trak™

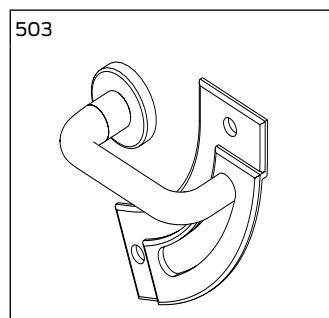

09-401, 09-402, or 09-506 per 503. Available for rose trim only. Lever Trak is not included.


Occupancy indicator breakaway driver bar

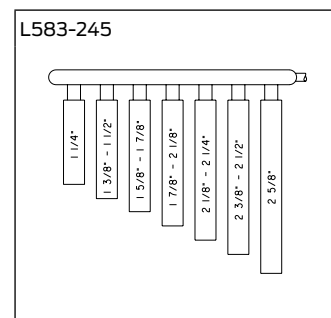


Breakaway driver bars for all door ranges. L496, L/LV9486 and L/LV9496 functions.

Tactile warning (knurling)


Applied to outside knob/lever only unless otherwise specified.

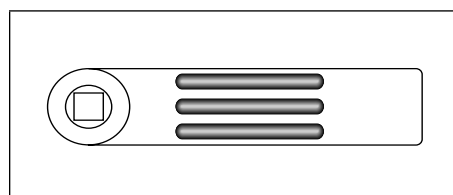


Milling pattern for backside of 01, 06, 07, 17, and 18 levers.

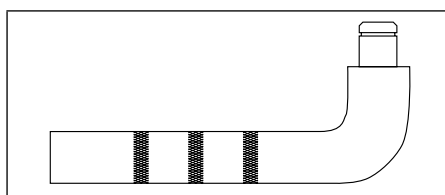


Knurling pattern for 02 lever.

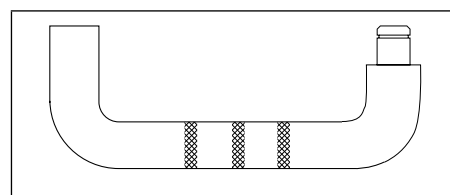


Knurling pattern for 03 lever.

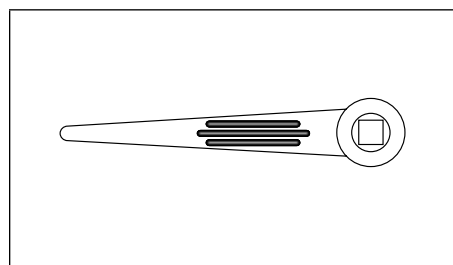

Milling pattern for backside of 05 lever.

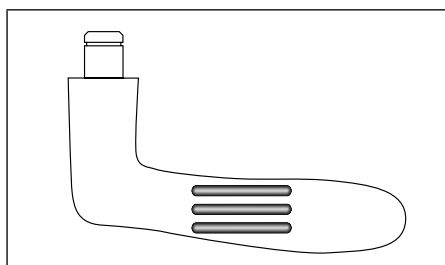

Milling pattern for underside of 12 lever. Specify door hand.

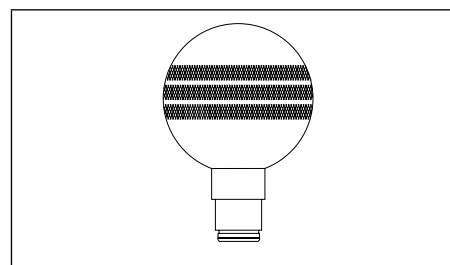

Knurling pattern for 42 knob. Tactile warning is available for 41 and 42 knobs.

NOTE: To specify knurling, place the number 8 in front of the lever design code (e.g. 801 for lever design 01 with knurling).

Additional trim options

Trim assembly parts

Escutcheon thru-bolt/screws

Two required per lock

Part number	Specify finish	Description	Door thickness
L583-119	•	L escutcheon thru-bolts/screws	1⅝"
L583-120	•		1¾"
L583-121	•		2"
L583-122	•		2¼"
L583-123	•		2½"
K510-389	•	N escutcheon thru-bolts/screws	1¾"
K510-390	•		2–2¼"
L583-287	•	L escutcheon thru-bolts/screws, l0170 single	–
L583-133	•	N escutcheon thru-bolts/screws, l0170 single	–

Standard screw packs

Part number	Specify finish	Description	Contents
C203-736	455	Lock case mounting screws	(2) C603-256, #12-24 WMS PFH
C203-736	•	Strike screws	(2) C603-256, #12-24 WMS PFH
K110-020	•	Armor mounting screws	(2) K510-210, #8-32 x ¼" PFHMS
K110-947	•	Rose trim thumbturn screws	(2) K510-445, #4 x ½" POH AB
L283-100		Trim mounting screws and posts, 1¾" doors	(2) L583-066, #8-32 x ⅝" PFH (2) L583-212, 1¾" Ferrule
L283-101	•	L escutcheon thru-bolts, 1¾" doors	(2) L583-120

Tamper resistant Torx® screw packs

Part number	Specify finish	Description	Contents
L283-121	•	Rose trim without thumbturn	(2) Armor screws, L583-370, #8-32 x ¼" (T-15) (2) Strike screws, L583-371, #12-24 x ½" (T-20)
L283-123	•	L escutcheon trim for 1¾" doors	(2) Armor screws, L583-370, #8-32 x ¼" (T-15) (2) Strike screws, L583-371, #12-24 x ½" (T-20) (2) Esc. mtg. screws, L583-373, ¼-28 x 2⅞" (T-30)
L283-122	•	Rose trim with thumbturn	(2) Armor screws, L583-370, #8-32 x ¼" (T-15) (2) Strike screws, L583-371, #12-24 x ½" (T-20) (2) Thumbturn screws, L583-372, #4 x 2½" (T-8)
XL11-848	•	N escutcheon trim for 1¾" doors	(2) Armor screws, L583-370, #8-32 x ¼" (T-15) (2) Strike screws, L583-371, #12-24 x ½" (T-20) (2) Esc. mtg. screws, XL11-841, #8-32 x 1½" (T-20)

NOTE: Torx® screw packs are furnished with appropriate T-xx installation tools.

Additional trim options

Mounting posts

Two required per lock

L Functions	
Part number	Door thickness
L583-211	1½"
L583-212	1¾"
L583-213	2"
L583-215	2½"
L583-216	2¾"
L583-217	3"
L583-218	3¼"
L583-219	3½"

LV Functions	
Part number	Door thickness
N/A	1½"
L583-497	1¾"
L583-498	2"
L583-500	2½"
L583-501	2¾"
L583-502	3"
L583-503	3¼"
L583-504	3½"

Spindles and springs

Two required per lock

Part number	Description
L283-060	1⅝"–1⅞" doors
L283-061	2"–3½" doors
L283-064*	L0172 double dummy
	L9082 EL/EU
L283-065*	L0170 single dummy


* One required per lock

Mounting plate for trim one side only


L283-150 Mounting plate and posts for rose trim on one side of door. For lever use with spring cage L283-031, for knob use with mounting plate L583-321.

DOOR DETAIL

For location of cylinder and/or thumbturn holes, as well as all other dimensions, see appropriate lock function template.
Measure backset from \mathcal{C} of door edge.

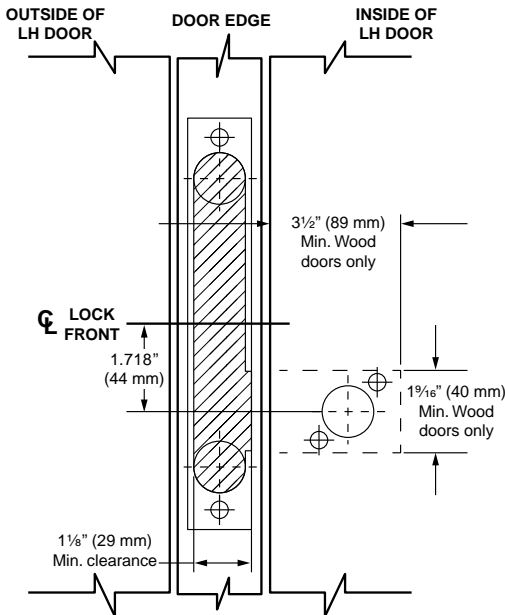


L-Series Installation Instructions
Mounting plate for trim one side

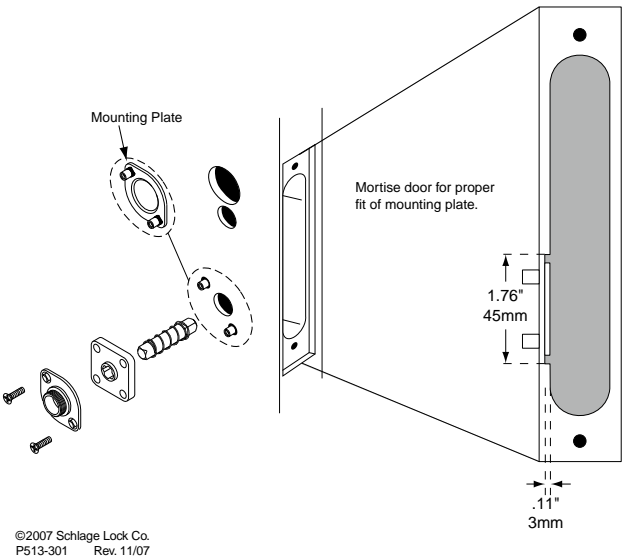


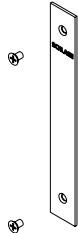
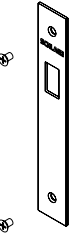
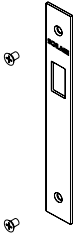
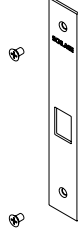
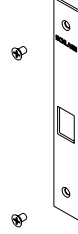
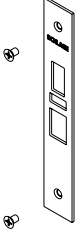
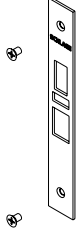
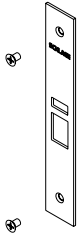
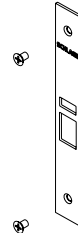
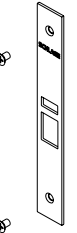
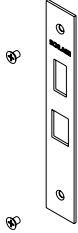

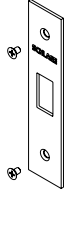
ANSI A115.1 1990 Hollow steel door installations

L283-029 For 1¼" thick hollow steel doors prepared per ANSI A115.1 1990.
Install two spacers between the spring cage (or knob mounting plate) and lock as chassis shown. Spacers are required for both the inside and outside escutcheons.

NOTE: L escutcheon designs are not applicable for ANSI A115.1 door preparations.



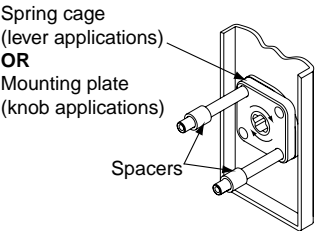











Armor fronts

1¼" Square corner	1⅛" Square corner*	Description and functions	1¼" Square corner	1⅛" Square corner*	Description and functions
Non UL 09-661 	09-667 	Blank L9110 L9175 L9176	Non UL 09-168 UL 09-665 	09-179 09-671 	Deadbolt L9460 L9462 L9463 L9464
Non UL 09-165 UL 09-662 	09-216 09-668 	Latch UL L9010 L/LV9040 L/LV9044	Non UL 09-169 UL 09-666 	09-180 09-672 	Latch x aux latch x deadbolt UL L/LV9453 L/LV9482 L/LV9458 L/LV9485 L/LV9480 L/LV9486
Non UL 09-166 UL 09-663 	09-177 09-669 	Latch x auxiliary latch UL L/LV9050 L/LV9071 L/LV9056 L9080 L/LV9060 L/LV9082 L/LV9070	Non UL 09-713 	— 	Latch x auxiliary latch (holdback) L/LV9076 L/LVV9077
Non UL 09-167 UL 09-664 	09-178 09-670 	Latch x deadbolt UL L/LV9440 L9465 L/LV9444 L9466 L/LV9456 L9473 L/LV9457 L/LV9496	Non UL 09-215 UL 09-717 	— 	Deadbolt L460 L464 L462 L480 L463 L496

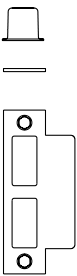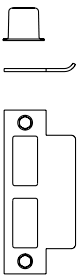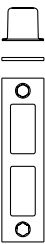* For use with 1⅝" thick doors. Use with 1⅛" faceplate tab, L583-427.

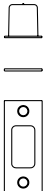Strikes

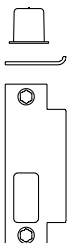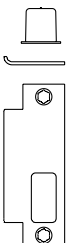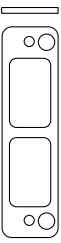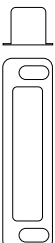Square corner 10-072 Standard $1\frac{3}{16}$ " Lip Size: $4\frac{7}{8}$ " x $1\frac{1}{4}$ " 	Square corner 10-072 $\frac{7}{8}$ ", 1", $1\frac{1}{2}$ ", $1\frac{3}{4}$ " or 2" Lip Size: $4\frac{7}{8}$ " x $1\frac{1}{4}$ " 	Square corner 10-073 No Lip Size: $4\frac{7}{8}$ " x $1\frac{1}{4}$ " 	Square corner 10-075 No Lip Size: $4\frac{7}{8}$ " x 1" 
Square corner 10-078 L400 Series No Lip Size: $4\frac{7}{8}$ " x $1\frac{1}{4}$ " 	Square corner 10-079 L400 Series No Lip Size: $3\frac{1}{2}$ " x $1\frac{1}{8}$ " 	Square corner 10-091 L and RR (Armor) $1\frac{3}{16}$ " Lip Size: 8" x $1\frac{1}{4}$ " 	Square corner 10-091 R and LR (Armor) $1\frac{3}{16}$ " Lip Size: 8" x $1\frac{1}{4}$ " 
Square corner XL11-820 R and LR $1\frac{3}{16}$ " Lip Size: $4\frac{7}{8}$ " x $1\frac{1}{4}$ " 	Square corner XL11-821 L and RR $1\frac{3}{16}$ " Lip Size: $4\frac{7}{8}$ " x $1\frac{1}{4}$ " 	Strike reinforcer 37-015 L9000 Series $\frac{1}{4}$ " Radius Round Corner Size: $4\frac{7}{8}$ " x $1\frac{1}{4}$ " 	Strike box K510-066 Size: $4\frac{13}{16}$ " x $1\frac{1}{4}$ " x $\frac{15}{16}$ " 

Strike dimensions and components

Part number	Lip	Lock series	Door range	Strike box	Screws (2 ea)
10-072*	1"	L9010 to L9496	—	K510-066	C603-256
	$1\frac{3}{16}$ "		$1\frac{3}{8}$ "– $1\frac{7}{8}$ "	K510-066	C603-256
	$1\frac{1}{2}$ "		$1\frac{7}{8}$ "– $2\frac{1}{8}$ "	K510-066	C603-256
	$1\frac{3}{4}$ "		$2\frac{1}{8}$ "– $2\frac{5}{8}$ "	K510-066	C603-256
	2"		$2\frac{5}{8}$ "– $3\frac{1}{8}$ "	K510-066	C603-256
	$\frac{7}{8}$ "		—	K510-066	C603-256
	—		—	K510-066	C603-256
10-073	—	L9000 Series	—	—	C603-256
10-075***	—	L400 Series	—	K510-066	C603-256
10-078	—		—	K510-053	C603-256
10-079	—		—		
10-091**	$1\frac{3}{16}$ "	L9175, L9176	$1\frac{3}{8}$ "– $1\frac{7}{8}$ "	—	K510-210
XL11-820**, XL11-821**	$1\frac{3}{16}$ "	L9000 Non-Deadbolt Functions	$1\frac{3}{8}$ "– $1\frac{7}{8}$ "	K510-066	C603-256
37-015	—	L9000	—	—	—

* Specify lip length.



** Specify lip length and hand of inactive door.

*** For $1\frac{3}{8}$ " thick doors use $1\frac{1}{16}$ " wide armor fronts. For $1\frac{3}{4}$ " thick and up doors, use $1\frac{1}{4}$ " wide armor fronts.

NOTE: Strike boxes and screws can be ordered as parts.

Cylinders

How to measure cylinder lengths

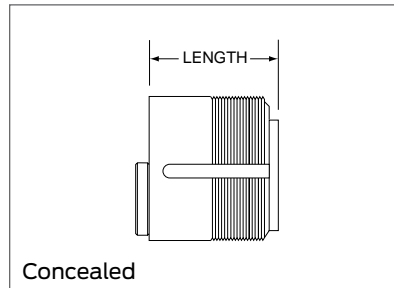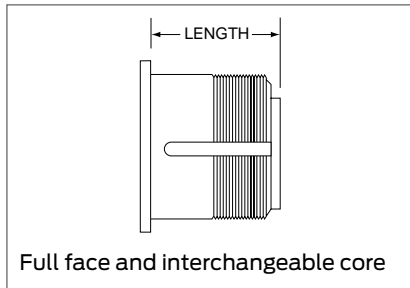

Cylinder length	Dimension
1⅞"	118
1¼"	114
1⅝"	138
1½"	112
1⅞"	158
1¼"	134


L-Series, LV-Series cylinder and length requirements

Function	Trim	Cylinder	Door Thickness			
			1⅞"	1¼"	2"	2¼"
			Dimension			
L9050, L9056, L9070, L9076, L9080, L9453, L9456, L9460 per XL11-635/886, L9464 per XL11-886, L9465, L9473, L9480	Rose	30-001	118	118	118	118
	Escutcheon	30-021	118	114	138	112
	Concealed	30-004	118	114	138	112
LM9080	Rose	30-000, 30-019				
	Escutcheon	30-028, 30-029				
L9485	Rose	30-002	—	118	118	118
	Escutcheon	30-022	—	114	138	112
	Concealed	30-005	—	114	138	112
L9486	Rose	30-002	114	138	112	158
	Escutcheon	30-022	118	114	138	112
	Concealed	30-005	118	114	138	112
L9496	Rose	30-001	114	138	112	158
	Escutcheon	30-021	118	114	138	112
	Concealed	30-004	118	114	138	112
L9060 Inside, L9071, L9077, L9082, L9082EL/EU, L9457, L9458, L9462 per XL11-886, L9464, L9466, L9482	Rose	30-001	118	118	118	118
	Escutcheon	30-001	114	—	—	—
		30-021	—	118	114	138
	Concealed	30-004	—	118	114	118
L9060 Outside	Rose	20-001	118	118	118	118
	Escutcheon	20-001	114	—	—	—
		26-021	—	118	114	138
	Concealed	26-023	—	118	114	138
L460, L462, L463, L464, L496, L9460, L9462, L9463, L9464	Rose Trim Only	30-001	118	118	118	118


NOTE: Blocking ring and/or compression rings may be required and must be ordered separately. See page 125 for details.

Full face cylinders


Exploded view—Everest® modular mortise cylinder

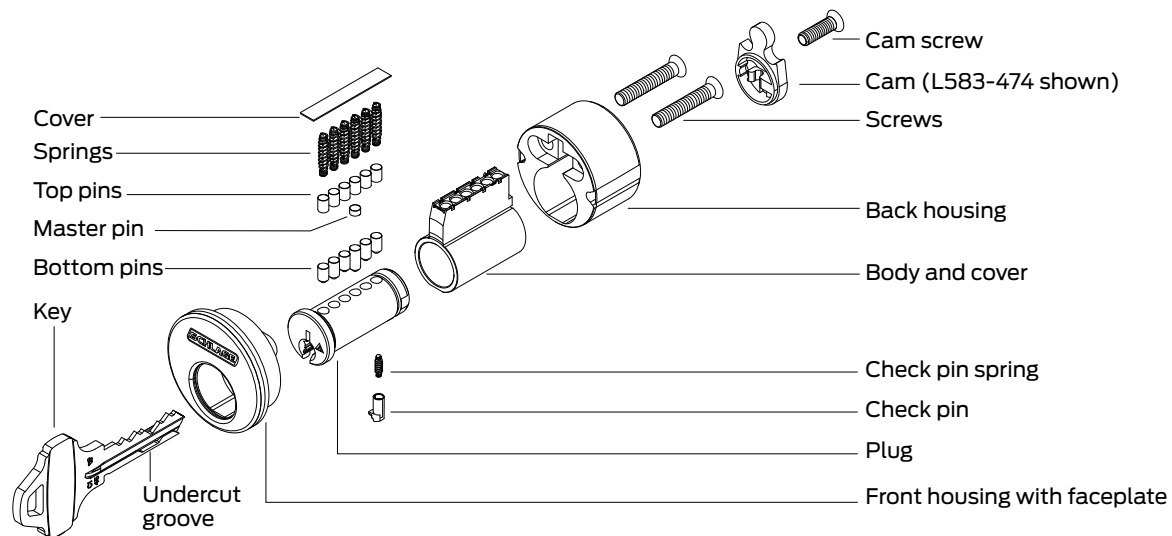


Exploded view—classic modular mortise cylinder

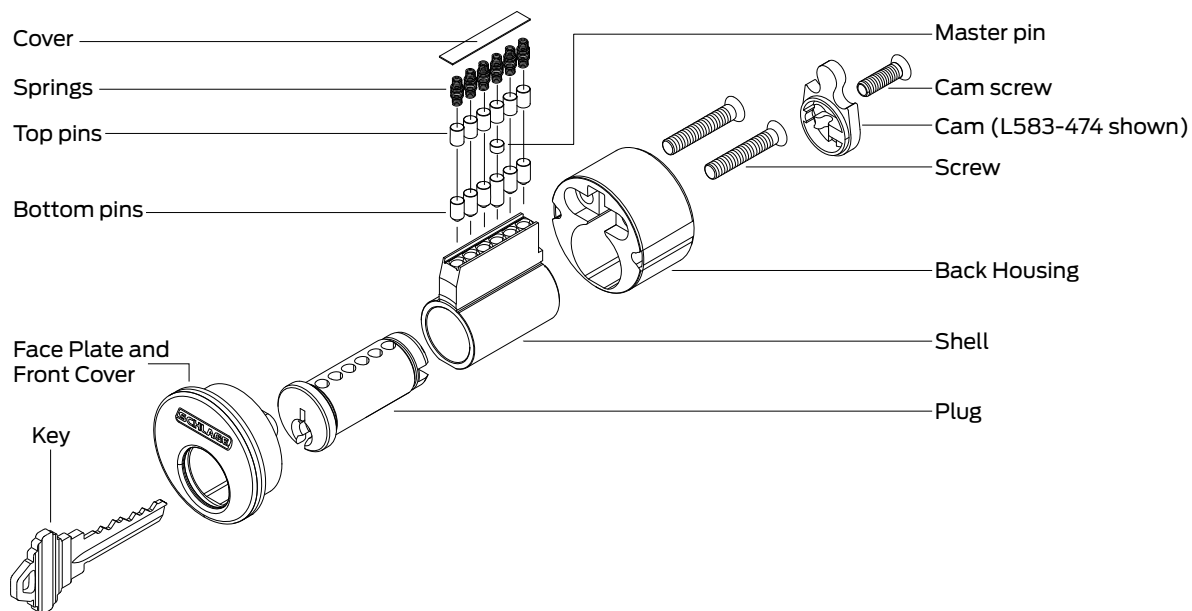



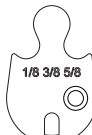

Exploded view—hotel mortise cylinder

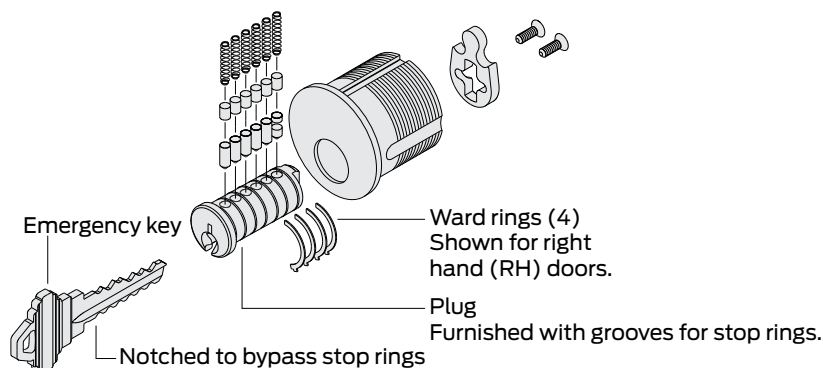


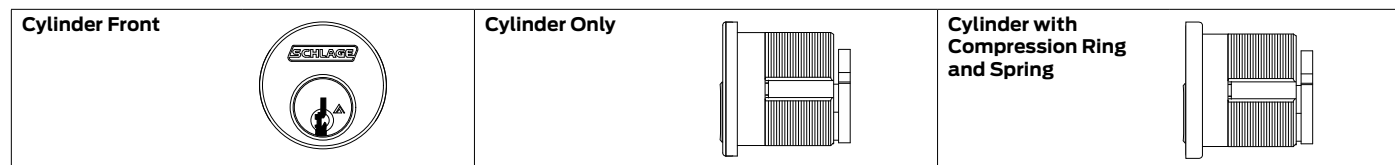


Cylinders

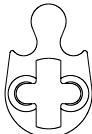



L-Series, LV-Series (except L9060/LV9060 outside and LM9380/LMV9380)

Description	Cylinder Mechanism	Complete Cylinder	Cams	
Cylinder only: L and N escutcheons	Conventional	30-021	Traditional Cams	
	Primus® controlled access	20-793	<div style="display: flex;"> <div style="width: 50%; text-align: center;"> L583-254 Classic conventional  </div> <div style="width: 50%; text-align: center;"> L583-153 Everest® and Primus®  </div> </div>	
	Primus XP controlled access	20-793-XP		
	Primus UL437	20-593		
	Primus XP UL437	20-593-XP		
	Hotel function	30-022*		
Cylinder with compression ring and spring: rose trim	Conventional	30-001	Modular Cams	
	Primus controlled access	20-787	<div style="display: flex;"> <div style="width: 50%; text-align: center;"> L583-474  </div> <div style="width: 50%; text-align: center;"> L583-475  </div> </div>	
	Primus XP controlled access	20-787-XP		
	Primus UL437	20-587		
	Primus XP UL437	20-587-XP		
	Primus lockout	20-717		
	Primus XP lockout	20-717-XP		
	Primus UL437 lockout	20-517		
	Primus XP UL437 lockout	20-517-XP		
	Hotel function	30-002*		

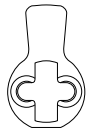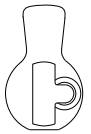L-Series, LV-Series L9060/LV9060 outside

Description	Cylinder Mechanism	Complete Cylinder	Cams	
Cylinder only: L and N escutcheons	Conventional	26-021	Traditional Cams	
	Primus controlled access	20-701	<div style="display: flex;"> <div style="width: 50%; text-align: center;"> B502-191 Conventional  </div> <div style="width: 50%; text-align: center;"> B502-948 Everest and Primus  </div> </div>	
	Primus XP controlled access	20-701-XP		
	Primus UL437	20-501		
	Primus XP UL437	20-501-XP		
	Primus XP UL437	20-501-XP		
Cylinder with compression ring and spring: rose trim	Conventional	20-001	Modular Cams	
	Primus controlled access	20-700	<div style="display: flex;"> <div style="width: 50%; text-align: center;"> L583-476  </div> <div style="width: 50%; text-align: center;"> L583-477  </div> </div>	
	Primus XP controlled access	20-700-XP		
	Primus UL437	20-500		
	Primus XP UL437	20-500-XP		
	Primus lockout	20-715		
	Primus XP lockout	20-715-XP		
	Primus UL437 lockout	20-515		
	Primus XP UL437 lockout	20-515-XP		
Cylinder with compression ring and 1/8" blocking ring	Conventional	20-002		

L-Series, LV-Series LM9380/LMV9380

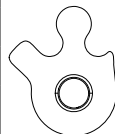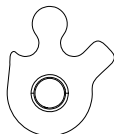
Description	Cylinder Mechanism	Complete Cylinder	Cams	
Cylinder only: L and N escutcheons	Conventional (RH)	30-000	<div style="display: flex;"> <div style="width: 50%; text-align: center;"> L583-509 (RH)  </div> <div style="width: 50%; text-align: center;"> L583-589 (LH)  </div> </div>	
	Conventional (LH)	30-019		
Cylinder with compression ring and spring: rose trim	Conventional (RH)	30-028		
	Conventional (LH)	30-029		

* Specify hand for hotel function cylinders. Not available in Primus. Furnished 0-bitted; emergency keys must be ordered separately.


NOTE: Lockout keys are not furnished with cylinders and must be ordered separately. Lockout cylinders will not be master-keyed by Schlage.

Concealed cylinders


Exploded view—Everest® mortise cylinder

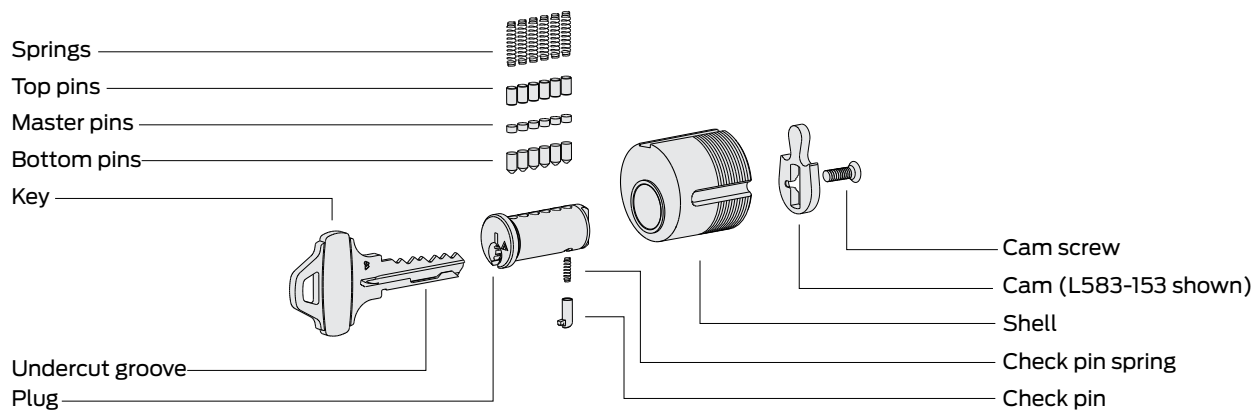

Exploded view—classic mortise cylinder

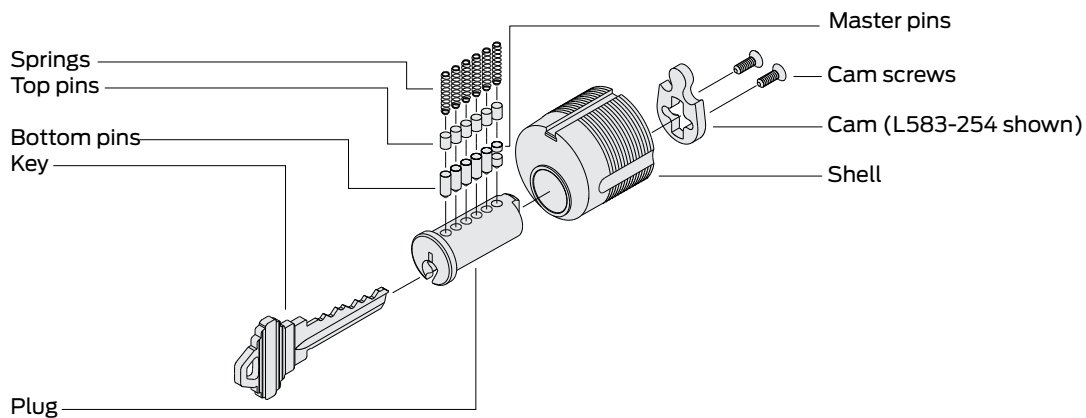


Exploded view—hotel mortise cylinder

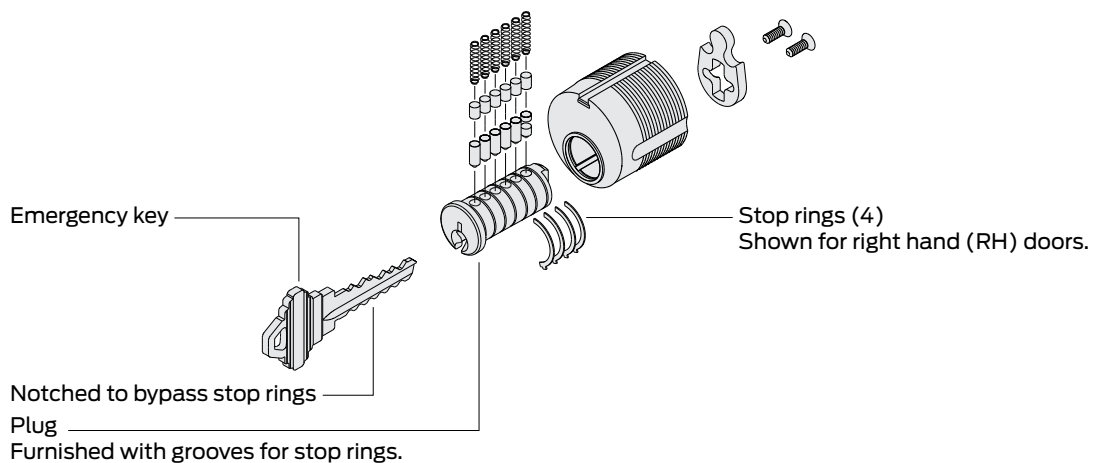

Cylinders

Assembled concealed cylinder

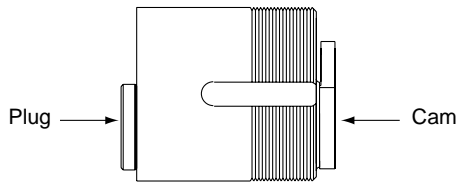

L-Series, LV-Series (except L9060/LV9060 outside)

Description	Cylinder mechanism	Complete cylinder	Cam	
Cylinder only: L escutcheon	Conventional	30-004		L583-254 Conventional L583-153 Everest® and Primus®
	Primus® controlled access	20-789		
	Primus XP controlled access	20-789-XP		
	Primus UL437	20-589		
	Primus XP UL437	20-589-XP		
	Hotel function	30-005*		

L-Series, LV-Series L9060/LV9060 outside

Description	Cylinder mechanism	Complete cylinder	Cam	
Cylinder only: L escutcheon	Conventional	26-023		B502-191 Conventional B502-948 Everest and Primus
	Primus controlled access	24-767		
	Primus XP controlled access	24-767-XP		
	Primus UL437	24-567		
	Primus XP UL437	24-567-XP		

* Specify hand for hotel function cylinders. Not available in Primus®. Emergency keys must be ordered separately.

NOTES: 1) Everest hotel function cylinders are available in 1 1/8", 1 1/4", and 1 3/8" only.

2) 1 1/8" (Dim=118) cylinders are furnished unless otherwise specified. Cylinder length depends on function, trim and door thickness.


3) Finishes: 606 and 626.

4) Specify LKB if 0-bitted Primus cylinders are required less key blanks.



5) Extended lengths are available.

Full size interchangeable core cylinders

Exploded view—full size classic

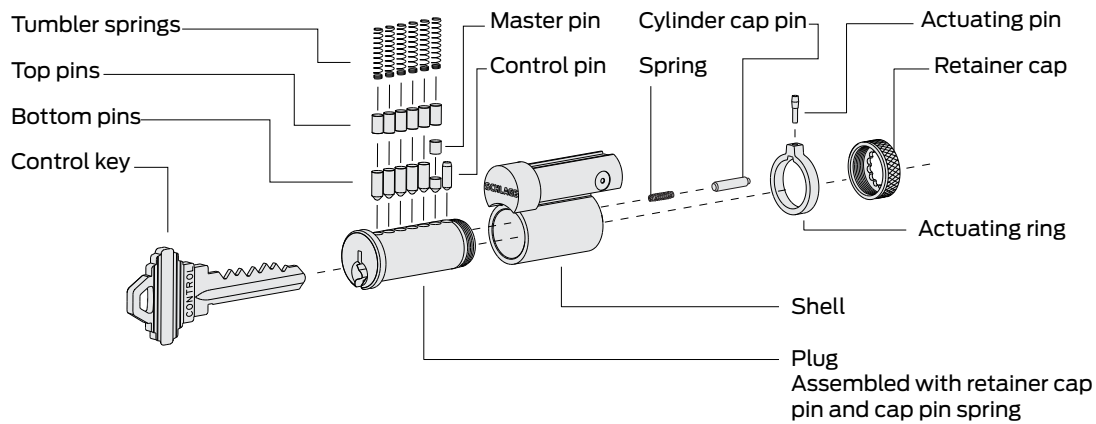

Exploded view—full size hotel classic

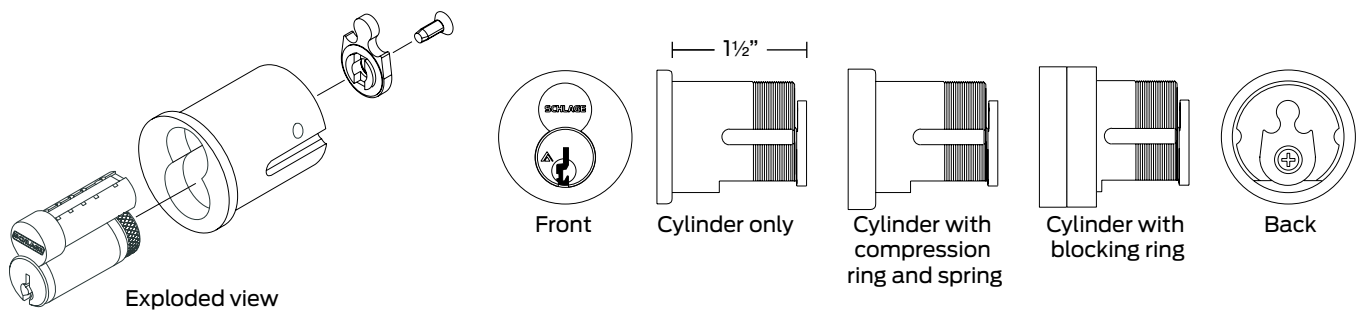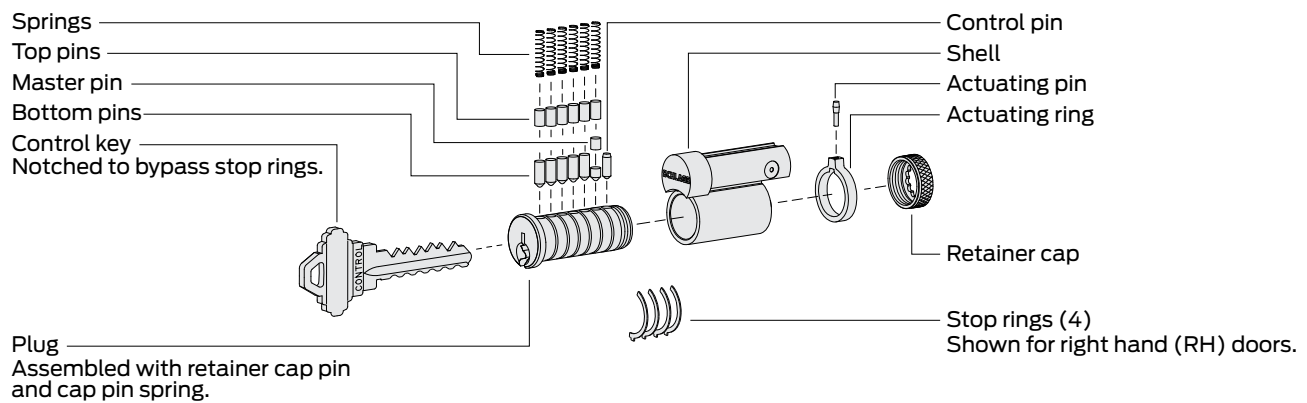

Cylinders

L/LV/LM/LMV-Series (except L9060/LV9060 outside and LM9380/LMV9380)

Description	Cylinder mechanism	Complete cylinder	Cam
Cylinder only: L and N escutcheons	Housing less core	30-016	
Cylinder with compression ring and spring: L and N escutcheons	Conventional core	30-008*	
	Primus® core	20-798	
	Primus XP core	20-798-XP	
	Hotel function	30-010**	
	Housing less core	30-007	
Cylinder with compression ring, compression spring and 3/8" blocking ring: rose trim	Conventional core	30-138*	
	Primus core	20-776	
	Primus XP core	20-776-XP	
	Hotel function core	30-140**	
	Housing less core	30-137	

L, LV-Series L9060/LV9060 outside

Description	Cylinder mechanism	Complete cylinder	Cam
Cylinder only: l and n escutcheons	Housing less core	30-032	
Cylinder with compression ring and spring: L and N escutcheons	Conventional core	30-030*	
	Primus core	20-782	
	Primus XP core	20-782-XP	
Cylinder with compression ring, compression spring and 1/2" blocking ring: rose trim***	Primus core	20-783	
	Primus XP core	20-783-XP	

LM, LMV-Series LM9380/LMV9380

Description	Cylinder mechanism	Complete cylinder	Cam	
LM9080 R	Conventional (RH)	26-101		
	Conventional (LH)	26-102		
LM9080 J	Conventional (RH)	26-103		
	Conventional (LH)	26-104		
LM9080 F	Conventional (RH)	26-105		
	Conventional (LH)	26-106		


* Can be ordered with construction core.

** Specify hand for hotel function cylinders. Not available in Primus®. Emergency key must be ordered separately.

*** For this configuration with conventional core, order 30-030 cylinder and 36-082-050 blocking ring.

Cylinders

Assembled full size interchangeable cores

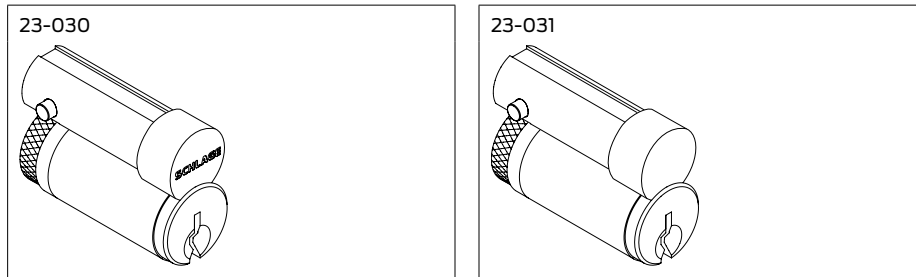

Part number	Description
23-030	Conventional core
23-031	Conventional core less logo
20-740	Primus® core
20-740-XP	Primus XP core
20-741	Primus core less logo
20-741-XP	Primus XP core less logo
30-120*	Hotel function conventional core for L9485 and L9486
30-121*	Hotel function conventional core, less logo, for L9485 and L9486

Full size core parts

Part number	Description
C503-115	Cap pin spring (order in multiples of 100)
C503-118	Retainer cap (order in multiples of 25)
C603-347**	Cap pin (order in multiples of 100)
C603-827	Cap pin (order in multiples of 100)
C603-956	Actuating ring
C603-964	Actuating pin (control top pin)
C603-967	Control bottom pin (order in multiples of 100)

* Specify hand for hotel function cores. Emergency keys must be ordered separately.

** For cores manufactured before November 1997.

NOTES: 1) Control keys must be ordered separately.

2) Finishes: 606 and 626.


3) Full size cores, conventional and Primus®, can be integrated into any Schlage key system with compatible Everest® or Classic keyways.

4) Primus® cores can be integrated into any Schlage 6-pin key system with compatible Primus keyways.

5) Primus® cores are Controlled Access. Specify LKB if 0-bitted Primus cores are required less key blanks.


Small format interchangeable core cylinders

Exploded view – small format Everest® keyways

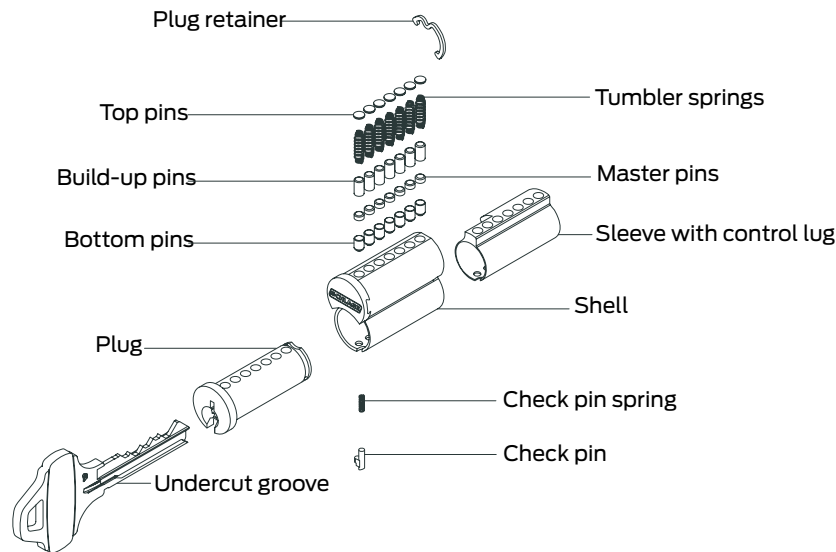


Everest® patented keyway cores

Part number	Description	80-036 / 80-037
80-037	Everest combined Core, includes master keying	
80-036	Everest uncombined Core	

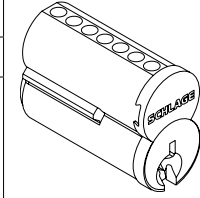


- NOTES: 1) Finishes: 606, 613, and 626.
2) Everest® B-family keyways are restricted.
3) Key symbol must be specified for combined cores.
4) Uncombined cores are furnished less keys, pins, and springs.
5) Control keys must be ordered separately.
6) Specify 80-035 for construction cores.

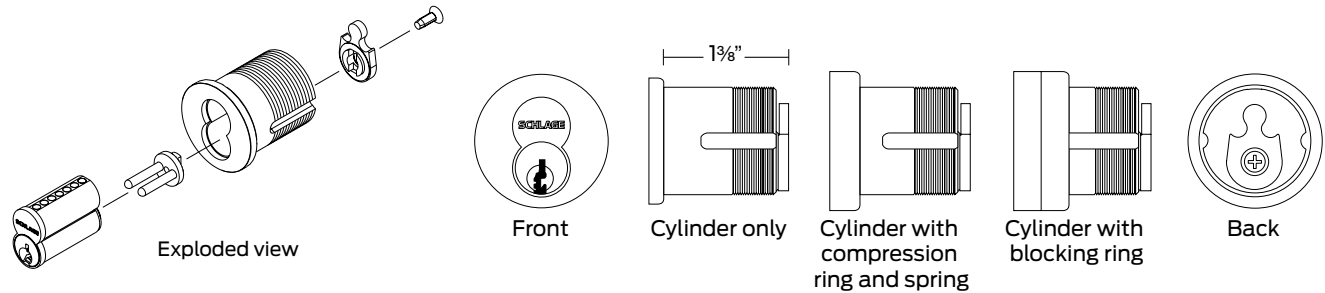


Cylinders



L/LV/LM/LMV-Series (except L9060 /LV9060 outside and LM9380/LMV9380)

Description	Cylinder mechanism		Complete cylinder	Cam
Cylinder with compression ring and spring: L and escutcheons	Everest® restricted combined core		80-308	
	Construction core	Disposable	80-115	
		Keyed	80-138	
	Housing less core		80-108	
Cylinder with compression ring, compression spring and ¼" blocking ring: rose trim	Everest restricted combined core		80-301	
	Construction core	Disposable	80-109	
		Keyed	80-131	
	Housing less core		80-101	


L, LV-Series L9060 /LV9060 outside

Description	Cylinder Mechanism		Complete Cylinder	Cam
Cylinder with compression ring and spring: L and N escutcheons*	Everest restricted combined core		80-304	
	Construction core	Disposable	80-112	
		Keyed	80-134	
	Housing less core		80-104	

LM, LMV-Series LM9380/LMV9380


Description	Cylinder Mechanism		Complete Cylinder	Cams	
LM9080 BD	Everest restricted combined core (RH)		26-107		
	Everest restricted combined core (LH)		26-108		
LM9080 BDC	Everest restricted combined core (RH)		26-109		
	Everest restricted combined core (LH)		26-110		
LM9080 GD	Everest restricted combined core (RH)		26-111		
	Everest restricted combined core (LH)		26-112		
LM9080 HD	Everest restricted combined core (RH)		26-113		
	Everest restricted combined core (LH)		26-114		

Other straight cam applications

Description	Cylinder mechanism		Complete cylinder	Cam
Cylinder with compression ring, compression spring and ¼" blocking ring.	Everest restricted combined core		80-302	
	Construction core	Disposable	80-110	
		Keyed	80-132	
	Housing less core		80-102	


* For rose trim also order 36-082-050 blocking ring.

Blocking and compression rings

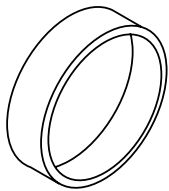36-079 Blocking ring


1 3/8" diameter

Specify dimension. DO NOT use with 36-083.

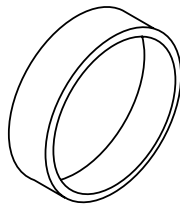36-082 Blocking ring

1 1/2" diameter

Specify dimension. Use with 36-083.

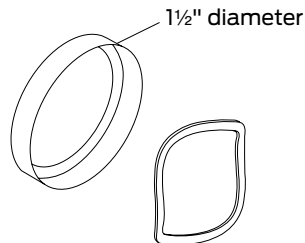36-083 compression ring and cylinder spring

Specify dimension.

L583-195 Cylinder spring

Dimensions for blocking rings

Blocking ring length	Dimension
1/8"	012
3/16"	018
1/4"	025
5/16"	031

Blocking ring length	Dimension
3/8"	037
7/16"	043
1/2"	050

Full size core blocking ring requirements, L-Series, LV-Series

Function	Trim	Door Thickness			
		1⅜”	1¾”	2”	2¼”
		Dimension			
L9050, L9056, L9070, L9076, L9080, L9080EL/EU L9453, L9456, L9460 per XL11-635 or XL11-886, L9464 per XL11-886, L9465, L9473, L9480	Rose	050	037	025	025
	Escutcheon	025	012	N/R	N/R
L9485	Rose	—	037	025	025
	Escutcheon	—	012	N/R	N/R
L9486, L9496	Rose	012	N/R	N/R	N/R
	Escutcheon	025	012	N/R	N/R
L9060*, L9071*, L9077*, L9082*, L9457*, L9458*, L9462 per XL11-886*, L9466*, L9482*	Rose	—	050	043	031
	Escutcheon	025	012	N/R	N/R
L460, L464, L496, L9460, L9464	Rose	050	037	025	025
L462*, L463*, L9462*, L9463*	Rose	—	050	043	031

SFIC blocking ring requirements, L-Series, LV-Series

Function	Trim	Door Thickness			
		1⅜”	1¾”	2”	2¼”
		Dimension			
L9050, L9056, L9070, L9076, L9080, L9080EL/EU, L9453, L9456, L9460 per XL11-886 or XL11-635, L9464 per XL11-886, L9465, L9473, L9480, L9485, L9485 per XL11-557	Rose	037	025	012	N/R
	Escutcheon	N/R	N/R	N/R	N/R
L9060*, L9071*, L9077*, L9082*, L9082EL/EU*, L9457*, L9458*, L9462 per XL11-886*, L9464*, L9466*, L9482*	Rose	—	050	037	025
	Escutcheon	018	N/R	N/R	N/R
L9496	Rose	025	012	N/R	N/R
	Escutcheon	N/R	N/R	N/R	N/R
L460, L464, L496, L9460, L9464	Rose	037	025	012	N/R
L462*, L463*, L9462*, L9463*	Rose	—	050	037	025


* Two (2) Blocking Rings required.

N/R

None required.

Special trim options

Solid latchbolt XL11-422

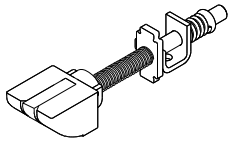


For use with electric strikes. The anti-friction tongue is replaced by a nylon insert to prevent interference with the strike gate.

Armor front (deadbolt) XL11-743

Armor front with deadbolt hole for use with dummy functions or inactive doors. Specify dummy function per XL11-743.




L9000 lead lining XL11-515

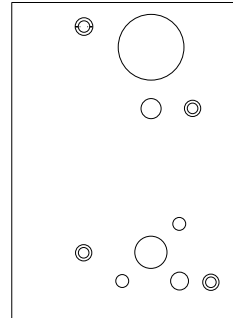

.125 ± .015

L400 lead lining XL12-216

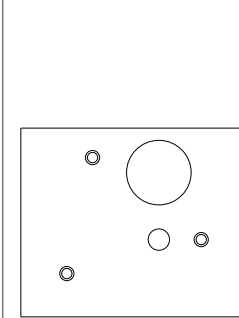

.125 ± .015

Lead plate installed on case cover. Buyer should verify that the preparation meets local installation requirements or regulations. Specify door hand.

Special cylinder applications

"X" Number	Description
XB03-418	Extended mortise cylinder (20-001, 30-001 or 30-004), 1 $\frac{1}{8}$ "–5" long, Classic or Everest®
XB11-475*	Full size IC extended mortise cylinder (26-091 or 30-008), 2 $\frac{1}{4}$ "–5" long, Classic or Everest®
	Primus® full size IC extended mortise cylinder (20-763 or 20-798), 2 $\frac{1}{4}$ "–5" long
	Full size IC mortise cylinder housing less core (20-059 or 30-007) 2 $\frac{1}{4}$ "–5" long
XB11-638	Primus® mortise cylinder (20-700, 20-787, or 20-789), 1 $\frac{1}{8}$ "–5" long

* Available in $\frac{1}{4}$ " increments. Order collars or blocking rings separately to fill gaps.

NOTES:

- 1) Specify complete cylinder as required, then "X" number (e.g. 20-001-118-P per XB11-475).
- 2) Primus cylinders are Controlled Access. Specify LKB if 0-bitted Primus® cylinders are required less key blanks.
- 3) Specify finish and dim code


Anti-Ligature Conversion Kits

Knob	Lever	Kit contents	Knob or lever functions
09-155	09-138	(2) anti-ligature knob or lever assembly (2) anti-ligature blocking ring (2) trim ferrules (lever kit only)	L9010, L9176, L9070, L9076, L9080, L9080EL, L9080EU, L9465, L9060, L9071, L9077, L9082, L9082EL, L9082EU, L9482, L9457, L9458, L9466
09-156	09-139	(2) anti-ligature knob or lever assembly (2) anti-ligature blocking ring	L9412, L9050, L9056, L9453, L9456, L9473, L9480, L9485, L9460 with pull
09-159	09-189	(2) anti-ligature knob or lever assembly (1) anti-ligature thumbturn assembly (1) emergency ADA turn and emergency button (2) trim ferrules (lever kit only)	L9040, L9440

Deadbolt	Kit contents	Deadbolt functions
09-157	(2) anti-ligature blocking ring	L462, L464, L9462, L9464
09-158	(1) anti-ligature blocking ring (1) anti-ligature thumbturn assembly	L460, L480, L9460

Anti-ligature knob trim XL11-000

Specify SK1 trim per XL11-000.

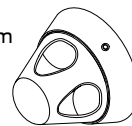


Anti-ligature lever trim XL12-482

Specify SL1 trim per XL12-482.



Anti-ligature thumbturn 09-029

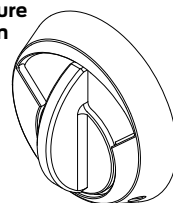


NOTES:


- 1) For 1 $\frac{1}{4}$ " doors only.
- 2) For sectional trim only.
- 3) Available finishes: 630 (satin stainless steel) or 630AM (Satin stainless steel with anti-microbial coating).
- 4) Specify cylinder type: "P" for (P) type, "R" for (R, J, F, T) types, and "BD" for (BD, BDC, GD, HD) types, following the part number.
- 5) Not available with "L" (lock less cylinder) option.

Installation tools and kits


40-149 Universal clamp

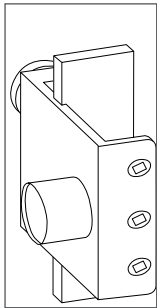


40-155 L-series template (front side)

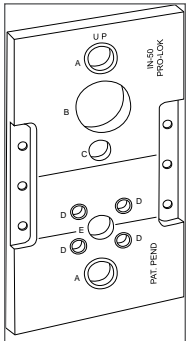


40-157 L-series template (reverse side)

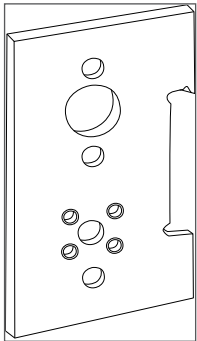

40-158 Mortise pocket filler (edge)

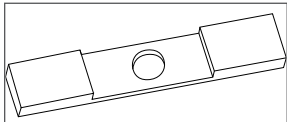

40-160 Mortise lock jig

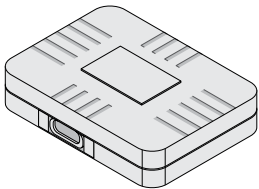


Includes 1 each: Case, jig, long boring shaft, 7/8" wood cutter bit, 1" wood cutter bit, 1 1/4" wood cutter bit, instruction booklet.

Installation tools and kits

40-054 Maintenance kit contents

#	Part No.	Desc.	Qty
1	C603-256-455	Screws, Mtg	6
	L583-035-STL	Spring, Turn Hub	6
	L583-053-604	Retractor, Simultaneous	3
	L283-040-604	Spring, Cage	6
2	L583-321-428	Plate, Mtg, IS, Knob	3
	L283-031-604	Plate, Mtg, IS, Lever	3
3	L583-454-604	Screw, Case	12
4	L583-049-604	Link, Entrance	2
	L583-051-604	Lever, Transfer	3
5	L583-056-604	Pin, Catch	3
6	L583-050-604	Pin, Link	3
	36-080	O-Ring	5
7	K110-020-455	Screw Pack	1
	K110-020-637	Screw Pack	1
	K110-020-640	Screw Pack	1
8	L583-144-PLA	Washer, Lever	25
9	L583-066-604	Screws, Mtg Post	6
	L583-212-604	Mtg Post 134 Door	6
10	L583-029-604	Hub, Turn	3
11	L283-030-604	Tru-Arc Ring	1
12	L583-214-604	Mtg Post	6
13	L583-020-604	Spacer	3
	L583-021-604	Lever, Retractor	3
	L583-022-604	Rocker, Retractor	3
	L583-023-604	Plate, Blocking	3
14	L583-019-604	Hub, Retractor	6
15	L283-101-639	Bolts, Esc.	1
	L283-101-640	Bolts, Esc.	1
	L283-101-652	Bolts, Esc.	1
16	L583-196-604	Stop, Deadlatch	3
	L583-044-STL	Spring, Stop	3
17	L583-481-603	Screw, Retainer	3
	L583-492-604	Plate, Screw	2
	L583-490-604	Retainer	2
18	L583-485-604	Screw, Catch	6
	L583-047-MW	Spring, Catch	2
19	L583-038-604	Guide, Aux. Bar	3
	L283-006-455	Latch, Aux.	3
20	L583-026-MW	Spring, Hub	3
	L583-027-PLA	Fuse, Fire Door	3
	L583-028-604	Catch, Fire Door	3

#	Part No.	Desc.	Qty
21	L583-024-604	Link, Retractor	3
	L583-025-604	Crank, Retractor	3
22	L583-030-604	Hub, Entrance	2
	L583-031-604	Cam, Follower	2
23	K110-953-455	Screw Pack, Mtg, Esc.	3
	K110-953-498	Screw Pack, Mtg, Esc.	3
	K110-953-613	Screw Pack, Mtg, Esc.	3
24	K510-310-STL	Tru-Arc Ring, Knob	25
	K510-239-PLA	Washer, Thrust	50
25	K110-550-STL	Tru-Arc Ring & Spacer	12
26	L583-322-428	Spacer, Lever	6
Bottom	L583-032-455	Deadbolt	3
	L583-033-604	Bar, Deadbolt	1
	L583-034-604	Bar, Entrance	1
	L583-146-604	Bar, Deadbolt	1
	L583-426-604	Faceplate, Tab 1¼"	2
	L583-427-604	Faceplate, Tab 1⅛"	2
	L583-048-604	Link, Locking	2
	L583-045-604	Catch, Locking	3
	L283-060-604	Spindles	6
	40-053	Kit, Trim, Replacement	4
	40-127	Tru-Arc Plier	1
Top	P509-491	Sheet, Parts	1

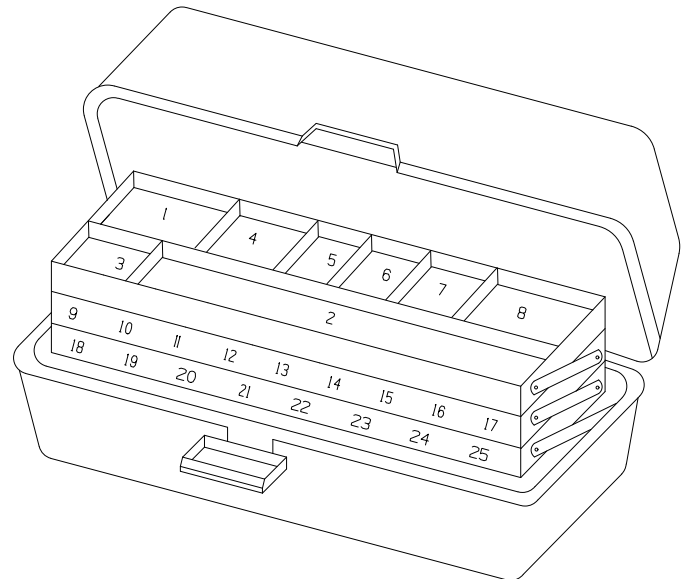

Electrically locking

L9080 EL electrically locked (fail safe)

Outside trim is continuously locked electrically. The latchbolt is retracted by a key outside or by the knob/lever inside. Switch or power failure allows the outside knob/lever to retract the latchbolt. The auxiliary latch deadlocks the latchbolt when the door is closed. The inside knob/lever is always free for immediate exit.

L9080 EU electrically unlocked (fail secure)

Outside trim is unlocked electrically. The latchbolt is retracted by a key outside or by knob/lever inside. The auxiliary latch deadlocks the latchbolt when the door is closed. The inside knob/lever is always free for immediate exit.

Replacement kit

L283-053 solenoid and driver, EL or EU.

Electrical requirements

Voltage: 24V AC or 24V DC (max. 26V, min. 22V).

Peak current: 1.3 Amps at 5 to 10 second intervals.

Holding current: .135 Amps between peak current intervals.

Typical installation

All installations should be in accordance with local electrical codes and National Electrical Code NFPA #70. It is recommended that each lock have its own 24 volt transformer. Two or more locks may be operated in parallel from a single transformer provided it has the necessary current rating. DO NOT connect locks in series from a higher voltage rated transformer. Damage to locks may occur if connected to a supply circuit that also contains electromagnetic devices. The transient voltage must be suppressed at the equipment producing it before connecting the locks to a circuit. A varistor rate at 35 volts (at peak current) may be used for transient voltage protection.

L9082 EL or EU Electrically locked or unlocked both sides


The same as L9080EL/EU, except both knobs/levers are locked or unlocked simultaneously. (Previously XL11-452).

Cylinders

All Schlage cylinders are available with the previously mentioned locks. Specify the locks with the required cylinder code, e.g. L9080PEL (code P) for classic and full size Everest cylinders. For a complete list of order codes, see "Ordering procedures" on page 134.


Operating temperature: max +151° F, min. -31° F.

RX Microswitch: 5 Amps, normally closed circuit.

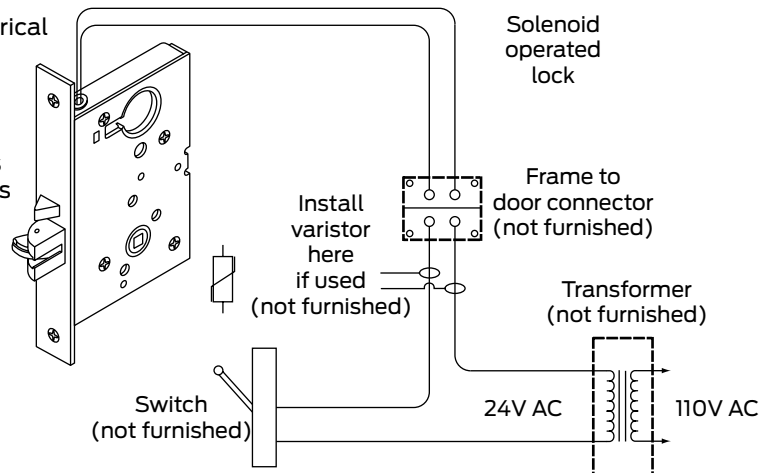

Request to exit (RX) feature

A microswitch inside the lock case is activated when the knob/lever is rotated. The switch signals the use of that opening to security systems allowing a non-disruptive means of immediate egress. Specify the L-Series lock case with L283-263, or the LV-Series lock case with L283-239.

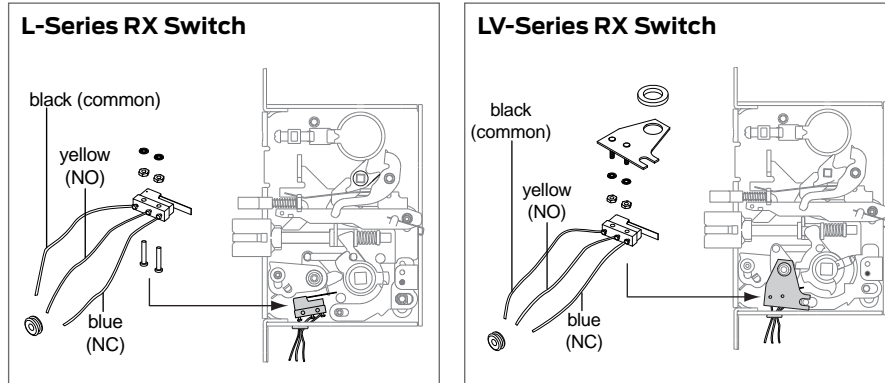


Note: Locks shipped prior to mid-2010 are configured with two-wire switches: **L283-059** for normally closed or **L283-125** for normally open L-Series, and **L283-197** for normally closed or **L283-196** for normally open LV-Series.

Request to Exit feature is available on the following L and LV Series locks: L9080EL/EU, L9010, L9050, L9060, L9070, L9071, L9076, L9077, L9080, L9056, L9496, L9453, L9456, L9457, L9082 EL/EU.

Latch monitoring

A microswitch inside the lock case is activated when the latch is retracted. Available only on L9080EL-RX and L9080EU-RX functions. Specify XL12-245 for L9080PEL, or XL12-246 for L9080PEU.

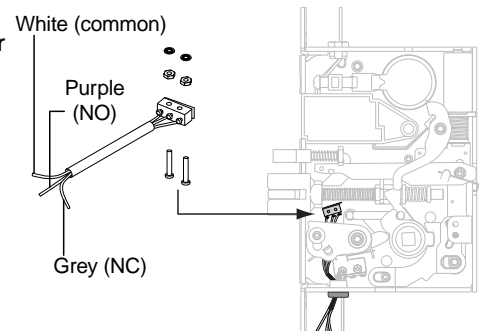

Multipoint lock, LM9300 Series

The LM9300 three-point locking chassis is a component in the Schlage Multipoint Lock product. The Multipoint Lock is an integrated assembly which includes the LM9300 three point locking chassis, a specialized Steelcraft door with a concealed vertical rod assembly, and a specialized Steelcraft frame. The LM9300 chassis interfaces with the concealed vertical rod assembly and provides control of all three latches.

The Multipoint lock is a solution-specific product, with tornado-shelter and high-security options available. When paired with the appropriate Steelcraft Paladin door the product meets the ICC500 standard, and FEMA 320/361 guidelines for protection in tornadoes. Alternately, the product can be used in high-security applications (non-tornado) when paired with a Steelcraft L or B door.

The LM9300 series chassis is a direct replacement for the LM9000 series. However, the latches (sold separately when ordered as replacement parts) are different between the two series. Please note the original installation and order only the appropriate replacement top/bottom latch components.

Multipoint is available with the following functions: Passage, Exit, Office/Entry, Office/Entry with Automatic Unlock, Classroom, Classroom Security, and Storeroom.

Multipoint lock top/bottom latch components






LM9000 parts	Description	Package contents
900264-XX	LM9000 aux package (specify finish)	304L bottom strike, 114141, top soffit latch package, screws, 900262-XX, ratchet release, screws
114313-XX	LM9000 rodset	LM9000 rodset and latches for 6' 8" - 8' 0" doors

LM9300 parts	Description	Package contents
24353625	LM9300 strike package	Top and bottom strikes, floor anchors, screws
24358830	LM9300 rodset 6' 8" - 8' 0" doors	LM9000 rodset and latches for 6' 8" - 8' 0" doors, 39 ¹⁵ / ₁₆ " centerline
24457715	LM9300 rodset 4' 0" - 5' 11" doors	LM9000 rodset and latches for 4' 0" - 5' 11" doors, 26" centerline
24457723	LM9300 rodset 3' 1" - 3' 11" doors	LM9000 rodset and latches for 3' 1" - 3' 11" doors, 15" centerline

Lubrication specifications

Lock function				Area
L9010	LV9080	LV9082		A
L9080	L9082			
L460	L480	L9462		B
L462	L496	L9463		
L463	L9460	L9464		
L9465	L9466	L9473		A, B
L9040	LV9060	L9077	LV9080EL	A,C
LV9040	L9071	LV9077	L9080EU	
L9050	LV9071	L9080	LV9080EU	
LV9050	L9076	LV9080	L9082EL	
L9060	LV9076	L9080EL	L9082EU	
L9440	LV9453	L9458	L9486	A, B, C
LV9440	L9456	LV9458	LV9486	
L9444	LV9456	L9485	L9496	
LV9444	L9457	LV9485	LV9496	
L9453	LV9457			

Case and cover: 150 milligrams minimum in each area A, B, and C

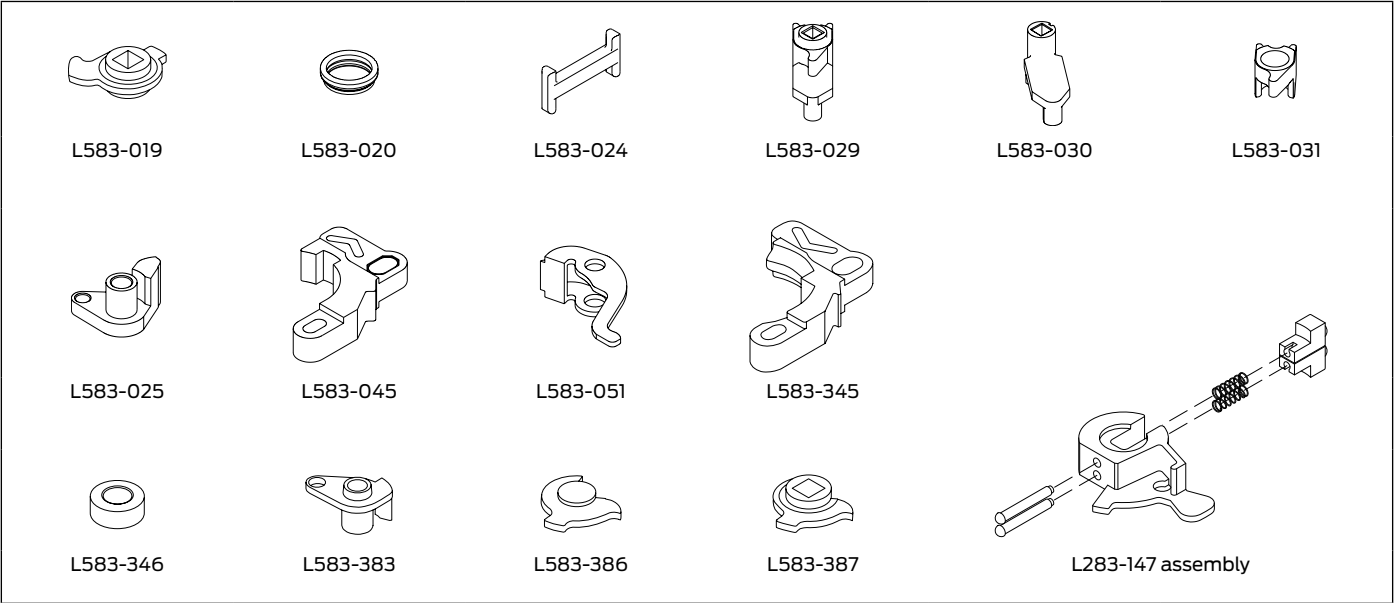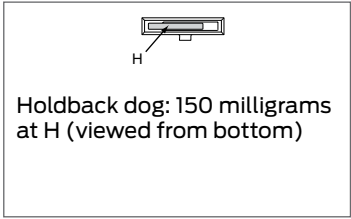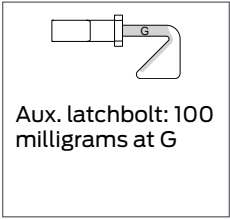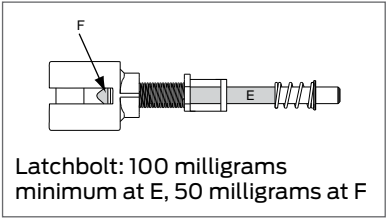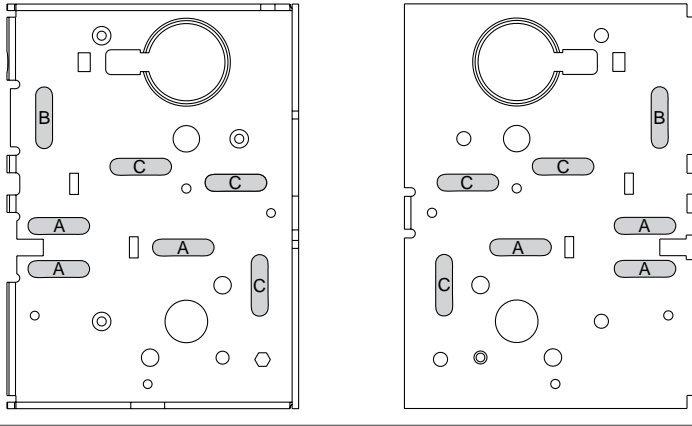


Parts shown above must be barrel lubricated to obtain approximately .3 millimeters of film thickness prior to assembly.

Door handing

The hand of a door refers to the position of the lock relative to the side and direction of the door hinge.


There are four possible 'handings' based on whether the hinge is on the right or left side of the door and whether it swings to the inside or outside (see diagram).

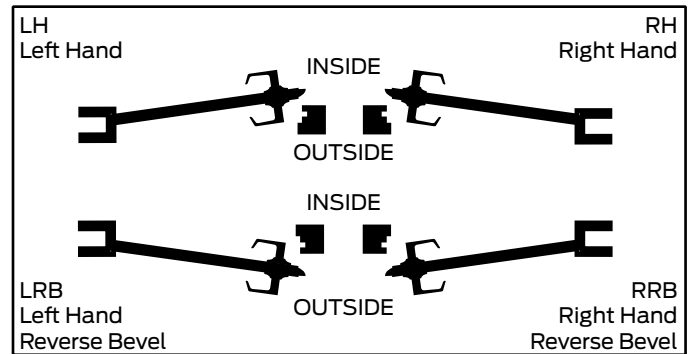

Changing the lock hand


There are two steps to changing the hand of any L-Series lock:

1. Pull and Rotate Latchbolt. With the lock case removed from the door, pull the latchbolt away from the lockcase and rotate 180°.
2. Change Lock Handing Screw. Remove the lock handing screw from one side of the chassis and install it on the opposite side. The lock handing screw should always be on the interior side of the door for L-Series locks, and on the exterior side of the door for LV-Series locks.

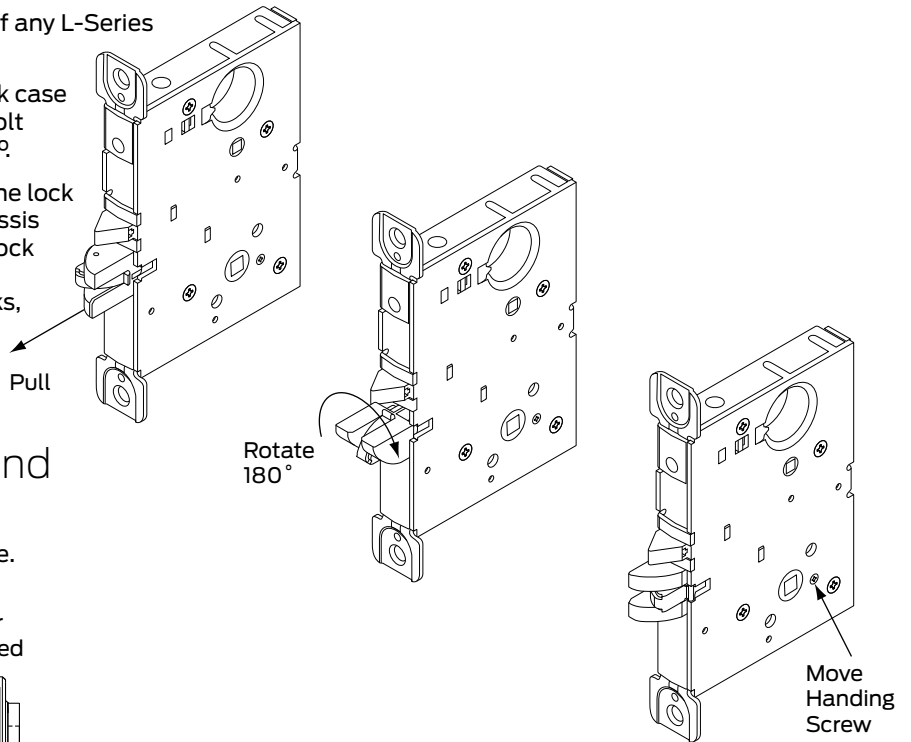

Changing cylinder turn hand

1. Remove cam.
2. Move ball and spring to appropriate hole.

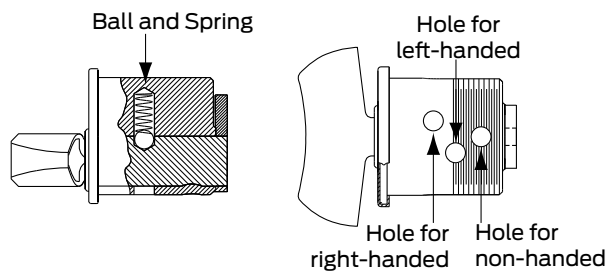

Ordering procedures

To order Schlage products, descriptive data should be in the same sequence as shown:

Line Item	Qty	Product	Outside		Inside		Hand	Latch	Strike	DR THK	EXT	DIM	Additional Details
			DES	FIN	DES	FIN							
1	2	3	4	5	6	7	8	9	10	11	12	13	14

- Line Item: Line item number
- Qty: Quantity
- Product: Complete lock product or part number
- Outside DES: Outside design code
- Outside FIN: Outside finish code
- Inside DES: Inside design code: Leave blank if same as outside design code.
- Inside FIN: Inside finish code: Leave blank if same as outside finish code.
- Hand: Hand of door: Only one hand allowed per line item. Example: RH=Right Hand, LH=Left Hand, RR=Right Reverse, LR=Left Reverse
- Latch: Latch: Leave blank for standard or specify part number if non-standard latch is required. LLL=Less Latch.
- Strike: Strike: Leave blank for standard or specify part number if non-standard strike is required. LLL=Less Strike.
- DR THK: Door thickness: Enter door thickness if non-standard. Example: 138=1 $\frac{3}{8}$ ", 214=2 $\frac{1}{4}$ ", 212=2 $\frac{1}{2}$ ".
- EXT: Extension: Enter one of the following when doors 2" thick or greater are specified: EE=Extended Equally, EI=Extended Inside, EO=Extended Outside, ED=Extended Differently. EI or EO assumes the latch will be centered on a 1 $\frac{3}{4}$ " door, to which material has been added.
- DIM: Dimension: Enter dimension for non-standard strike lip length and mortise cylinder or blocking ring length.

012 = $\frac{1}{8}$ "	037 = $\frac{3}{8}$ "	118 = 1 $\frac{1}{8}$ "	158 = 1 $\frac{5}{8}$ "
018 = $\frac{3}{16}$ "	050 = $\frac{1}{2}$ "	114 = 1 $\frac{1}{4}$ "	134 = 1 $\frac{3}{4}$ "
025 = $\frac{1}{4}$ "	078 = $\frac{7}{8}$ "	138 = 1 $\frac{3}{8}$ "	200 = 2"
031 = $\frac{5}{16}$ "	100 = 1"	112 = 1 $\frac{1}{2}$ "	400 = 4"
- Additional Details: Enter detail for keying information and for special requirements.
- Examples:

Line Item	Qty	Product	Outside		Inside		Hand	Latch	Strike	DR THK	EXT	DIM	Additional Details
			DES	FIN	DES	FIN							
One mortise cylinder, 1¼" long, which will operate a Von Duprin exit device.													
17	1	20-001		626								114	

One hotel function L-Series lock with 17B trim in 625 for left hand door.													
18	1	L9485P	17B	625			LH					114	

Five replacement inside L escutcheons with "EZ" turn, in satin stainless steel, to be used with O6 lever on 1 $\frac{3}{4}$ " doors.													
19	5	09-633			06L	630				134			with EZ turn per L583-363

Finishes

Schlage Lock products are available in a range of durable, top quality finishes. Most are available with a clear coating that protects against damaging environmental factors, including sea air, high humidity, or corrosive vapors.

The anti-microbial coating on Schlage lock hardware works to protect the hardware's surface by inhibiting the growth of bacteria, mold and mildew. The coating is made using ionic silver (AG+), a single atom that is missing one orbital electron that interacts with the bonding sites on the microbe surface. The result is that silver ions surround bacterial cells, blocking food and respiration supply, and slowing bacterial growth.

Cleaning and care varies by finish. Clear-coated or oil rubbed finishes can be cleaned periodically with a mild non-abrasive soap and buffed lightly with a clean cloth. Non-clear coated finishes should not be cleaned with soaps or solvents. They require cleaning with a clean, soft, damp cloth.

Finishes are coded according to the Builders Hardware Manufacturers Association (BHMA). The nearest old U.S. equivalent code designations are shown in parentheses.

Finish Codes and Descriptions

Code	Description
605 (US 3)	Bright brass, clear coated
606 (US 4)	Satin brass, clear coated
609 (US 5)	Antique brass, clear coated
612 (US 10)	Satin bronze, clear coated
613 (US 10B)	Oil rubbed bronze, no coating
619 (US 15)	Satin nickel, clear coated
625 (US 26)	Bright chromium plated, no coating

Code	Description
626 (US 26D)	Satin chromium plated, no coating
626AM	Satin chromium plated, anti-microbial coating
629 (US 32)	Bright stainless steel, no coating
630 (US 32D)	Satin stainless steel, no coating
630AM	Satin stainless steel, anti-microbial coating
643e (US 11)	Commercial aged bronze

For finish availability refer to Schlage Commercial Price Book.

Limited warranty

Commercial application

3-Year Limited Warranty

Schlage Lock Company (the "Company") extends a three-year limited warranty from the original date of purchase to the Original User of the products manufactured by the Company (the "Product") against defects in material and workmanship. Certain Products contain restrictions to this limited warranty, additional warranties or different warranty periods. Please see below for specific Product warranty information.

The provisions of this warranty do not apply to Products:

(i) used for purposes for which they are not designed or intended; (ii) which have been subjected to alteration, abuse, misuse, negligence or accident; (iii) which have been improperly stored, installed, maintained or operated; (iv) which have been used in violation of written instructions provided by Schlage; (v) which have been subjected to improper temperature, humidity or other environmental conditions (i.e., corrosion); or (vi) which, based on Schlage's examination, do not disclose to Schlage's satisfaction non-conformance to the warranty. Additionally, Schlage will not warrant ANSI A 156.2 Grade 2 lever Product installed in educational and student housing.

Specific product warranty restrictions/additional warranties

Portable security products warranty: A limited lifetime warranty is provided to the Original User, subject to the restrictions of this limited warranty, except that the Company's sole obligation under this warranty is to replace the Product.

ND-Series levers 10-year mechanical warranty: A limited warranty is provided to the Original User for ten (10) years from the original date of purchase, subject to the restrictions of this limited warranty.

Small Format Interchangeable Core (SFIC) warranty: This limited warranty also applies to Schlage locks and housings when used with another manufacturer's cores, or to Schlage cores (i.e., SFIC) when used in another manufacturer's locks and housings. The use of unauthorized cylinder cams or other components with the Products shall void this warranty.

Everest®, Primus® limited lifetime key breakage warranty: A limited lifetime warranty is provided to the Original User against key breakage, subject to the restrictions of this limited warranty.

AD-Series 1-Year warranty for electronic locks, reader modules, PIM400 and PIB300: A limited warranty is provided to the Original User for one (1) year from date of installation, not to exceed two (2) years from the date of shipment from the factory, subject to the restrictions of this limited warranty.

About Allegion

Allegion (NYSE: ALLE) creates peace of mind by pioneering safety and security. As a \$2 billion provider of security solutions for homes and businesses, Allegion employs more than 7,800 people and sells products in more than 120 countries across the world. Allegion comprises 23 global brands, including strategic brands CISA®, Interflex®, LCN®, Schlage® and Von Duprin®.

For more, visit www.allegion.com.

aptiQ ■ LCN ■ **SCHLAGE** ■ STEELCRAFT ■ VON DUPRIN