


## 941127-00


## Control for 5575 & 5575-F Exit Device

## INSTALLATION INSTRUCTIONS

- Prepare door for exit device. See exit device instructions for locations of holes, backset (line X-X), and center lines.
- 2. Prepare door for control:
  - a. Transfer line X-X from inside (exit device side) of door to outside (control side) of door.
    Use extra care if edge of door is beveled. Be sure line X-X is parallel to edge of door.
  - b. Locate and prepare holes as indicated on back of sheet.
- Install cylinder into control if required (Figures 1 & 2). Insure cylinder cam is set for required function and replace if necessary.
- Note: Mortise lock or device must be in unlocked position before installation. This control requires 1-1/4" long mortise cylinder. Cylinder collar must not be used.
- 4. Install control.
- 5. Apply device and test key, control, and device action.

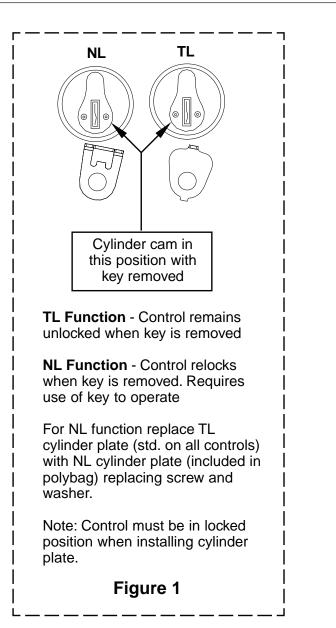

375-L, 375-L-BE

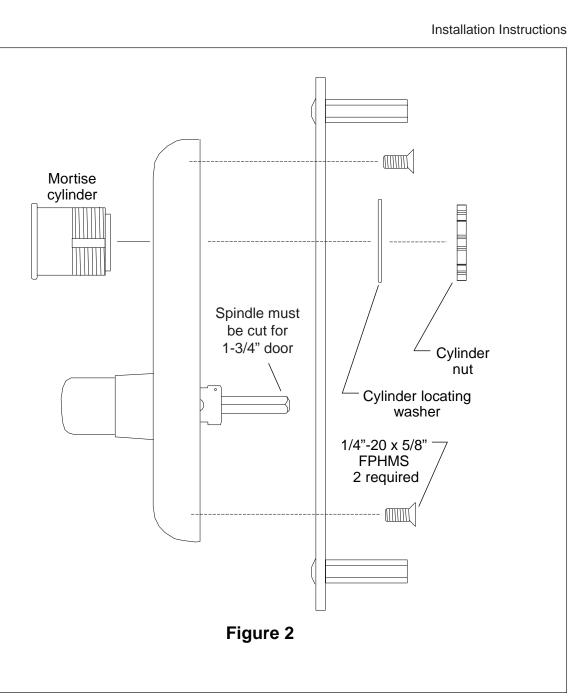

**VON DUPRIN** 

