


# SS Wiring

Applies to all SS33/35, SS33A/35A, & SS98/99 series exit devices

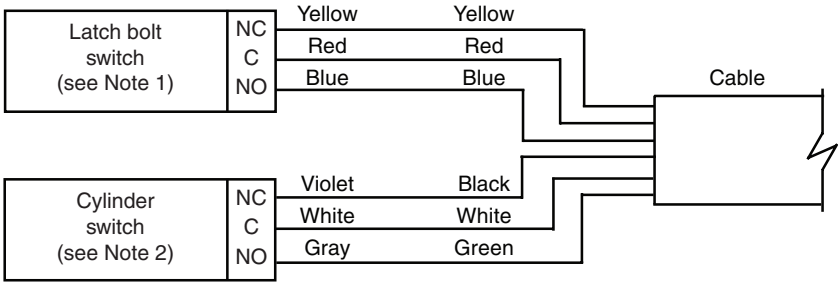

## Notes:

1. The latch bolt switch is actuated whenever the touchbar is depressed or the device latch bolt is retracted. This switch may be used for initiating an alarm.
2. The cylinder switch is actuated when the key is inserted into the lock cylinder and turned clockwise. This switch may be used for shunting or resetting an alarm.
3. A continuous current electric hinge or equivalent is required to transfer the wiring from the door to the frame.
4. Splice electric hinge wires and cable wires together with wire nuts. Unused wires should be cut off or insulated separately.
5. Cut device to proper length before connecting cable and switch wires.

