

# **LOCKEY** USA **Lockey GB-LINX Installation Instructions**

**GB2900 LINX:** Compatible with **2900, 2930, 2950 and 2985**. When using for 2900 and 2950, position gate box with small hole on top. When using for 2930 and 2985, position gate box with small hole on bottom.

- 1.) Place GB-LINX Box on gate post in desired placement.
- 2.) Draw an outline of the latch/deadbolt on gate post/style.
- 3.) Remove box from post. Place latch/deadbolt to post, ensuring the outline clears the edges of the latch/deadbolt.
- 4.) Using an end grinder or sawzall, cut around the outline, removing a rectangular section from the gate post/style.
- 5.) Place latch/deadbolt into hole to ensure the body fits with no bind points.
- 6.) Place GB-LINX Box and latch/deadbolt onto gate, ensuring a proper fit. Now, mark holes for the lock and spindle.
- 7.) Remove GB-LINX Box and latch/deadbolt, and drill marked holes for the lock and spindle.
- 8.) Place GB-LINX Box and latch/deadbolt onto the gate. Secure latch/deadbolt to the GB-LINX Box with screws.
- 9.) Insert spindle through latch/deadbolt and test to make sure movement is free from any binding.
- 10.) Install lock to GB-LINX Box. Mount the lock to the gate post. The mounted lock will hold the GB-LINX Box in place.

*\*Reference 2900 Series Instructions and Diagrams to properly install the lock.*

**\*SEE PICTURES BELOW FOR ADDITIONAL INSTALLATION REFERENCES\***

