

Installation Instructions

VS110-75 Series Electric Strike 5/8" - 3/4" Latchbolts



Security Products by HES
22630 N 17th Ave. Phoenix, AZ 85027
800.626.7590 www.hesinnovations.com/vista

1. Make sure electric strike is in correct mode of operation, Fail Secure or Fail Safe (see Diagram 1).
2. Prepare door jamb per appropriate template detail (see back).
3. Install mouting tabs using #10-32 screws (when applicable). Do not tighten. Install sticky shims as needed between tabs and frame until faceplate is flush with the frame.
4. Check power source to ensure there is correct voltage at the door to accommodate the electric strike (see Caution below).
5. Connect wires coming from the low voltage power source to the electric strike wires using dolphin connectors (see Diagram 2 for electrical specifications).
6. If AC power is provided, use an HES 2001-1 Bridge Rectifier when using the electric strike in continuous "silent" duty operation (see Diagram 3).
7. **NOTE:** It is important to allow enough space behind the electric strike in the jamb cutout to avoid pinching the wires during installation.
8. Install electric strike to jamb cutout using #12-24 machine screws or wood screws provided.
9. Secure #10-32 screws holding mounting tabs (when applicable).

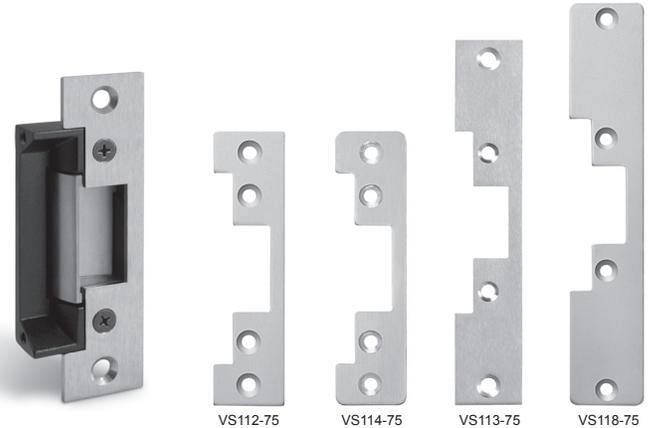


DIAGRAM 2 ELECTRICAL SPECIFICATIONS

| ELECTRICAL RATINGS FOR SOLENOID | CONTINUOUS DUTY | | INTERMITTENT DUTY* | |
|---------------------------------|-----------------|-------|--------------------|-------|
| | 12VDC | 24VDC | 12VAC | 24VAC |
| Resistance in Ohms | 49 | 128 | 49 | 128 |
| Amps | 0.243 | 0.187 | 0.243 | 0.187 |

| MINIMUM WIRE GAUGE REQUIREMENTS | SOLENOID VOLTAGE | |
|---------------------------------|------------------|----------|
| | 12 VDC | 24VDC |
| 200 feet or less | 18 gauge | 20 gauge |
| 200 - 300 feet | 16 gauge | 18 gauge |
| 300 - 400 feet | 14 gauge | 16 gauge |

Solenoids are rated at +/- 10% indicated value.
*20% max duty cycle (1 min. max on time)

DIAGRAM 1 FIELD SELECTABLE: Fail Secure and Fail Safe

1. This unit ships in Fail Secure mode. To change, follow steps 2-4.
2. Slowly remove screw from the side of the strike body. Caution: the spring is under a slight pressure and may launch from the unit.
3. Remove spring and locking pins.
4. Reinstall as per the diagram to change the mode of operation.

FAIL SECURE: When power is supplied, the unit is unlocked. If power fails, the unit is locked and the door is secured.

FAIL SAFE: When power is supplied, the unit is locked. If power fails, the unit is unlocked and the door can be exited.


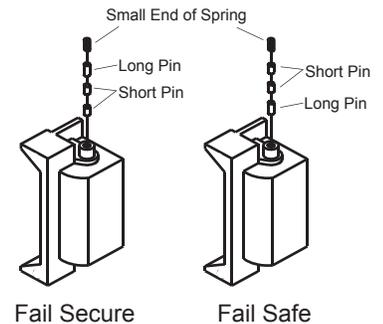


DIAGRAM 3 AC WIRING DIAGRAM

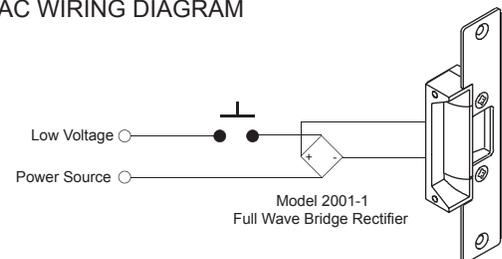


CAUTION! Before connecting any device at the installation site, verify input voltage using a multimeter. Many power supplies and low voltage transformers operate at higher levels than listed. Any input voltage exceeding 10% of the solenoid rating may cause severe damage to the unit and will void the warranty.

Strikes requiring 12VDC/VAC have RED wires; 24VDC/VAC have BLUE wires.

Call 1-800-626-7590
For Technical Assistance


VS112-75 Series Electric Strike

1-1/4" x 4-7/8" Square Corner Faceplate
ANSI Metal Jamb Installation

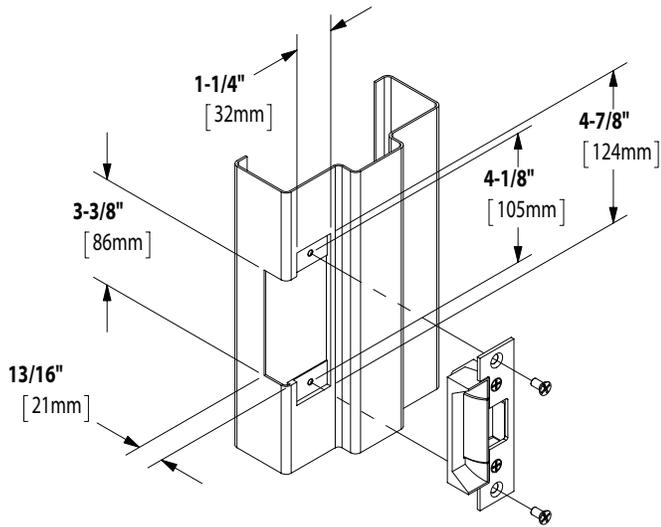


VS114-75 Series Electric Strike

1-1/4" x 4-7/8" Round Corner Faceplate
Aluminum Jamb Installation

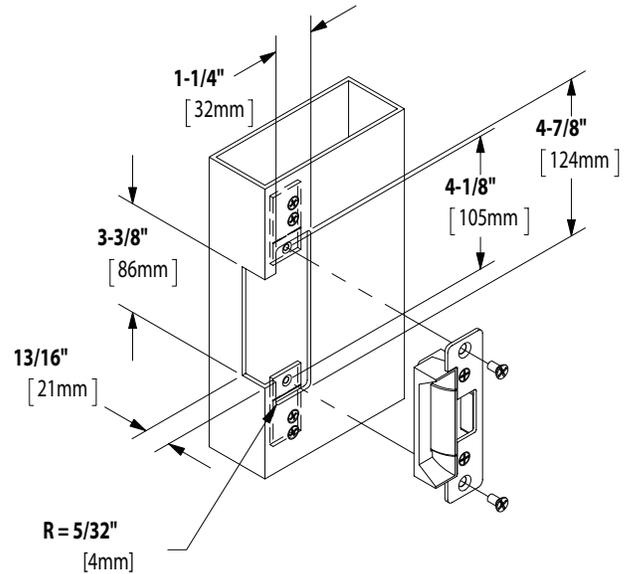


VS113-75 Series Electric Strike

1-1/4" x 6-7/8" Square Corner Faceplate
Aluminum and Wood Jamb Installation

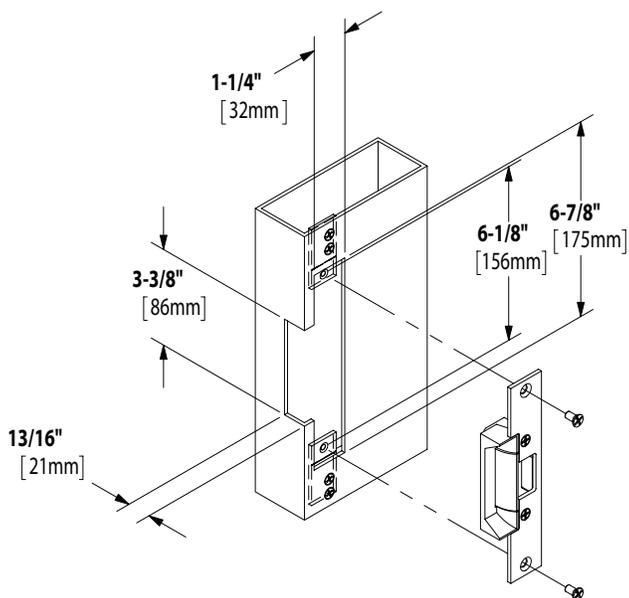

VS118-75 Series Electric Strike

1-3/8" x 7-15/16" Round Corner Faceplate
Aluminum and Wood Jamb Installation

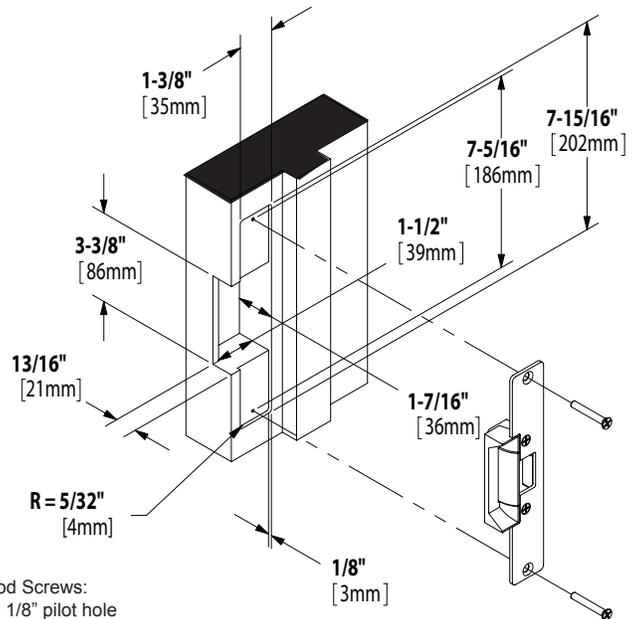

Wood Screws:
Drill 1/8" pilot hole
1" deep times 2