



921453-00

For 33A/35A Devices, 388 Cylinder Assy., TL, or DT Applications


392-6 Pull

VON DUPRIN

Installation Instructions

1. Prepare door for exit device. See exit device instructions for locations of holes, backset, and center lines.
2. Prepare door for pull:
 - A. Transfer center line from inside (exit device side) of door to outside (pull side) of door. Use extra care if edge of door is beveled. Be sure center line is parallel to edge of door.
 - B. Locate and prepare holes for pull.
3. Apply exit device and pull.


PULL ON CENTER (TL or DT Applications)

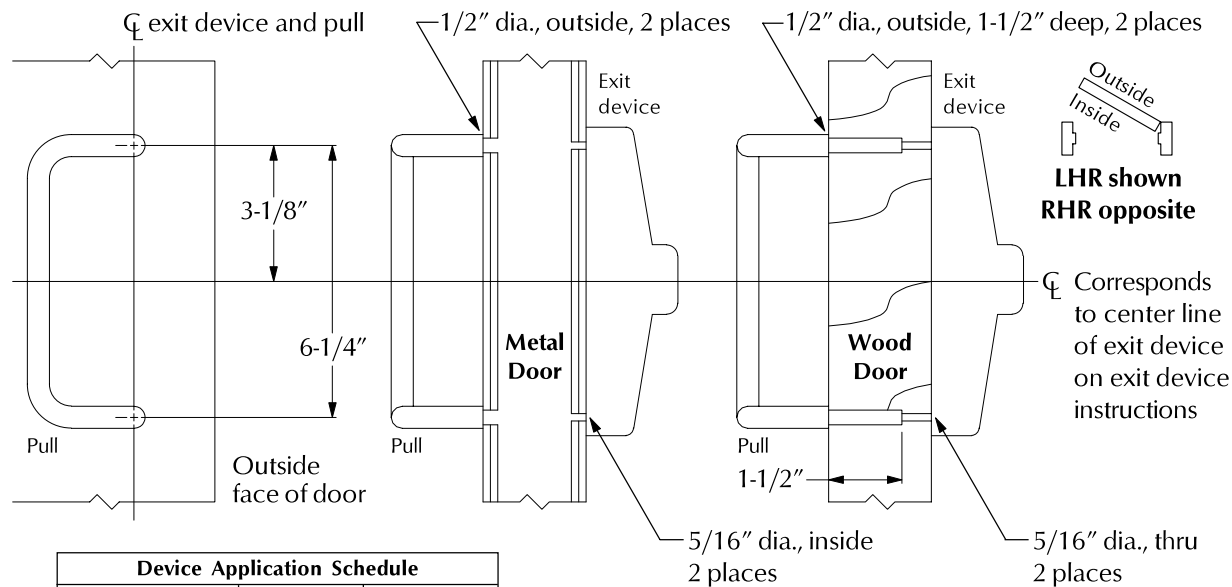

Device Application Schedule				
Vertical Rod Devices	Metal Door		Wood Door	
	TL	DT	TL	DT
3327A/3527A	●	●	●	●
3327A-F/3527A-F	●		●	
3347A/3547A	●	●	●	●
3348A/3548A	●	●		
3347A-F/3547A-F	●		●	
3348A-F/3548A-F	●			

PULL BELOW CENTER (388 Cylinder Assy, TL, or DT Applications)

Device Application Schedule			
	TL	DT	388 Cyl. Assy.
33A/35A Rim Device		●	●
3327A/3527A Vertical Rod Device	●	●	●
3327A-F/3527A-F Vertical Rod Device	●		●

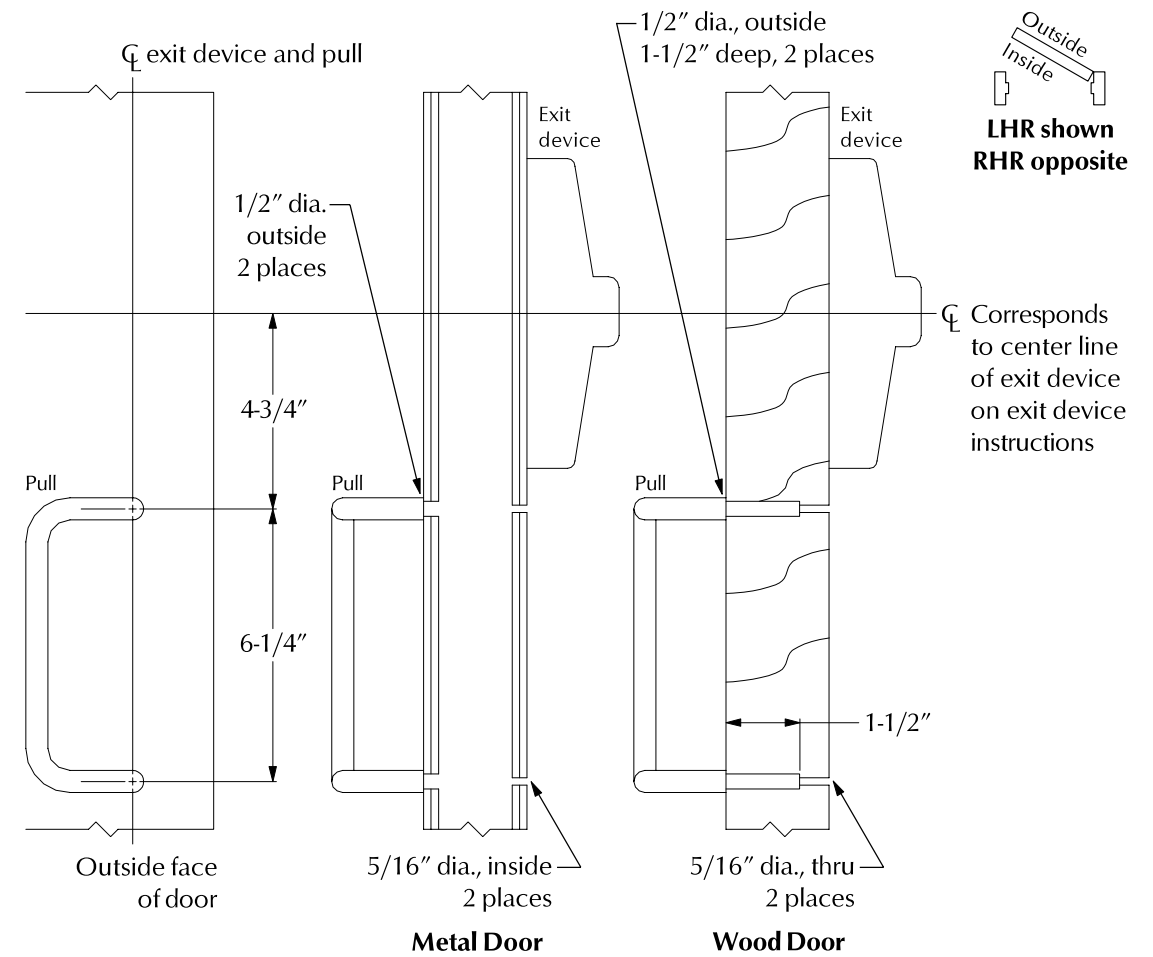

Customer Service
1-877-671-7011 www.allegion.com/us



© Allegion 2014
Printed in U.S.A.
921453-00 Rev. 01/14-b