



921026-00


Trim

550DT

VON DUPRIN®

Installation Instructions

1. Prepare door for exit device. See exit device instructions for holes, line X-X, and center lines.
2. Prepare door for trim:
 - A. Transfer line X-X from inside (exit device side) of door to outside (trim side) of door. Use extra care if edge of door is beveled. Be sure line X-X is parallel to edge of door.
 - B. Locate and prepare all holes as shown.
3. Apply exit device.
4. Apply trim:
 - A. If hole in trim pull base does not line up with mounting screw, loosen pull base sex bolt extension and revolve base to align.
 - B. Tighten thru bolts.

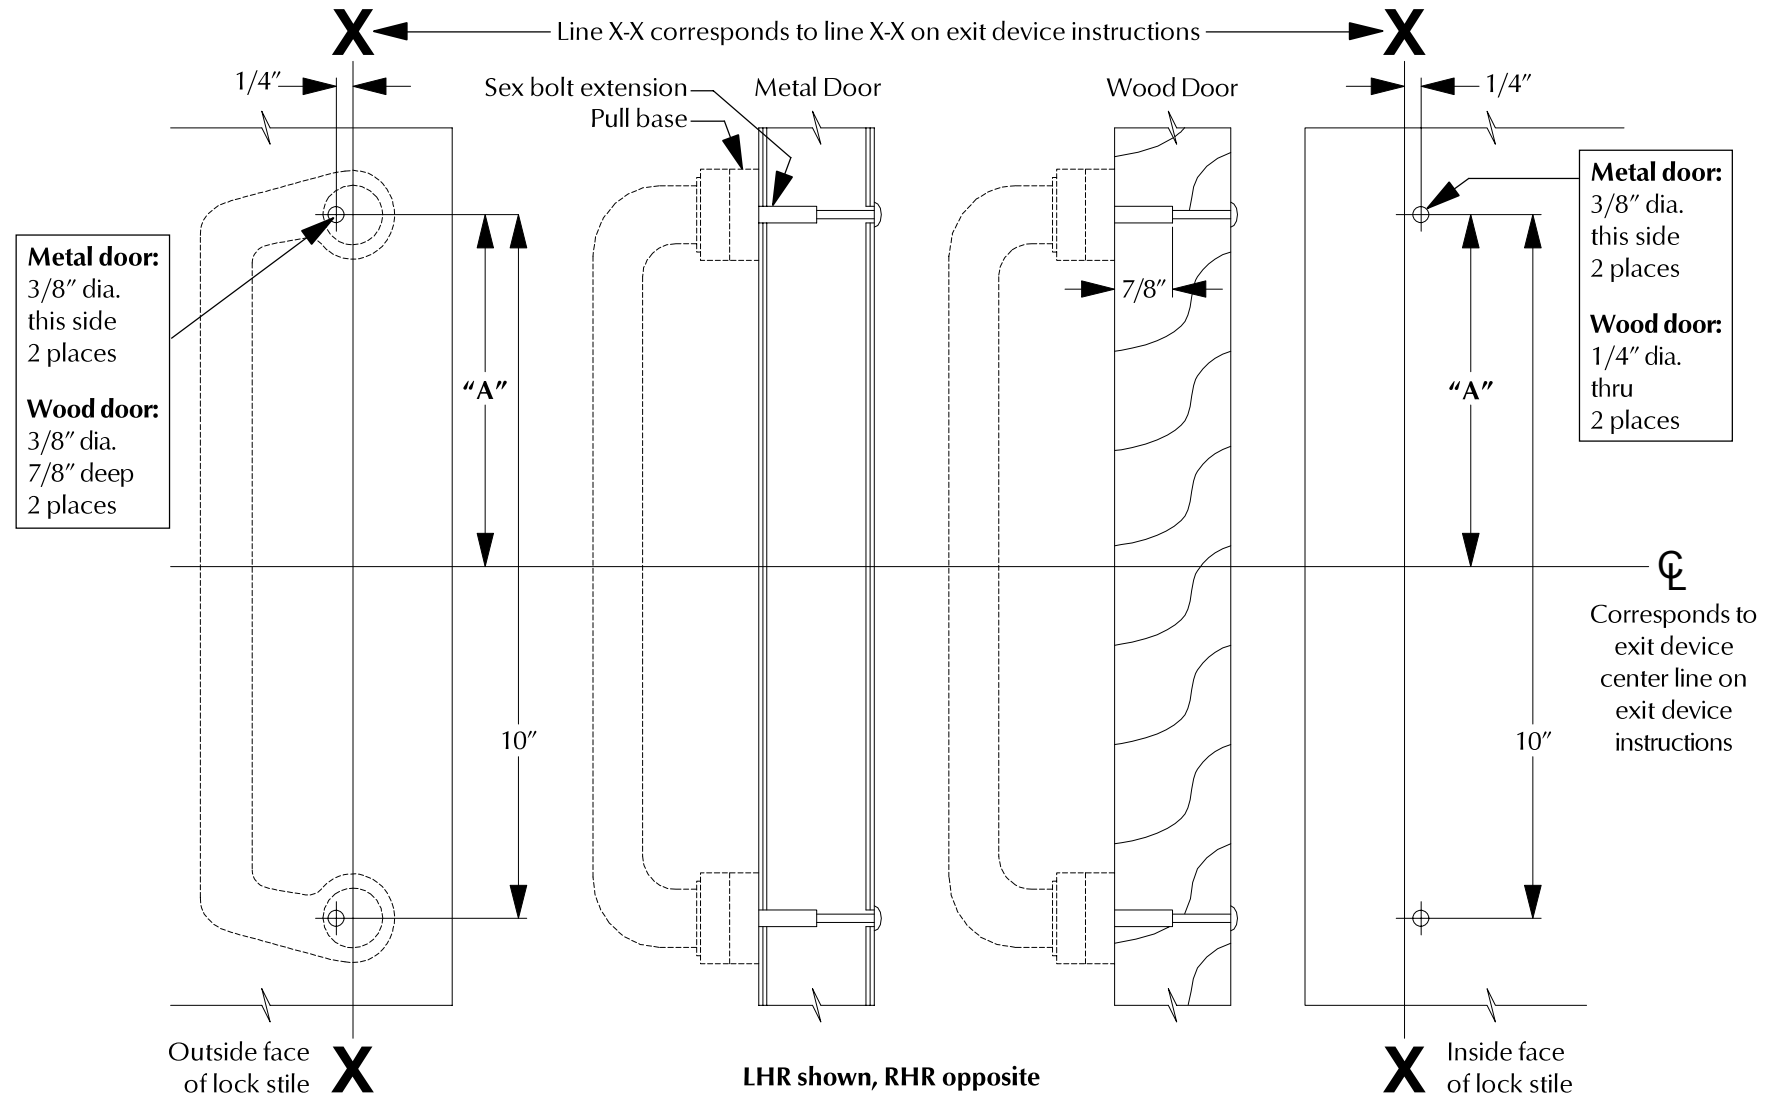

Device Application Schedule	
Device	Dim. "A"
33A/35A Rim	5-1/4"
44 Series	4-15/16"
55 Rim, 5547, 5575	
88 Rim, 8827, 8875	
5547WDC (wood door)	5-1/2"
8847WDC (wood door)	6-1/4"

For cutouts on inside face of door, see exit device instructions

Customer Service
 1-877-671-7011 www.allegion.com/us



© Allegion 2014
Printed in U.S.A.
921026-00 Rev. 01/14-b