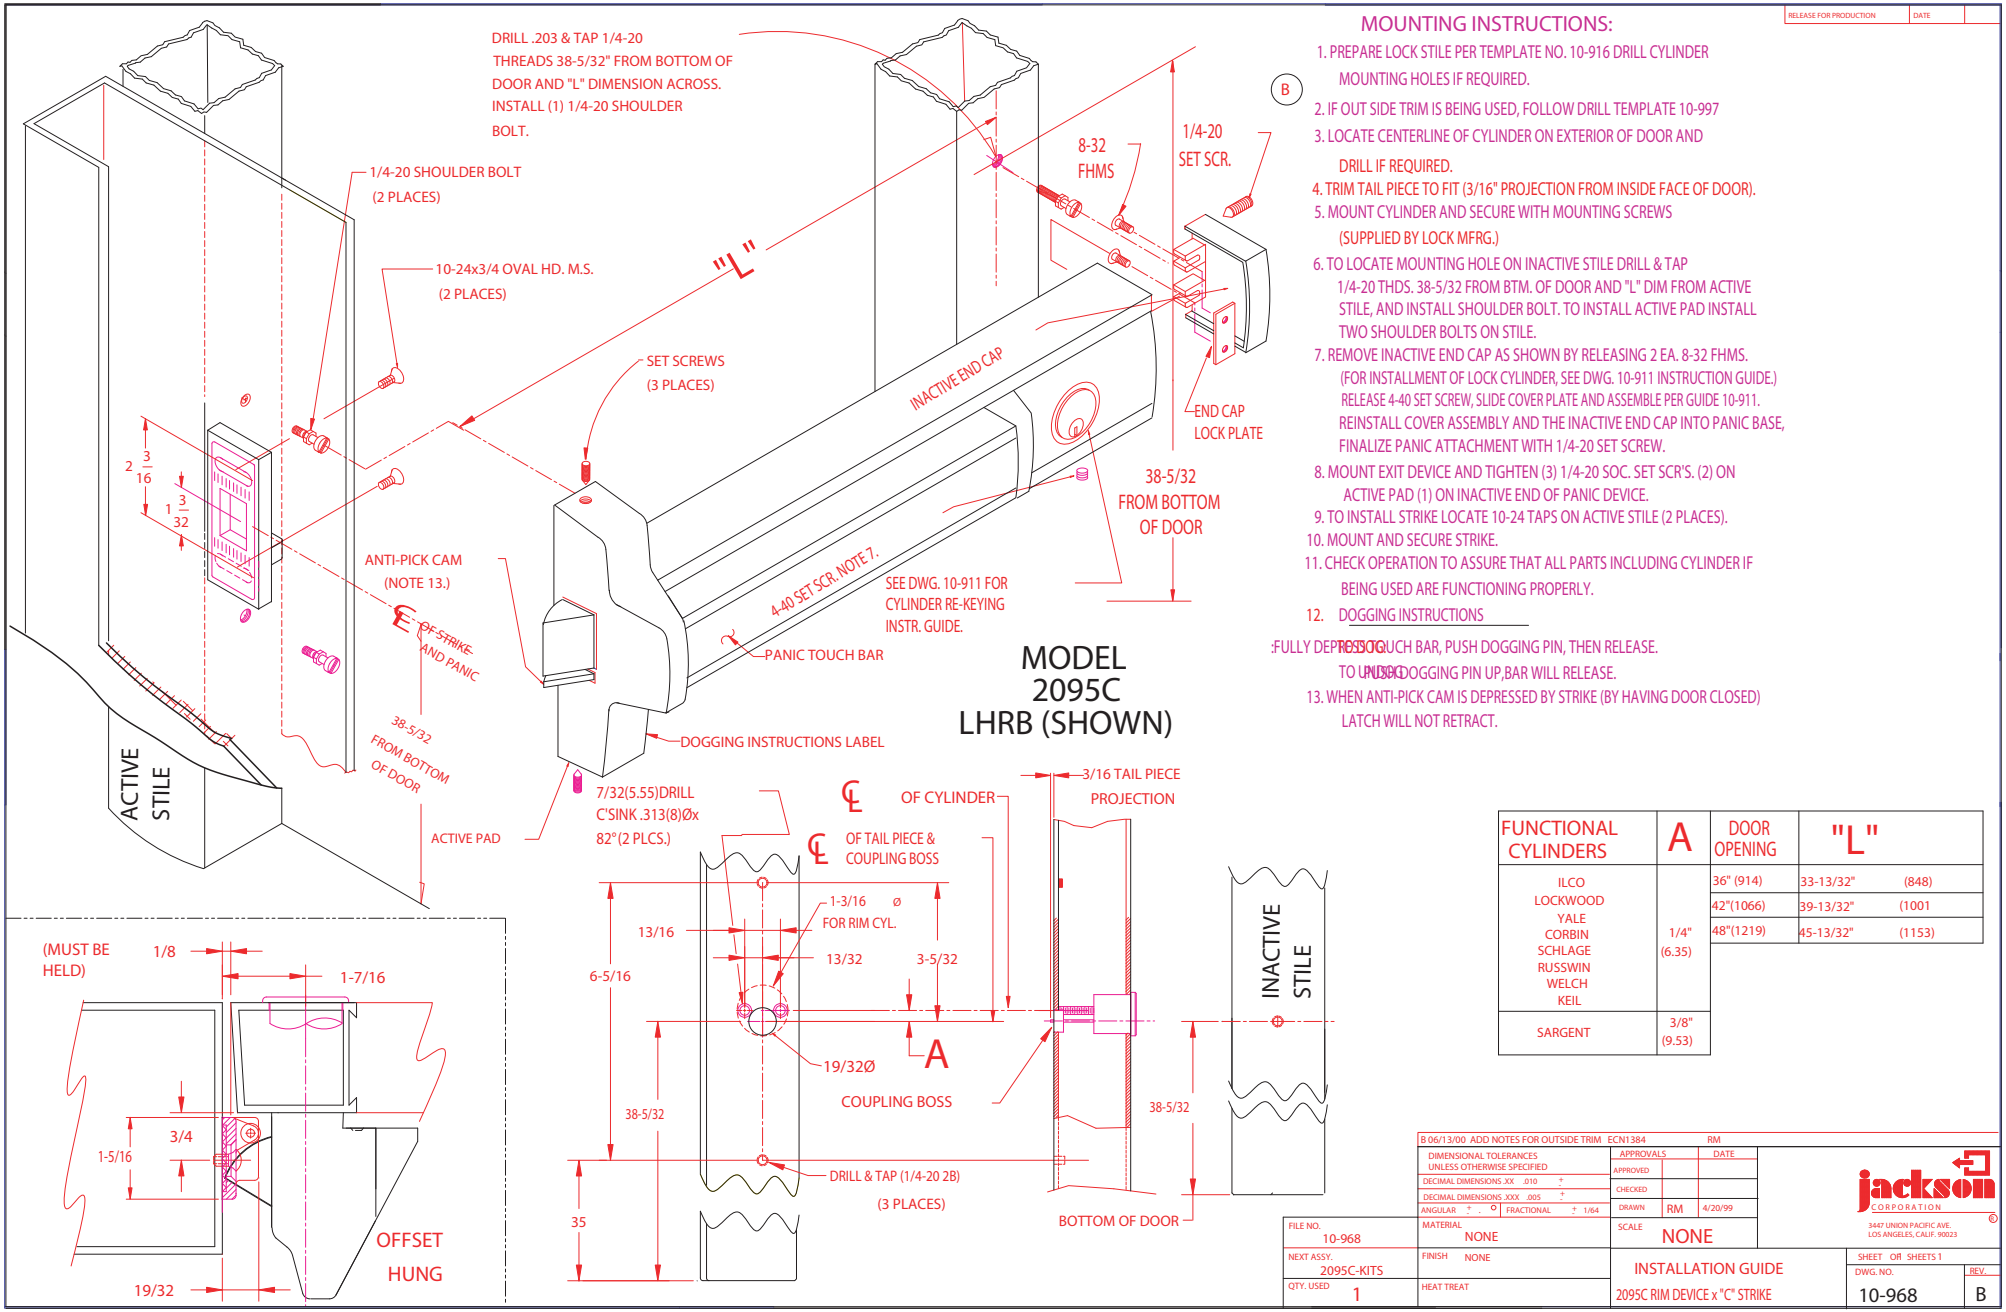

MOUNTING INSTRUCTIONS:

1. PREPARE LOCK STILE PER TEMPLATE NO. 10-916 DRILL CYLINDER MOUNTING HOLES IF REQUIRED.
2. IF OUT SIDE TRIM IS BEING USED, FOLLOW DRILL TEMPLATE 10-997
3. LOCATE CENTERLINE OF CYLINDER ON EXTERIOR OF DOOR AND DRILL IF REQUIRED.
4. TRIM TAIL PIECE TO FIT (3/16" PROJECTION FROM INSIDE FACE OF DOOR).
5. MOUNT CYLINDER AND SECURE WITH MOUNTING SCREWS (SUPPLIED BY LOCK MFRG.)
6. TO LOCATE MOUNTING HOLE ON INACTIVE STILE DRILL & TAP 1/4-20 THDS. 38-5/32 FROM BTM. OF DOOR AND "L" DIM FROM ACTIVE STILE, AND INSTALL SHOULDER BOLT. TO INSTALL ACTIVE PAD INSTALL TWO SHOULDER BOLTS ON STILE.
7. REMOVE INACTIVE END CAP AS SHOWN BY RELEASING 2 EA. 8-32 FHMS. (FOR INSTALLMENT OF LOCK CYLINDER, SEE DWG. 10-911 INSTRUCTION GUIDE.) RELEASE 4-40 SET SCREW, SLIDE COVER PLATE AND ASSEMBLE PER GUIDE 10-911. REINSTALL COVER ASSEMBLY AND THE INACTIVE END CAP INTO PANIC BASE, FINALIZE PANIC ATTACHMENT WITH 1/4-20 SET SCREW.
8. MOUNT EXIT DEVICE AND TIGHTEN (3) 1/4-20 SOC. SET SCR'S. (2) ON ACTIVE PAD (1) ON INACTIVE END OF PANIC DEVICE.
9. TO INSTALL STRIKE LOCATE 10-24 TAPS ON ACTIVE STILE (2 PLACES).
10. MOUNT AND SECURE STRIKE.
11. CHECK OPERATION TO ASSURE THAT ALL PARTS INCLUDING CYLINDER IF BEING USED ARE FUNCTIONING PROPERLY.
12. DOGGING INSTRUCTIONS

:FULLY DEPRESS TOUCH BAR, PUSH DOGGING PIN, THEN RELEASE.
TO UNDOG DOGGING PIN UP,BAR WILL RELEASE.

13. WHEN ANTI-PICK CAM IS DEPRESSED BY STRIKE (BY HAVING DOOR CLOSED) LATCH WILL NOT RETRACT.

FUNCTIONAL CYLINDERS	A	DOOR OPENING	"L"
ILCO, LOCKWOOD, YALE, CORBIN, SCHLAGE, RUSSWIN, WELCH, KEIL	1/4" (6.35)	36" (914)	33-13/32" (848)
		42"(1066)	39-13/32" (1001
		48"(1219)	45-13/32" (1153)
SARGENT	3/8" (9.53)		

RELEASE FOR PRODUCTION | DATE

B 06/13/00 ADD NOTES FOR OUTSIDE TRIM ECN1384 RM

DIMENSIONAL TOLERANCES UNLESS OTHERWISE SPECIFIED
DECIMAL DIMENSIONS .XX .010 ±
DECIMAL DIMENSIONS .XXX .005 ±
ANGULAR ± . ° FRACTIONAL ± 1/64

APPROVALS	DATE
APPROVED	
CHECKED	
DRAWN RM	4/20/99
SCALE NONE	

jackson CORPORATION
3447 UNION PACIFIC AVE.
LOS ANGELES, CALIF. 90023

FILE NO. 10-968
NEXT ASSY. 2095C-KITS
QTY. USED 1
MATERIAL NONE
FINISH NONE
HEAT TREAT

INSTALLATION GUIDE
2095C RIM DEVICE x "C" STRIKE

SHEET OF SHEETS 1
DWG. NO. 10-968
REV. B

DISTRIBUTED BY
AHS ACCESS HARDWARE SUPPLY
accesshardware.com