




Trimco®

SINCE 1949

TRIANGLE BRASS MANUFACTURING
1351 ROCKY POINT DRIVE, OCEANSIDE, CA 92056
WWW.TRIMCOHARDWARE.COM
CSR@TRIMCOHARDWARE.COM
323.262.4191


STEP 1

DRILL E-MOUNT HOLE IN DOOR. 6" CENTER TO CENTER. MAKE SURE BACK SET IS ENOUGH TO CLEAR WIDTH OF PLATE. CTC MUST BE 34" - 48" FROM FINISHED FLOOR IN ORDER TO MEET ADA COMPLIANCE. TRIMCO RECOMMENDS INSTALLING BOTTOM HOLE AT 38" ABOVE FINISHED FLOOR. HOLE SIZE IS 3/8".

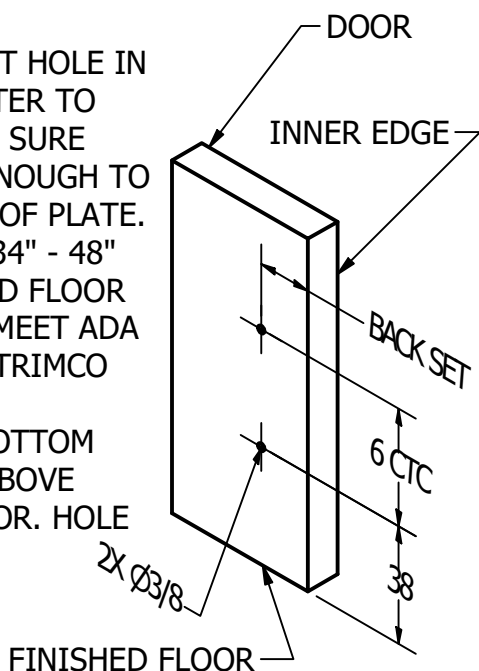

STEP 3.1


TIGHTEN E-MOUNT SCREWS INTO PULL MOUNT LOCATIONS.

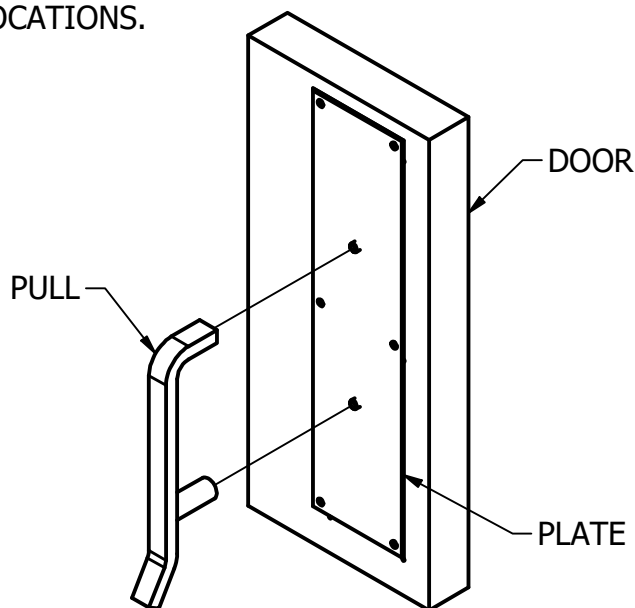

OVERVIEW


INSTALLATION GUIDE FOR 1035, ULTIMATE RESTROOM PULL PRODUCTS. THIS INCLUDES BOTH HEALTHY HARDWARE AND STANDARD PULL. DRILL AND SCREW DRIVER ARE NEEDED TO INSTALL.

PART LIST

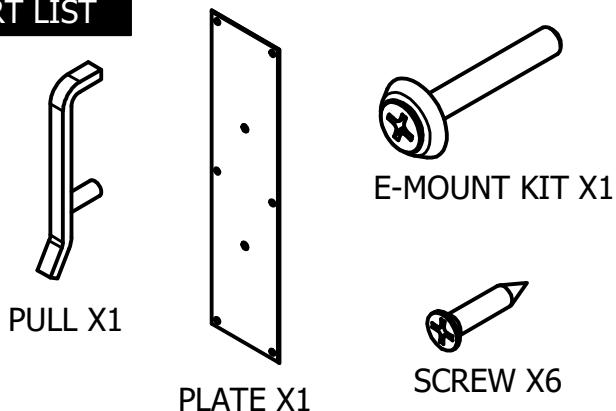

STEP 2

PUT PLATE UP TO PREPPED DOOR AND SLIDE E-MOUNT KIT MACHINE SCREWS THROUGH E-MOUNT KIT FINISH WASHER AND DOOR FROM OPPOSITE SIDE OF PLATE SO THAT PLATE RESTS ON THE TWO MACHINE SCREWS.

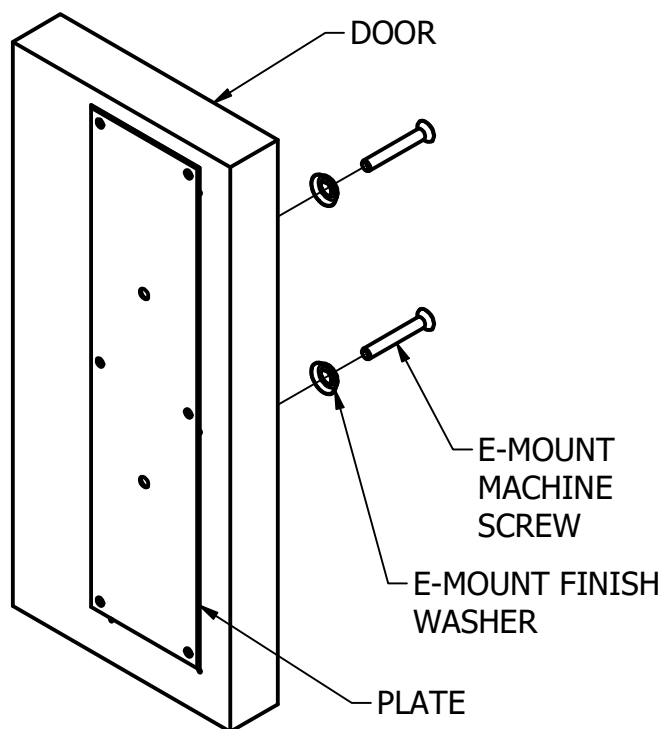

CONTINUED >>>




Trimco®

SINCE 1949

TRIANGLE BRASS MANUFACTURING
1351 ROCKY POINT DRIVE, OCEANSIDE, CA 92056
WWW.TRIMCOHARDWARE.COM
CSR@TRIMCOHARDWARE.COM
323.262.4191


STEP 4

SCREW IN THE #5 SCREWS IN THE PERIMETER HOLES ON THE PLATE.

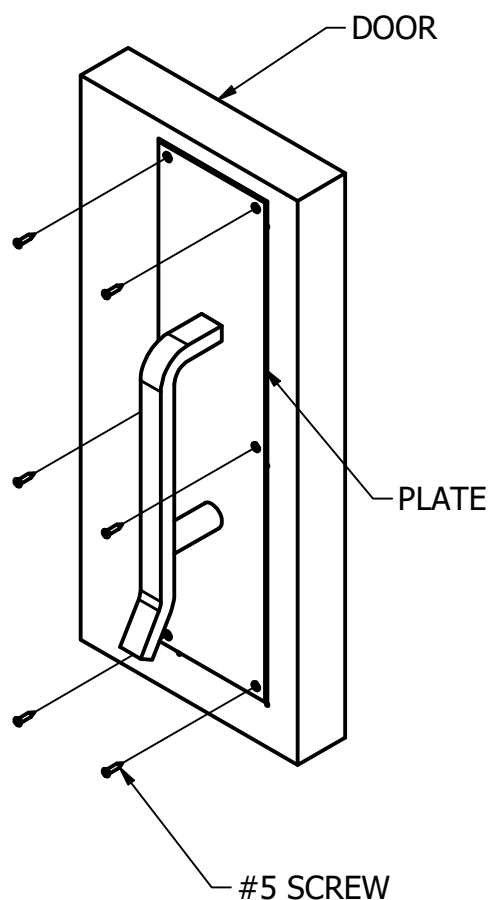


STEP 3.2

PULL CAN BE PLACED EITHER FACING UP OR DOWN.

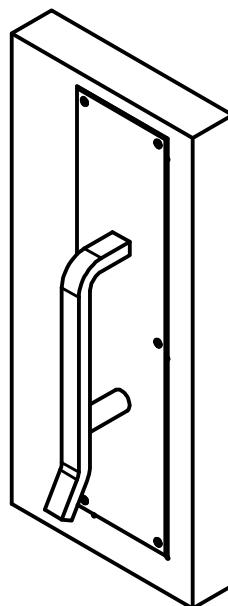

FACING
DOWN
INSTALLATION

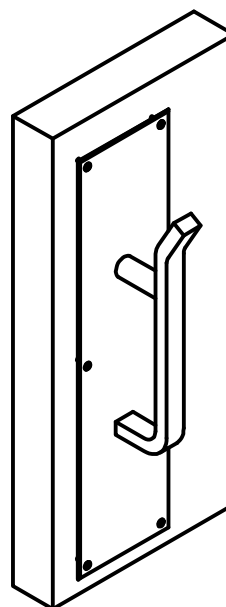

FACING
UP
INSTALLATION

DISTRIBUTED BY



ACCESS HARDWARE SUPPLY
accesshardware.com

NOTES

THIS TEMPLATE IS PROVIDED FOR USE ON THE JOB FOR WHICH IT WAS REQUESTED. TRIMCO RESERVES THE RIGHT TO MAKE DESIGN CHANGES WITHOUT NOTICE. TRIMCO WILL NOT BE RESPONSIBLE FOR ERRORS OR DAMAGE CAUSED BY USE OF OUT-OF-DATE TEMPLATES.