


HUB MUST BE ON DIAMOND FOR PROPER INSTALLATION.



4580 CAM DISC

INCLUDED WITH 4568 HANDLE REQUIRED TO OPERATE 4500 & 4700 SERIES LATCHES.

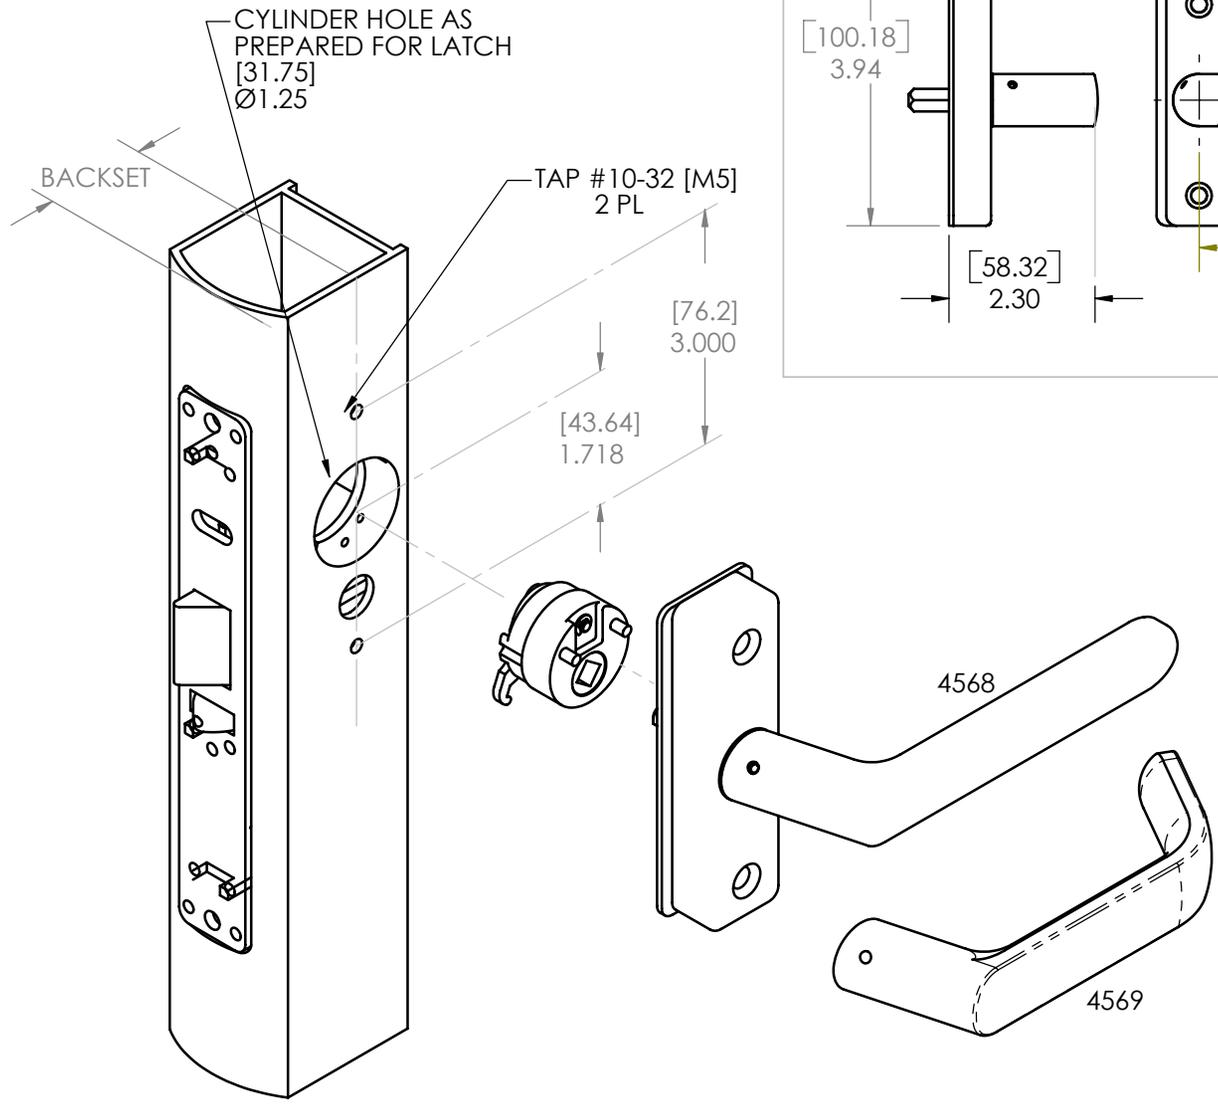

ASSEMBLY INSTRUCTIONS

1. AFTER INSTALLING LATCH IN STILE, DEPRESS BOLT AND INSERT 4580 CAM DISC THRU 1.25" [31.7mm] CYLINDER HOLE AS SHOWN. BE SURE THE HUB IN THE CAM DISC IS ON THE DIAMOND AS SHOWN ABOVE.
2. INSTALL THE HANDLE ASSEMBLY, INSERTING THE SQUARE SPINDLE INTO THE HUB OF THE CAM DISC. SECURE THE HANDLE ASSEMBLY WITH (2) #10 [M5] SCREWS.
3. TIGHTEN THE SET SCREWS FOR THE CYLINDER PLUG, AND INSTALL THE FACE PLATE.






**Adams Rite
Manufacturing Co.**

4568 & 4569 EUROSTYLE
HANDLES FOR 1 3/4"
(44mm) METAL DOORS

REV: C ECN: 9939 DATE: 9-2-99

P/N: 80-0180-99 PAGE 1 OF 2

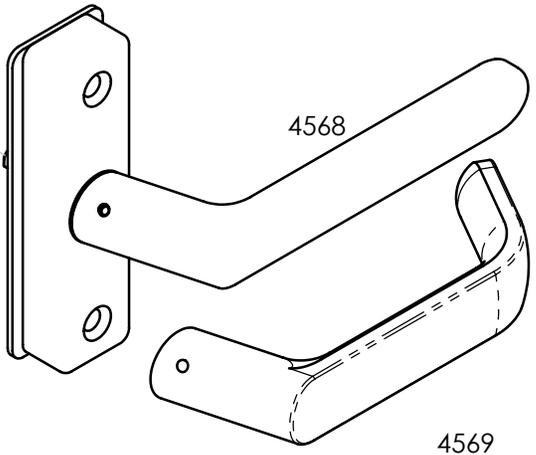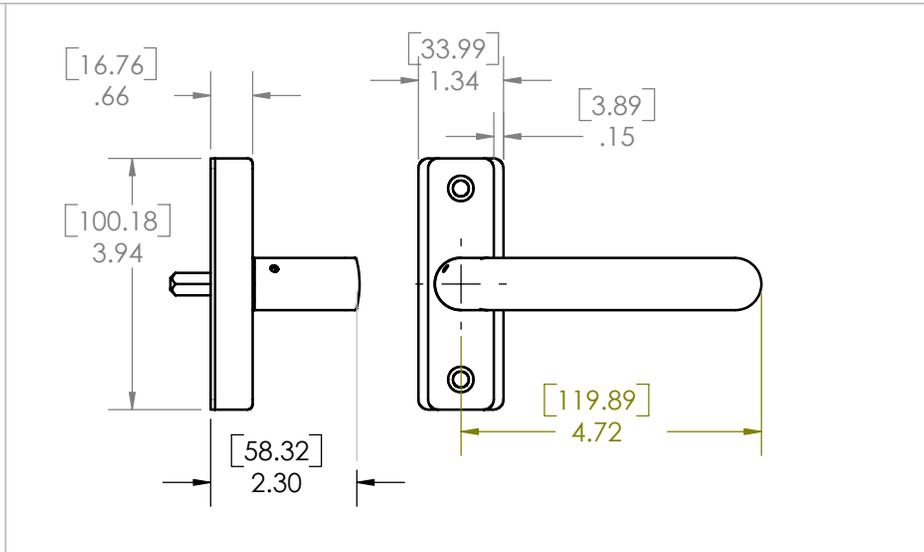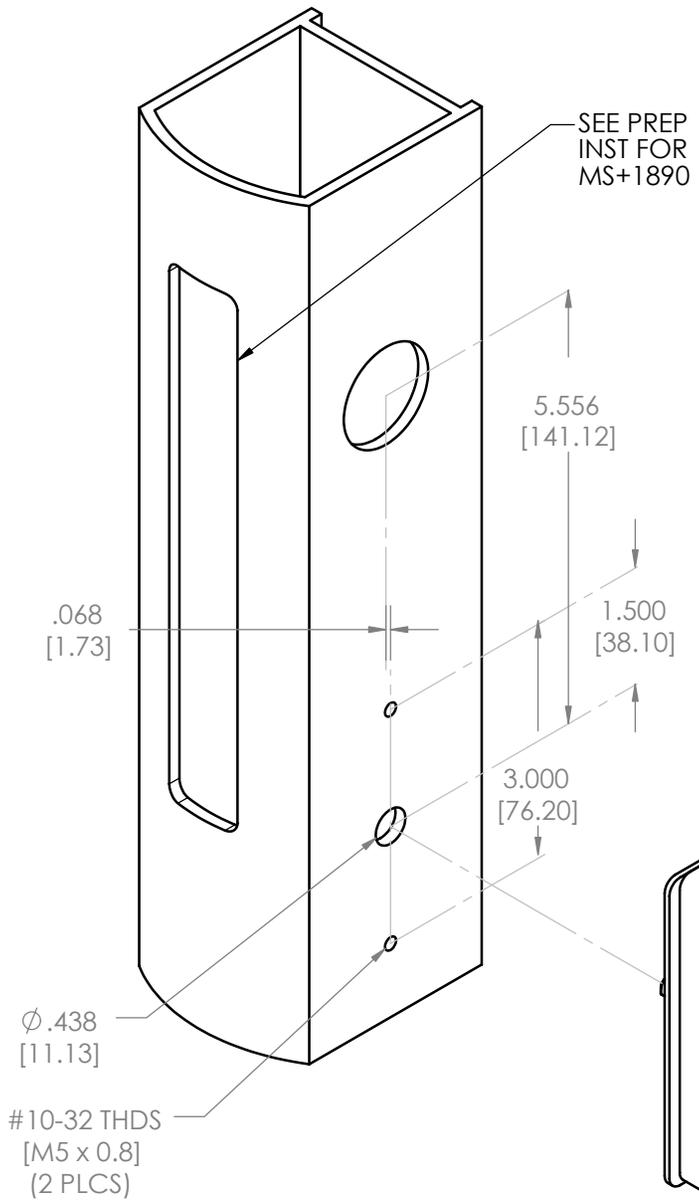

ASSEMBLY INSTRUCTIONS

1. INSTALL MS+1890 LATCH/LOCK IN STILE.
2. INSTALL THE HANDLE ASSEMBLY, INSERTING THE SQUARE SPINDLE INTO THE HUB OF THE MS+1890. SECURE THE HANDLE ASSEMBLY WITH (2) #10 [M5] SCREWS.
3. TIGHTEN THE SET SCREWS FOR THE CYLINDER, AND INSTALL THE FACE PLATE.



4568 & 4569 EUROSTYLE HANDLES FOR 1 3/4" (44mm) METAL DOORS