





Security Door Controls



Installation Video

Model SK-L90 Field Electrification Kit Schlage L9080 Mortise Lock Optional REX Kit – Model S7800REX

- Avoid long lead times for factory supplied lockset or shipping locks back and forth for electrical modification.
- Eliminate number of trips to the jobsite.
- Eliminate freight costs.
- Eliminate job delays.

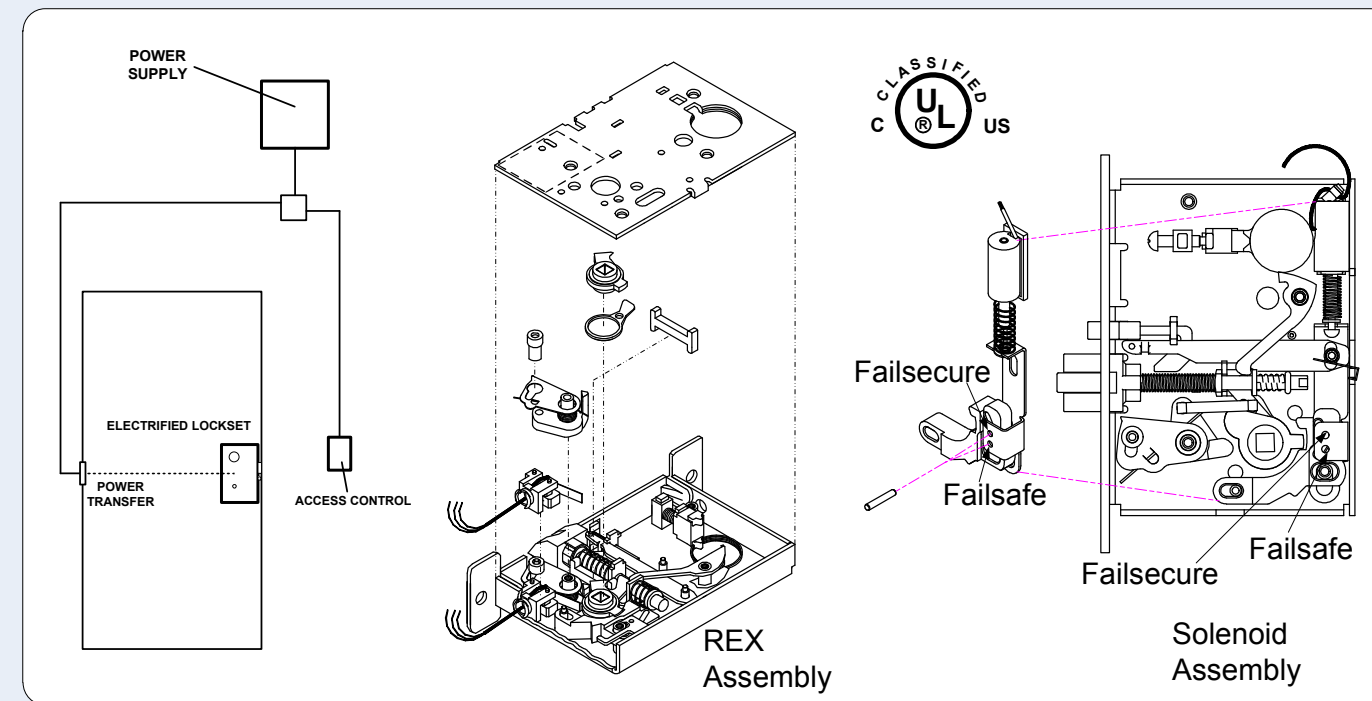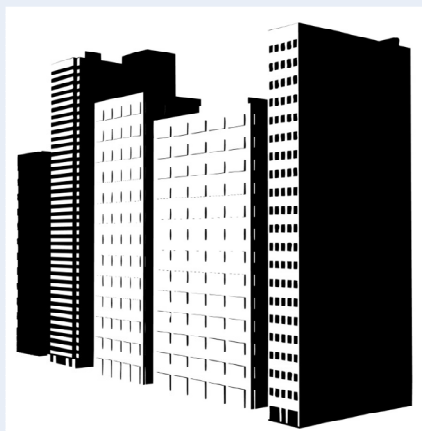

1
Place Template over Lock case where shown and drill the 2 holes with a #23 (5/32 dia.) drill.

2
Remove cover and components indicated below. De-burr the holes drilled in Step One.

3
Remove grease from inside of case where indicated. Attach Solenoid Holder to case. Use supplied screw through the back of the case, in the top hole drilled in Step One. The tab in the Holder goes in the bottom hole.

4
Remove burrs and sharp edges where indicated. Assemble and install Locking Slide Components as shown. Set the Solenoid assembly inside the Solenoid holder.

File off all burrs & sharp edges. Remove all grease