



MAGNETIC LOCK MOUNTING ACCESSORIES

Electromagnetic locks (maglocks) can be installed on various frames and doors using accessory pieces. To figure out what you need for a maglock install, first measure the door stop. Most maglocks require 2-1/4" to 2-1/2" of flat mounting space for the mounting bracket or direct mount. You may need one or more accessories if the door stop is less than 2-1/2".

Securiton's M38, M68, M32, M380 and M680 Maglocks® fit in 2-1/4" of flat mounting space. Securiton's M62, DM62 and M82 Maglocks fit in 2-1/2" of flat mounting space.

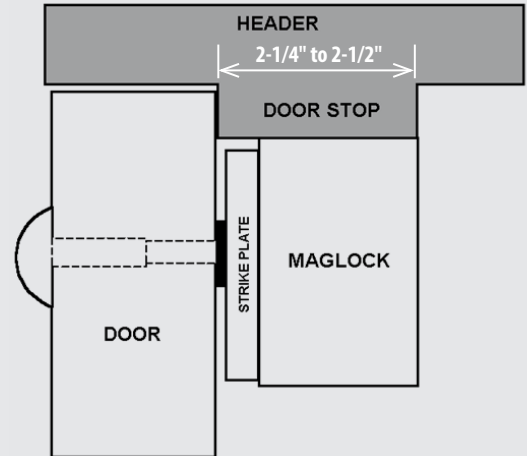


What maglock accessories does your door need?

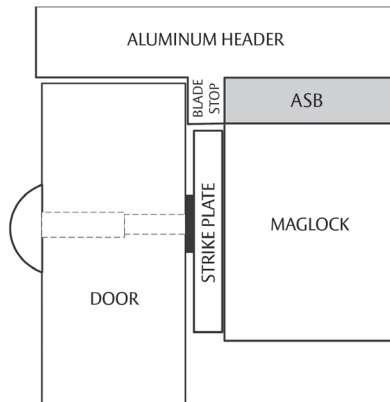


ALUMINUM SHIM BRACKETS (ASB)

- For aluminum doors
- Used when the blade stop requires the maglock to be lowered
- Available for M32, M62 and M82 only

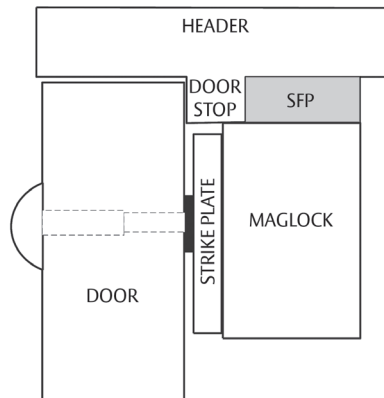

STOP FILLER PLATES (SFP)

- For steel and wood frames
- Fills or extends a door stop
- Available in 1/4", 3/8", 1/2" and 5/8" thicknesses

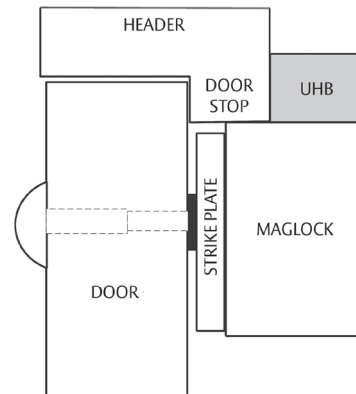


UNIVERSAL HEADER BRACKET (UHB)


- Extends the header 1" to 1-1/2" to create enough header to mount the magnet
- Provides concealed wiring chamber



MAGNETIC LOCK MOUNTING ACCESSORIES

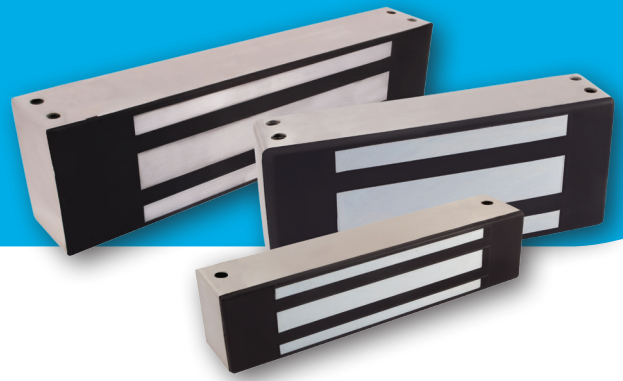


What maglock accessories does your door need? *(continued)*

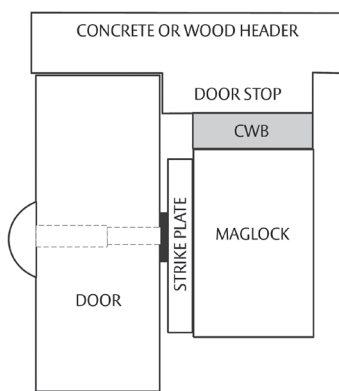


CONCRETE/ WOOD BRACKET (CWB)

- For concrete filled metal frames and wood frames
- Easier to install than blind nuts
- Heavy duty wood and metal fasteners included
- Available for M32, M62 and M82 only

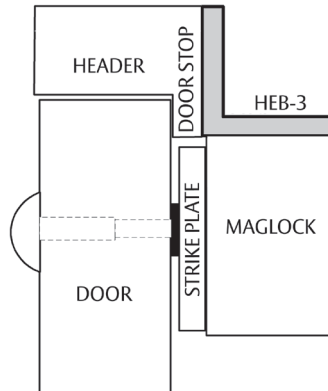


HEADER EXTENSION BRACKET (HEB)

- 90 degree angle brackets
- Extends narrow headers to permit maglock mounting

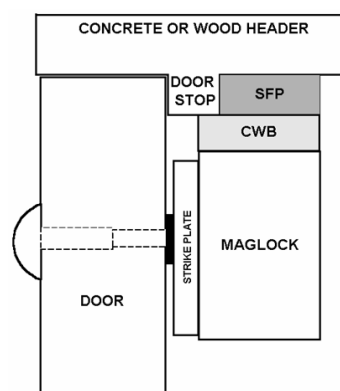


Sample Stop Filler Plate (SFP) and Concrete/Wood Bracket (CWB) combination

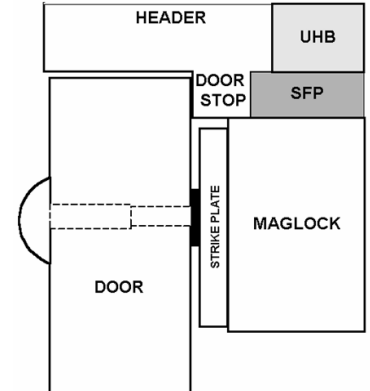

Sample Stop Filler Plate (SFP) and Universal Header Bracket (UHB) combination


Accessories are available in clear aluminum or black anodized finish. Verify length of magnetic lock before ordering mounting accessories.

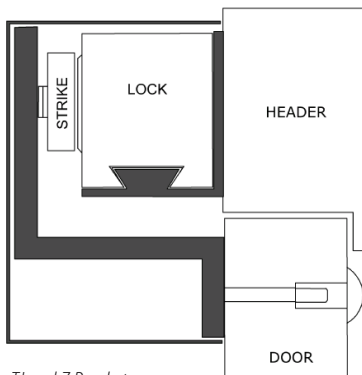

TJ and Z Brackets

Z BRACKETS AND TOP JAMB (TJ) BRACKETS

- Use on in-swing doors
- Use Z bracket with face mount maglocks
- Use Top Jamb bracket with bracket mounted maglocks
- Dress covers in clear anodized, black anodized or satin stainless

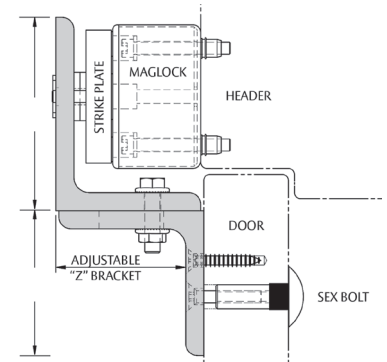

SECURITRON
ASSA ABLOY

SMC-051-0414