


3700 SERIES COORDINATOR

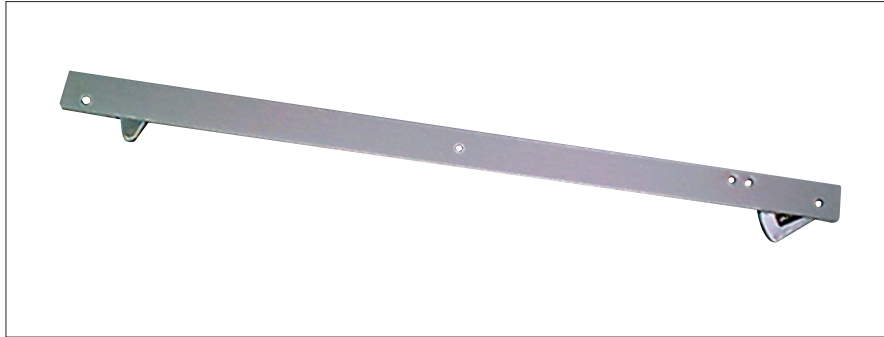

**WHEN ORDERING,
please list:**

Door frame opening

Type of stop mounted hardware

Need for carry bar

Finish, if required

STANDARD FEATURES

- For use on pair of doors when one door must close before the other
- Active door lever holds active door open until inactive door closes enough to trip release mechanism. Then active door closes.
- Safety override allows active door to close first when extreme force applied
- Filler bar available when coordinator does not fill entire length of stop
- Mounting brackets available when stop mounted hardware used
- Aluminum, ready for paint, plated finishes available

FOR PAIR OF DOORS - BOTH DOORS SAME SIZE			
DOOR FRAME OPENING	MODEL#	INCLUDES COORDINATOR	INCLUDES FILLER BAR
52" OR LESS	3711	3710(32")	3701 (20")
52-1/16" to 56"	3712	3710 (32")	3702 (32")
56-1/16" to 72"	3721	3720 (52")	3701 (20")
72-1/16" to 84"	3722	3720 (52")	3702 (32")
84-1/16" to 96"	3723	3720 (52")	3703 (44")
96-1/16" to 104"	3733	3730 (60")	3703 (44")
Over 104"	Contact factory		

FOR PAIR OF UNEQUAL DOORS 36" ACTIVE DR / 12"-24" INACTIVE DOOR			
	MODEL#	INCLUDES COORDINATOR	INCLUDES FILLER BAR
	3741	3740 (42")	3701 (20")

For other doors of unequal size contact factory

SPECIFICATIONS:



All pairs of doors to have coordinators to prevent active door closing before inactive door by means of lever with nylon roller and trigger mechanism. Coordinator to have over ride to allow active door to close before inactive door if extreme pressure applied. Coordinators to be UL listed for use on fire doors. As manufactured by ABH

www.abhmfg.com
E-mail: abhinfo@abhmfg.com
Architectural Builders Hardware Mfg., Inc.
 1222 Ardmore Ave., Itasca, IL 60143
630.875.9900; FAX 800.9FAXABH (932.9224)

© 2005 ABH Mfg., Inc.
Printed in USA 02/05


ABH®

3700 SERIES DOOR COORDINATOR

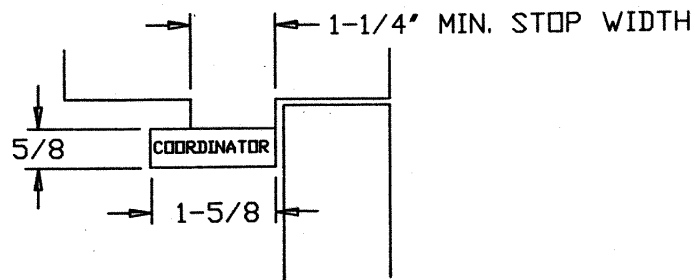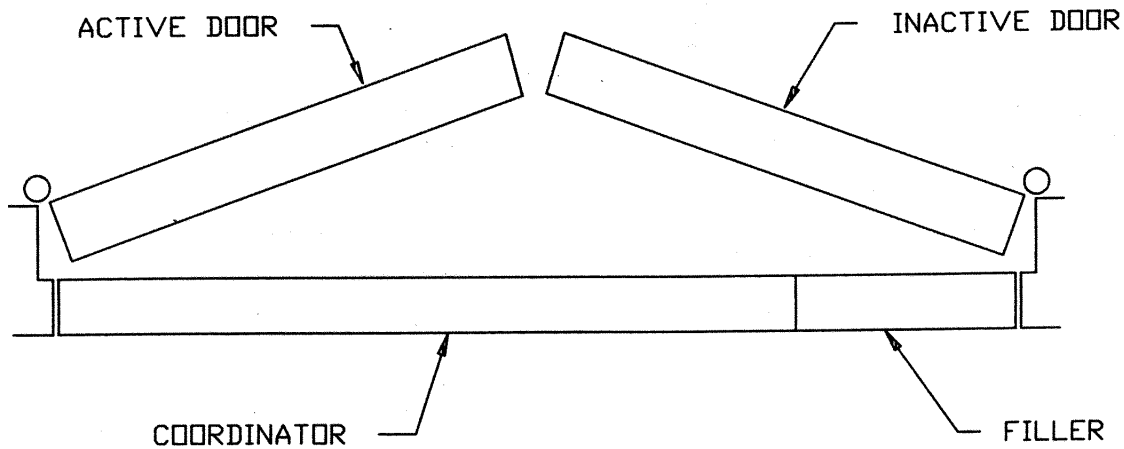

3751/3752 Mounting Brackets

- For stop mounted hardware
- Ready to paint aluminum, plated finishes available
- 3751 for Stop widths up to 2-1/2"
- 3752 for Stop widths over 2-1/2"

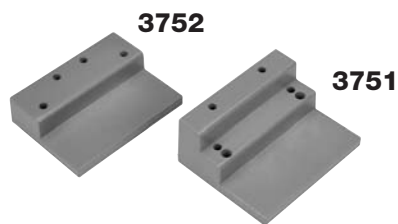

3760 Carry Bar



- For pair of doors, where inactive door can be opened before active door
- Mounted on inactive door
- USP standard, plated finishes available

www.abhmfg.com

E-mail: abhinfo@abhmfg.com

Architectural Builders Hardware Mfg., Inc.

1222 Ardmore Ave., Itasca, IL 60143

630.875.9900; FAX 800.9FAXABH (932.9224)

© 2005 ABH Mfg., Inc.
Printed in USA 02/05

ABH[®]

3780

UNIVERSAL COORDINATOR



Patent No. 6250014

3780 Universal Coordinator is for pairs of doors up to 8' wide. The long arm holds the active door open until the short arm is depressed by the inactive door. When the doors are closed, the arms are hidden by the stop-mounted aluminum case.

- **One size for all pairs of doors up to 8' wide.**
- **New design has adjustable arm to accommodate 24" active door.**
- **Non-handed.**
- **Stop mounted.**
- **Matte black finish.**
- **Meets ANSI 156.3, Type 21 requirements (when used with carry bar).**
- **Mounting brackets not required when using stop mounted hardware.**
- **UL listing pending.**

Not for use with exposed vertical rod panic devices.

www.abhmfg.com

E-mail: abhinfo@abhmfg.com

Architectural Builders Hardware Mfg., Inc.

1222 Ardmore Ave., Itasca, IL 60143

630.875.9900; FAX 800.9FAXABH (932.9224)

© 2005 ABH Mfg., Inc.
Printed in USA 02/05

ABH[®]