




P516-097



# PIB300 and PIB301 User Guide

Installation and operation instructions for Panel Interface Board

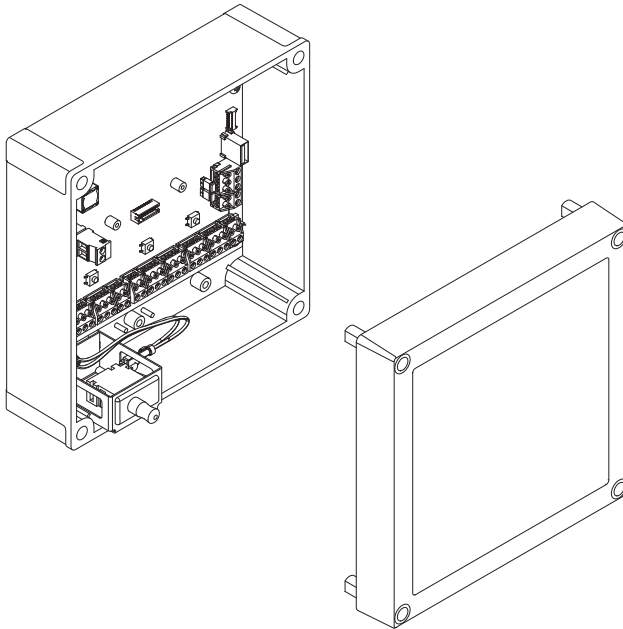

# Contents

Overview .....	3
Getting started .....	3
Handheld device (HHD) .....	4
PIB300/PIB301 installation .....	4
Location .....	4
Wiring to the lock .....	4
Connect the PIB300/PIB301 to the access control panel (ACP) .....	4
Cable/wire specifications .....	5
Typical wiring to the access control panel .....	5
PIB300/PIB301 to ACP connection .....	6
Complete the installation .....	8
Access point ACP connections to a RS-485 device address .....	8
Reset to factory defaults .....	8
FCC statements .....	8


This product is compliant of UL 294 and ULC S319 standard. This product's compliance would be invalidated through the use of any add-on, expansion, memory or other module that has not yet been evaluated for compatibility for use with this UL Listed product, in accordance with the requirements of the Standards UL 294 and ULC S319. This product has been evaluated for ULC-S319 Class I.

## Overview

The Schlage Panel Interface Board (PIB300 or PIB301) provides a means of connecting RS-485 based access point devices to a system requiring wiegand or clock and data protocol (rather than direct RS-485 connection). This manual describes the installation and operation of the PIB300/PIB301.

- Open architecture platform
- The Schlage PIB301 provides a means of connecting the FIPS-201 certified AD-301 to an access control system via Wiegand protocol
- Provides two-way communication with locks via a RS-485 connection
- The PIB300 may connect up to two Schlage AD-300 locks or up to two RS-485 based legacy locks communicating with the RSI or VIP protocol, may connect to an Access Control Panel (ACP) or reader interface board
- The PIB301 may connect up to two Schlage AD-301 locks to an ACP or reader interface board via wiegand protocol
- Legacy and AD-300 locks may not both be present on the PIB300's RS-485 connection
- The trouble signal output will change state when the Anti-Tamper Switch (ATS) signals that the PIB300/PIB301 enclosure lid is open, or if an access point device indicates trouble status.

Before installing a Schlage AD-Series system, read all documentation for all products in the installation.

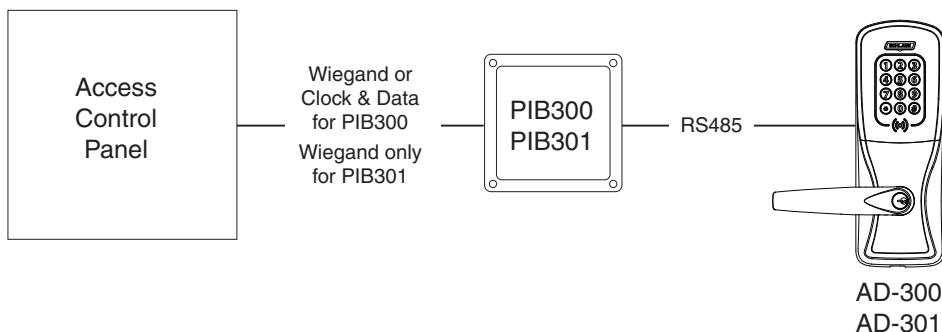

## Getting started

The following is an overview of the steps required for setting up the PIB300/PIB301.

- Install the lock. See the installation guide that came with the lock, or visit [www.schlage.com/support](http://www.schlage.com/support) for more information.
- Use proper wiring to the PIB300/PIB301. See *Cable/wire specifications* on page 5 for more information.
- Disconnect power to the lock and Access Control Panel (ACP) while connecting the PIB300/PIB301.
- Familiarize yourself with the information in this user guide.

Save this user guide for future reference.

### Customer Service

1-877-671-7011 [www.allegion.com/us](http://www.allegion.com/us)

## Handheld device (HHD)

### The Handheld Device (HHD) is used for programming and setup only.

The HHD is used to configure this device's links and outputs. For information about the HHD, see the SUS user guide.


## PIB300/PIB301 installation

### Location

- The PIB300/PIB301 should be located close to the access control panel (wiring distance may be up to 500 feet (152 meters)).

### Wiring to the lock

- Power wire for locks must be appropriately sized for the distance and voltage.
- Communication wire should be suitable for use on RS-485 type networks.
- The maximum length of the RS-485 wiring from the PIB300/PIB301 to lock 2 is 4000 feet (1219 meters).
- Wiring of locks requires one connector via the RS-485 connector (J5).
- Connections from lock to lock should be daisy-chained (see diagram below).
- The power supply is located at or near the PIB300/PIB301 for short wire runs, or local to locks if located far from the panel.

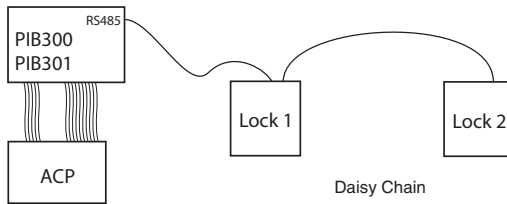

### Connect the PIB300/PIB301 to the access control panel (ACP)

**CAUTION:** Disconnect the ACP power and batteries while wiring the PIB300/PIB301 to the panel.


**WARNING:** Because every access control panel is different, always check the panel's instruction manual for appropriate interface wiring.

- For compliance with UL 294, product must be used with a UL 294 Listed access control panel or unit. For compliance with ULCS319, product must be used with a ULCS319 Listed access control panel or unit.
- Must be connected to external power using a UL294 listed power supply for UL installations, and a power supply that complies with CAN/ULC-S318 or CAN/ULC-S319 for cUL installations. The power supply must be capable of sourcing 250mA @ 12 or 24 VDC (example: Schlage PS902, PS904, PS906). Refer to *Typical wiring to the access control panel* on page 5 for how to connect DC power to the PIB300/PIB301.
- Use shielded cables for the signal wiring between the PIB300/PIB301 and the ACP. For maximum wire lengths and cable specifications, see *Cable/wire specifications* on page 5 for more information..

## Cable/wire specifications

Application	Part number	AWG	Description	Max run length
DC power input	Belden 8760 or equivalent	18	2 conductor	1000 feet (305 meters)
RS-485	Belden 9841, 9842 or equivalent	24	2 or 4 conductor shielded	4000 feet (1219 meters)
PIB300/PIB301 to ACP	Alpha 1298C or equivalent	22	8 conductor shielded	500 feet (152 meters)

## Typical wiring to the access control panel

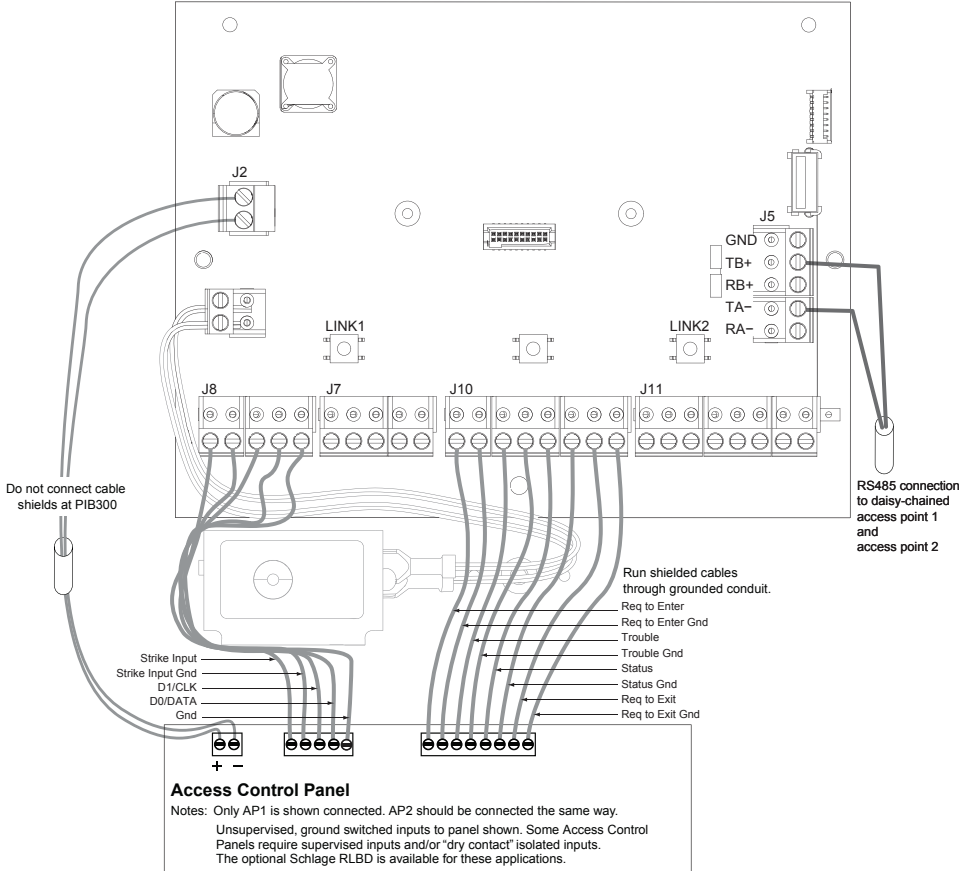

## PIB300/PIB301 to ACP connection

### ACCESS CONTROL PANEL CONNECTION

Connector		PIB300/301 signal	Access panel signal	Description/Explanation
J2		12V+	12 or 24 VDC	<p>PIB300/PIB301 inputs for 12 or 24 VDC power.</p> <p>If the access control panel (ACP) reader power outputs do not source enough current for the PIB300/PIB301, use the ACP main regulated 12 VDC power supply or a separate UL294 or ULCS318/ULCS319 listed 12 or 24 VDC power supply.</p> <p>Power input is non polarized.</p>
J10 for Access Point A  J11 for Access Point B	J10/J11 (1)	REQ TO ENTER	Request to enter input signal	<p>PIB300/PIB301 output indicating when the access point exterior door handle is making a request to enter.</p>
	J10/J11 (2)		Request to enter common contact (GND)	<p>Connect to the ACP request to enter input.</p> <p>Connect only if the access point needs to have request to enter function.</p> <p>Output is pulled-up to 5 VDC and can sink 50mA.</p>
	J10/J11 (3)	TROUBLE	General purpose alarm input signal	<p>PIB300/PIB301 output indicating trouble is reported by the Access Point.</p> <p>Logic polarity is configurable.</p>
	J10/J11 (4)		General purpose alarm common contact (GND)	<p>Output is Pulled-up to 5 VDC and can sink 50mA.</p>
	J10/J11 (5)	DOOR 1/2 STATUS	Door status input signal	<p>PIB300/PIB301 output indicates the position of the access point portal, open/ closed.</p>
	J10/J11 (6)		Door status input common contact (GND)	<p>Connect only if the access control panel needs to know the access point portal state.</p> <p>Logic polarity is configurable.</p> <p>Output is pulled-up to 3.6 VDC and can sink 50mA.</p>

## ACCESS CONTROL PANEL CONNECTION

Connector		PIB300/301 signal	Access panel signal	Description/Explanation
J10 for Access Point A J11 for Access Point B	J10/J11 (7)	REQ TO EXIT	Request to exit input	PIB300/PIB301 output indicating when the access point interior door handle is making a request to exit.
	J10/J11 (8)		Request to exit common contact (GND)	Connect to the access control panel request to exit input. Connect only if the access point needs to have request to exit function. Output is pulled-up to 5 VDC and can sink 50mA.
	J11 (9)	+5V	5 VDC	RESERVED 5 VDC power supply pin for the RLBD, dry contact relay board.
J8 for Access Point A J7 for Access Point B	J8/J7 (1)	STRIKE INPUT	Normally open strike relay contact	Strike input monitors the access panel strike relay. Connect the strike signal to the normally open or normally closed terminal of the strike relay. The active signal state of the PIB300/PIB301 is programmable with the HDD.
	J8/J7 (2)		Common strike relay contact	Connect the ground signal to the common terminal of the strike relay. Connect only if the access point needs to be unlocked (door) or raised (gate).
	J8/J7 (3)	D1/CLK	Clock or data 1 output	PIB300/PIB301 outputs used to present card data to the ACP.
	J8/J7 (4)	DATA	Data or data 0 input	For an access point with a magnetic reader, will present clock and data signals to the access control panel. For an access point with a wiegand or proximity reader, will present Data1 and Data0 signals to the ACP. If initial hookup fails to operate, switch wires at these terminals. Output is pulled-up to 3.6 VDC and can sink 50mA.
J8/J7 (5)	GND	Signal ground	Common signal ground for the EXIT REQ, DOOR STAT, TROUBLE, DATA/ D0 and CLK/D1 signals.	

## Complete the installation

After all required connections have been made, connect the power and ACP standby batteries to the panel.

### Access point ACP connections to a RS-485 device address

The PIB300/PIB301 access point to ACP connections are each associated with a RS-485 device address. This association is set using the Schlage utility software (SUS). Please see the SUS user manual for further information.

The PIB300/PIB301 defaults to access point 1 connections associated with RS-485 device address 0x00 and access point 2 connections associated with RS-485 device address 0x01.

## Reset to factory defaults

All configuration information will be deleted and the PIB300/PIB301 will be reset to factory defaults!

1. Remove the main cover.
2. Press and hold both link buttons for over 3 seconds.
3. Release both link buttons. The PIB300/PIB301 will blink the red lights beside each link button while configuration reset takes place.
4. The two green lights beside the link buttons will blink 3 times when the reset is complete.
5. Replace the main cover.

## FCC statements

### Allegion agency statements

#### Compliance statement (Part 15.19)

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

#### Warning (Part 15.21)

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

#### FCC interference statement (Part 15.105 (b))

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

#### RF exposure statement

To comply with FCC/IC RF exposure requirements for mobile transmitting devices, this transmitter should only be used or installed at locations where there is at least 20 cm separation distance between the antenna and all persons.

#### Section 7.1.5 of RSS-GEN

Operation is subject to the following two conditions:


1. This device may not cause interference, and
2. This device must accept any interference, including interference that may cause undesired operation of the device.





11.000"

5.500"

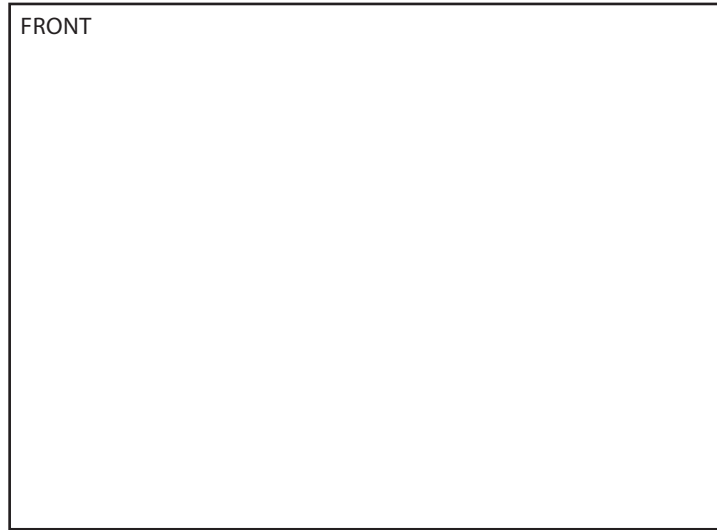

8.500"



8.500"

BEGINNING SHEET

FOLDED SHEET

Additional Notes:
1. Booklet format, center stitched

Revision History						Revision Description:					
A	B	C	D	E	F	F > SH2 Artwork revision					
010968	013037	014686	028472	30052	48533						
Material						Edited By		Approved By		EC Number	Release Date
White Paper						P. Bockelman		M. Roberts		48533	03-28-14
Notes						Title					
1. printed two sides						User Guide, AD-Series PIB300					
2. printed black						Creation Date		Number		Revision	
3. tolerance: ± .13						12-21-2009		P516-097		F	
4. see sheet 2 for artwork						Created By		Activity			
5. printed in country may vary						P. Bockelman		3899 Hancock Expwy			
6. drawings not to scale						Software: InDesign CS6		Security, CO 80911		© Allegion 2014	